



PART NO: MX533346
PRINT DATE:

ADT
**Shop
Manual**

ENGLISH

DA40-5

Doosan Infracore Norway



Contents

0 General

1 Engine

2 Transmission

3 Driveline

4 Lubrication

5 Hydraulic

6 Electrical system

7 Front frame

8 Rear frame

9 Option

10 Error codes list

Chapter 0

General instructions

Index

| | |
|--|----|
| Foreword | 4 |
| Doosan ADT Payload Policy | 5 |
| Torque limit table | 6 |
| Types of sealing-/locking compounds and lubricants | 7 |
| Safety in workshop..... | 8 |
| Working on machine | 9 |
| Personal Protective Equipment (PPE) | 12 |
| Vibration | 13 |
| Injurious noise | 14 |
| Organic solvent | 15 |
| Fueling..... | 16 |
| Fire and Explosion Prevention..... | 16 |
| Fire and explosion risks | 18 |
| In case of Fire | 19 |
| Coolant | 20 |
| Refrigerant | 21 |
| Air pollution | 22 |
| Operation in extreme conditions | 23 |
| Liquid or gas under high pressure | 27 |
| Asbestos | 28 |
| Lead | 28 |
| Battery hazard prevention | 29 |
| Disposal of hazardous materials | 31 |
| Jacked up vehicle or bodywork | 32 |
| Crushing and Cutting Danger | 32 |
| Heavy units | 33 |
| More than one person working with the same object..... | 34 |
| Involuntary start of electric motors etc. | 34 |
| Rotating parts | 35 |
| Splinters, flying object When using certain tools..... | 36 |
| Springs under load..... | 37 |
| Precautions for disassembly and assembly | 38 |

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**