

Illustration 1

g01325524

1. Remove bolts (1) and valve (2).

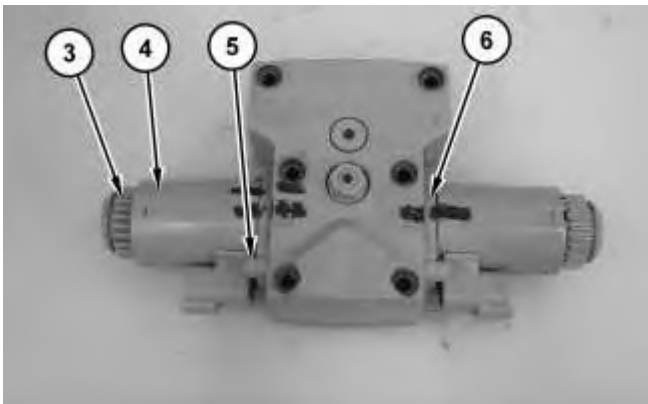


Illustration 2

g01325526

2. Remove nut (3), the O-ring seal, coil (4), bolts (5), and cartridge (6).

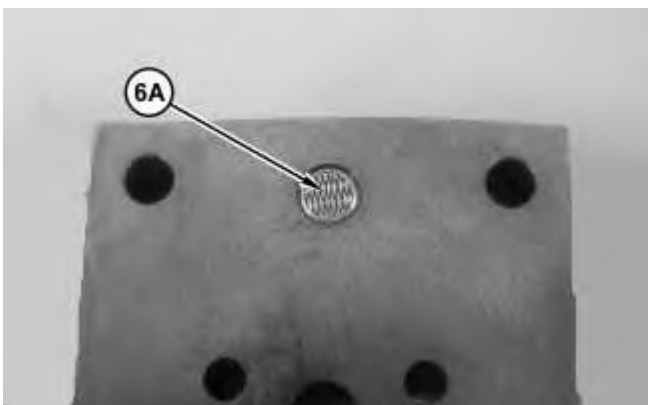


Illustration 3

g01377500

3. Remove screen (6A).
-

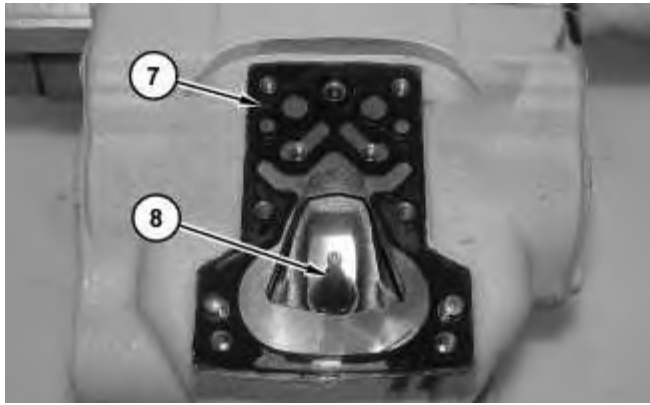


Illustration 4

g01325527

4. Remove gasket (7) and control arm (8).

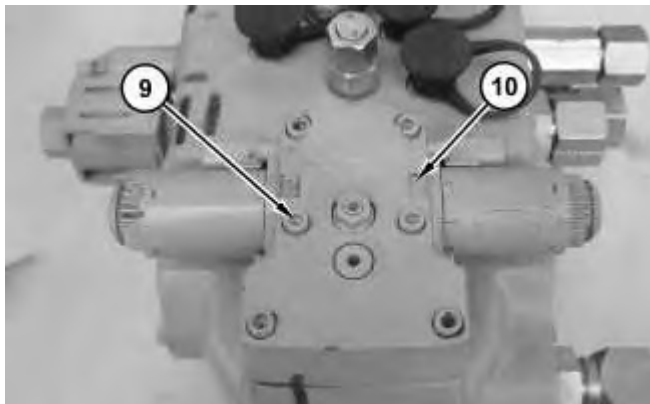


Illustration 5

g01325534

5. Remove bolts (9) and valve (10).
6. Repeat Steps 2 through Steps 4 for valve (10).

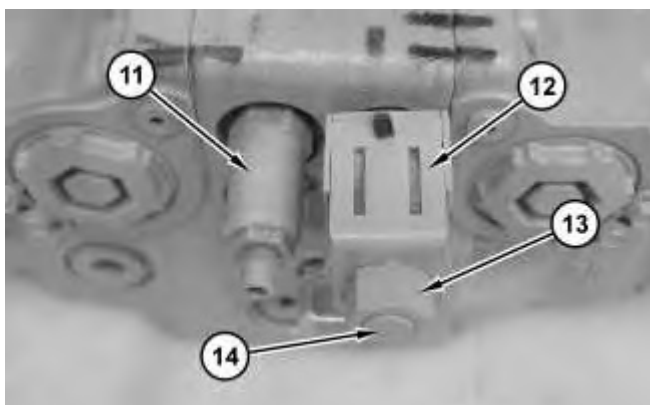


Illustration 6

g01325536

7. Remove nut (13), coil (12), and cartridge (14).
8. Remove valve (11).

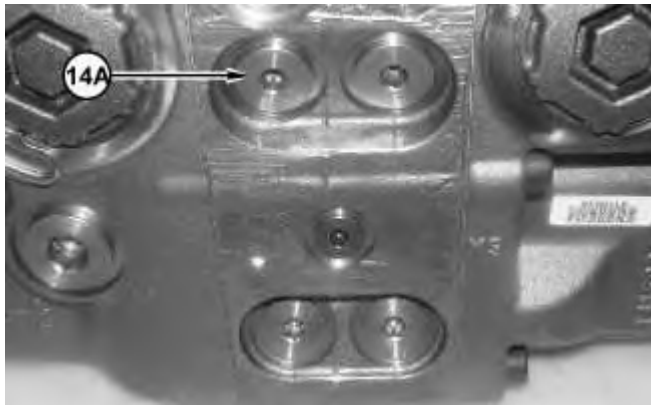


Illustration 7

g01377504

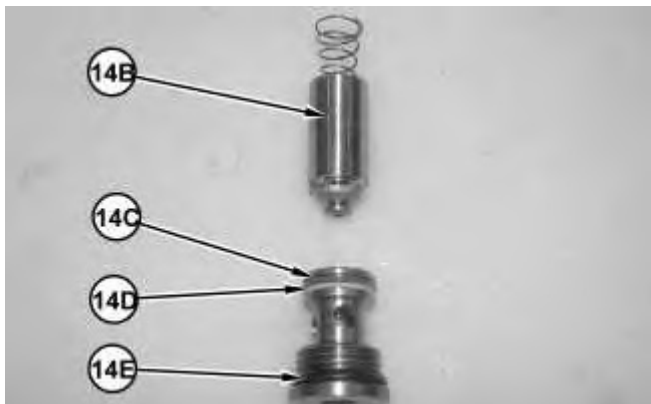


Illustration 8

g01377507

9. Remove plugs (14A), O-ring seal (14E), O-ring seal (14C), backup ring (14D) and crossover relief valves (14B), from the head.

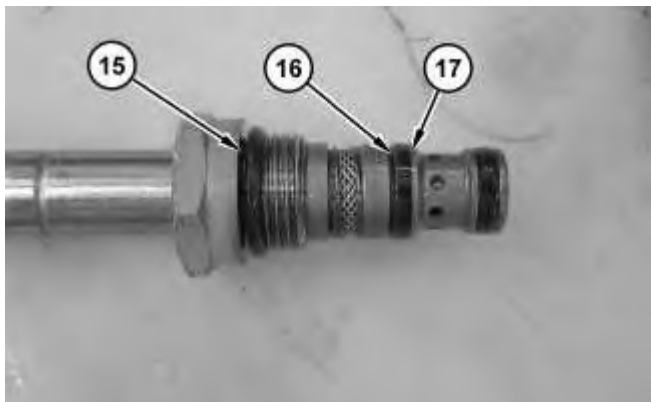


Illustration 9

g01325538

10. Remove O-ring seal (15), backup rings (16), and O-ring seals (17).
-

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**