

Product: SKID STEER LOADER

Model: 262D SKID STEER LOADER DTB

Configuration: 262D Skid Steer Loader DTB00001-UP (MACHINE) POWERED BY C3.3B Engine

## Disassembly and Assembly

**259D, 279D, 289D, 299D and 299D XHP Compact Track Loaders, 257D, 277D, 287D, 297D and 297D XHP Multi Terrain Loaders and 236D, 242D, 246D, 262D, 272D and 272D XHP Skid Steer Loaders Power Train**

Media Number -UENR3730-09

Publication Date -01/05/2015

Date Updated -13/08/2018

i06659865

## Piston Pump (Hydrostatic) - Disassemble

SMCS - 5070-015-H7


### Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1P-0510	Driver Gp	1
B	9S-9152	Puller Attachment As.	1
C	0S-1527	Bolt	1
	2J-3506	Full Nut	1
	8T-4122	Hard Washer	2
D	1P-1859	Retaining Ring Pliers	1

#### Start By:

- a. Remove the pump. Refer to Disassembly and Assembly, "Piston Pump (Hydrostatic) - Remove".
-

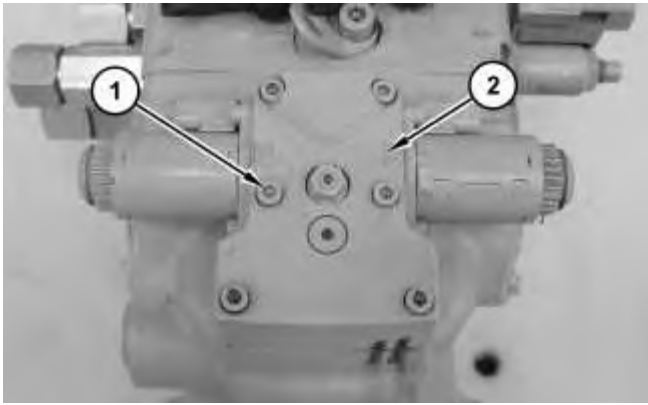


---

Illustration 1

g01325524

1. Remove bolts (1) and valve (2).

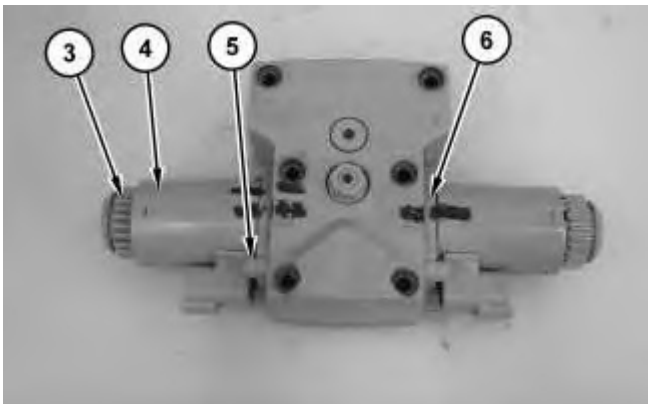


---

Illustration 2

g01325526

2. Remove nut (3), the O-ring seal, coil (4), bolts (5), and cartridge (6).

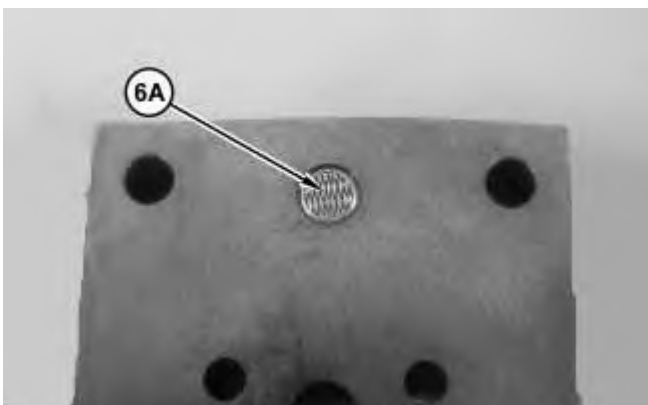

---

Illustration 3

g01377500

3. Remove screen (6A).
-

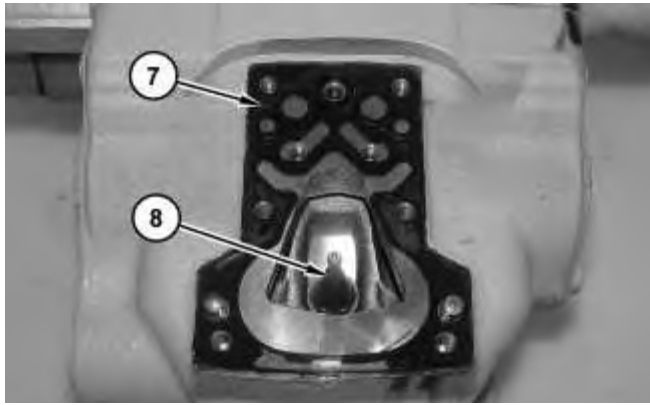


Illustration 4

g01325527

4. Remove gasket (7) and control arm (8).

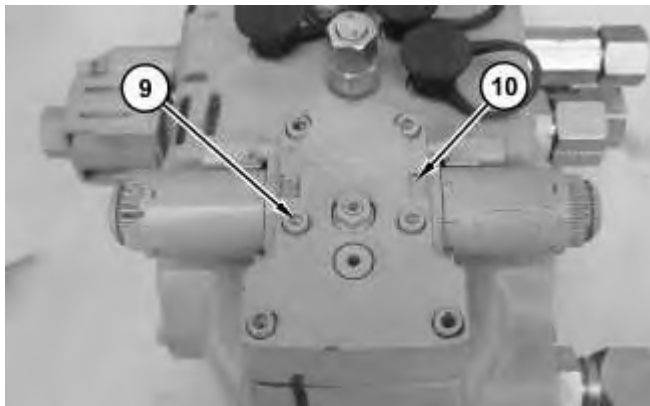


Illustration 5

g01325534

5. Remove bolts (9) and valve (10).
6. Repeat Steps 2 through Steps 4 for valve (10).

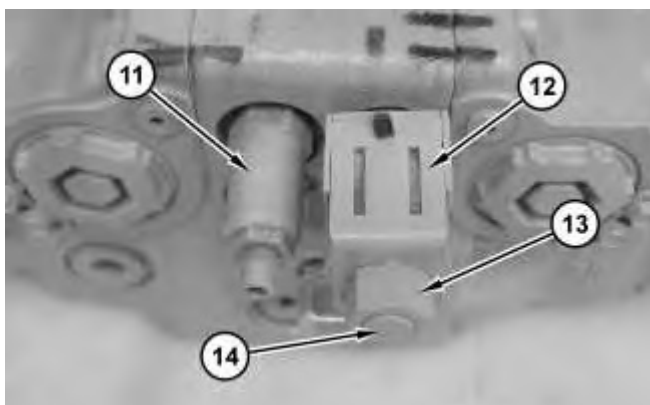


Illustration 6

g01325536

7. Remove nut (13), coil (12), and cartridge (14).
8. Remove valve (11).

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**