Model: 416E BACKHOE LOADER CBD

Configuration: 416E Backhoe Loader Single Tilt Center Pivot CBD00001-UP (MACHINE) POWERED BY 3054C Engine

## **Disassembly and Assembly**

414E, 416E, 420E, 422E, 428E, 430E, 432E, 434E, 442E and 444E Backhoe Loaders Power Train

Media Number -RENR6475-13

Publication Date -01/07/2017

Date Updated -13/07/2017

i02557467

## Transmission (Power Shift) - Disassemble

**SMCS -** 3030-015-PM; 3066-015

## **Disassembly Procedure**

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1U-7502	Transmission Repair Stand	1
В	138-7575	Link Bracket	1
С	152-7085(1)	Transmission Shaft Handler	1
	189-0409	Shackle As	1
D	1P-0074	Slide Hammer Puller Gp	1
E	8H-0663	Bearing Puller Assembly	1
	6V-3010	Puller Gp	1
	126-7177	Puller Leg	1
F	1U-6405	Three Jaw Puller	1
G	152-7055	Spring Compressor	1
Н	2P-8312	Retaining Ring Pliers	1

<sup>(1)</sup> CE Compliant

## **Start By:**

a. Remove the transmission. Refer to Disassembly and Assembly, "Transmission (Power Shift) - Remove".

**Note:** The transmission will be disassembled in major components. The major components will then be disassembled.

**Note:** Cleanliness is an important factor. Before the disassembly procedure, the exterior of the component should be thoroughly cleaned. This will help to prevent dirt from entering the internal mechanism.

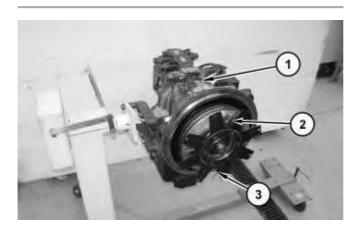


Illustration 1

g01244665

1. Use a suitable lifting device in order to mount transmission assembly (1) onto Tooling (A). The weight of transmission assembly (1) is approximately 255 kg (562 lb). Remove cable strap (3) and remove torque converter (2).

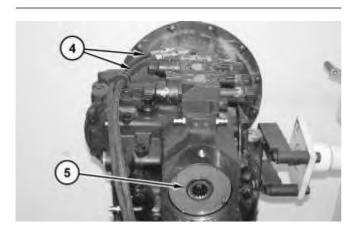


Illustration 2

g01244668

2. Remove hose assemblies (4) and coupler (5).

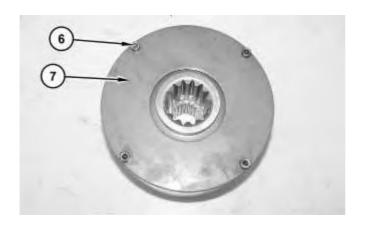


Illustration 3 g01244669

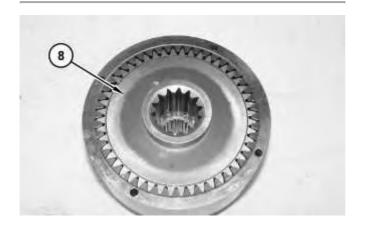


Illustration 4 g01244704

3. Remove bolts (6) and plate (7). Remove gear (8).

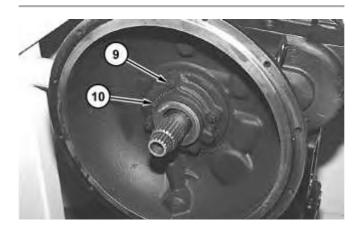


Illustration 5 g01245246

4. Remove bolts (9) and pump group (10).

Thank you very much for your reading. Please click here to buy After you pay. Then, you can download the complete manual instantly.

No waiting.