

1. Remove bolts (1) and valve (2).

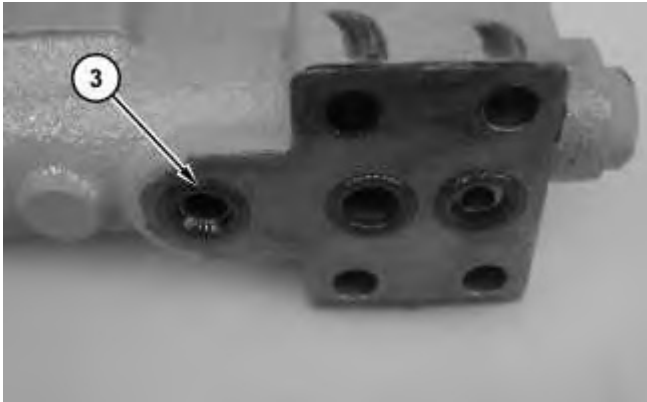


Illustration 2

g01329900

2. Remove O-ring seals (3).

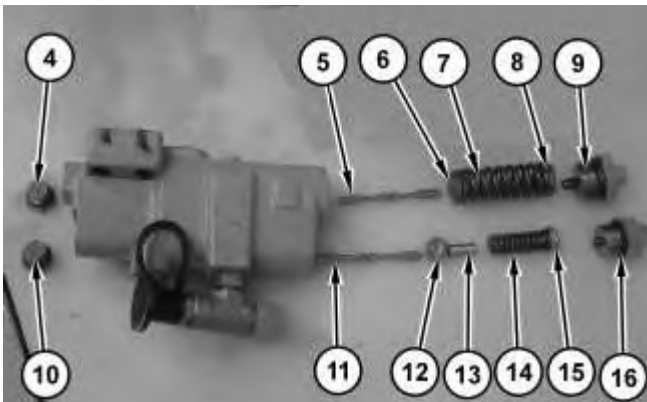


Illustration 3

g01329901



WARNING

Personal injury can result from being struck by parts propelled by a released spring force.

Make sure to wear all necessary protective equipment.

Follow the recommended procedure and use all recommended tooling to release the spring force.

3. Remove plug (9), the O-ring seal, retainer (8), spring (7), retainer (6), spool (5), plug (4), and the O-ring seal.

4. Remove plug (16), the O-ring seal, retainer (15), spring (14), rod (13), retainer (12), spool (11), plug (10), and the O-ring seal.

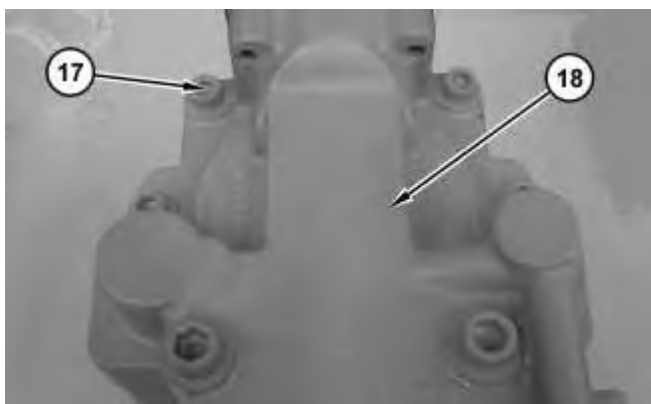


Illustration 4

g01329902



Personal injury can result from being struck by parts propelled by a released spring force.

Make sure to wear all necessary protective equipment.

Follow the recommended procedure and use all recommended tooling to release the spring force.

5. Remove bolts (17) and head (18).

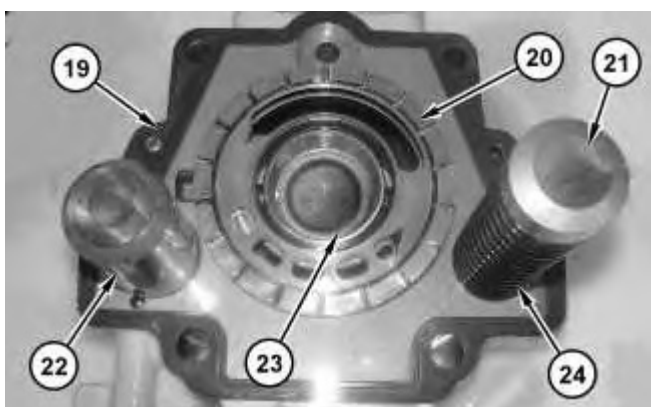


Illustration 5

g01329908

6. Remove piston (22), piston (21), spring (24), gasket (19), port plate (20), and bearing cup (23).
-



Illustration 6

g01329909

7. Remove bearing cone (25).

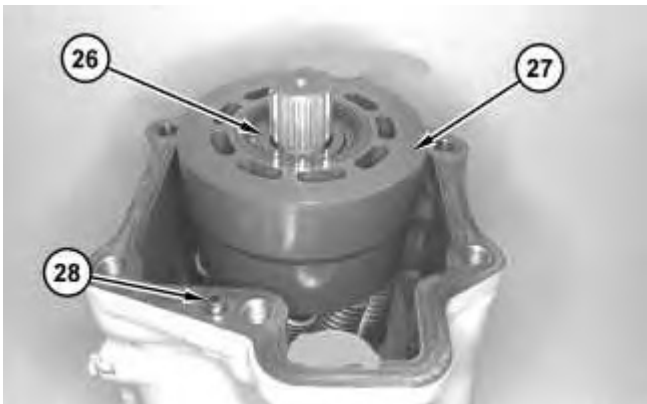


Illustration 7

g01329910

8. Remove shim (26), barrel (27), and dowel (28).

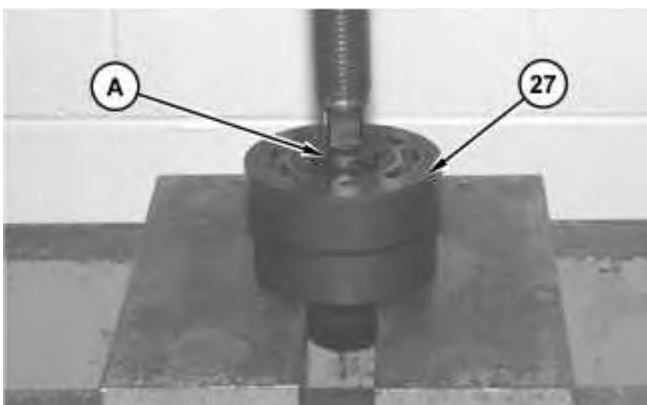


Illustration 8

g01329911

Hello.

Thanks a lot for buying from us.

Please click here and then download.

If you need to unzip anything here are the two recommended software.

7-Zip (Free): <http://www.7-zip.org/download.html>

Winzip (Free Trial): <http://www.winzip.com/downwz.htm> or

If you have any difficulty with this manual, please contact us right away.

We will reply as soon as possible. --manualonline668@gmail.com

Hope you have a great day.

Best Regards