

Product: BACKHOE LOADER

Model: 442D BACKHOE LOADER BRG

Configuration: 442D Backhoe Loader BRG00001-00827 (MACHINE) POWERED BY 3054 Engine

Disassembly and Assembly

416D, 420D, 424D, 428D, 430D, 432D, 438D and 442D Backhoe Loaders Power Train

Media Number -REN3578-12

Publication Date -01/04/2010

Date Updated -13/04/2010

i01493758

Drive and Steering Axle (Rear) - Remove

SMCS - 3020-011-RE

Removal Procedure

Start By:

- A. Remove the rear tires and wheels. See Disassembly and Assembly, "Tires & Wheels (Rear) - Remove and Install".

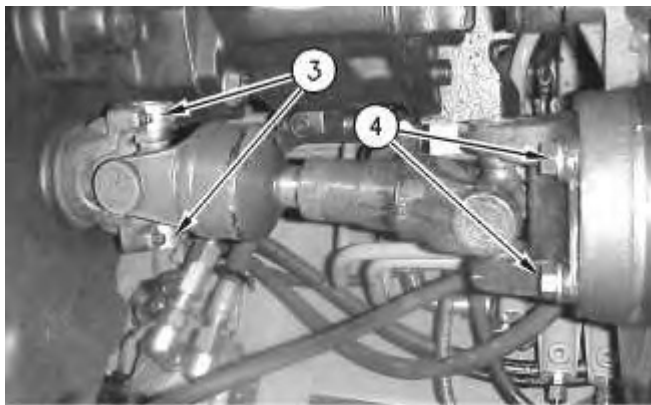


Illustration 1

g00779594

1. Remove two brackets (3) for the front of the drive shaft. Remove four bolts (4) from the rear of the drive shaft.
-

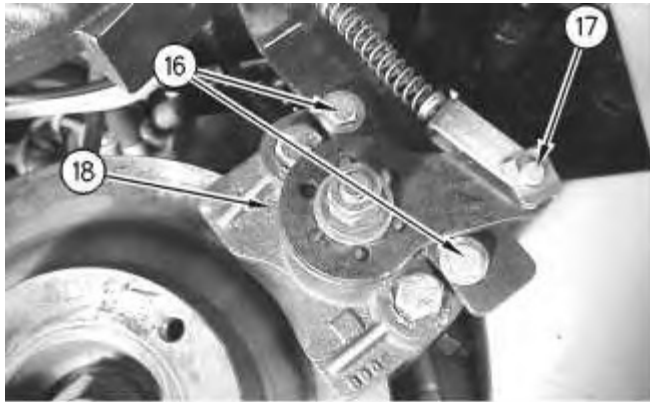


Illustration 2

g00775573

2. Remove 2 bolts (16) and pin (17) in order to remove parking brake assembly (18) .

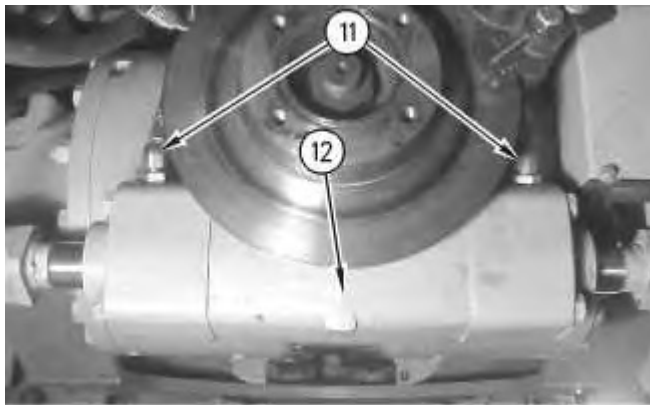


Illustration 3

g00775540

3. Remove 2 hydraulic hoses (11) from rear steering cylinder (12) .

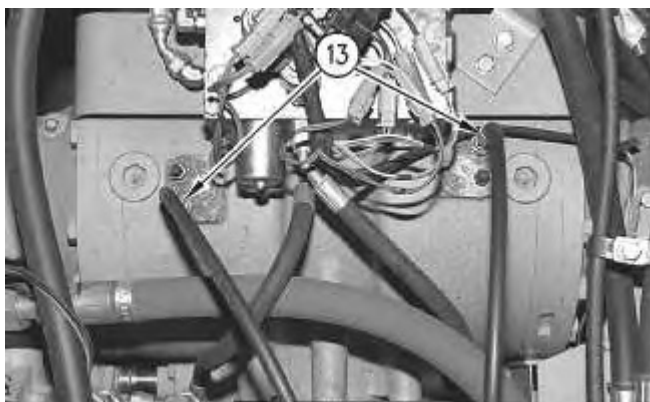


Illustration 4

g00775484

4. Remove 2 hydraulic hoses (13) from the top of the axle.

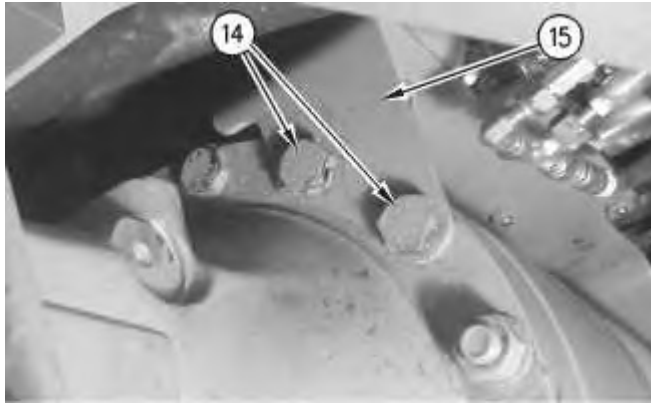


Illustration 5

g00775534

5. Remove 2 bolts (14) from bracket (15) for the manifold. Repeat for the other side of the bracket for the manifold.

Note: Be sure to support the manifold and the bracket.



Illustration 6

g00775570

6. Disconnect the wire for the sensor for the rear steer.

Note: The wire is located in the area of the pointer.

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**