

Illustration 1

g00613041

1. Disconnect the governor control cable.
2. Remove oil tube assembly (1). Remove tube assembly (2) and tube assembly for fuel ratio control (3), if equipped. Plug and cap all connections.



Illustration 2

g00613071

3. Remove clip (4).
-

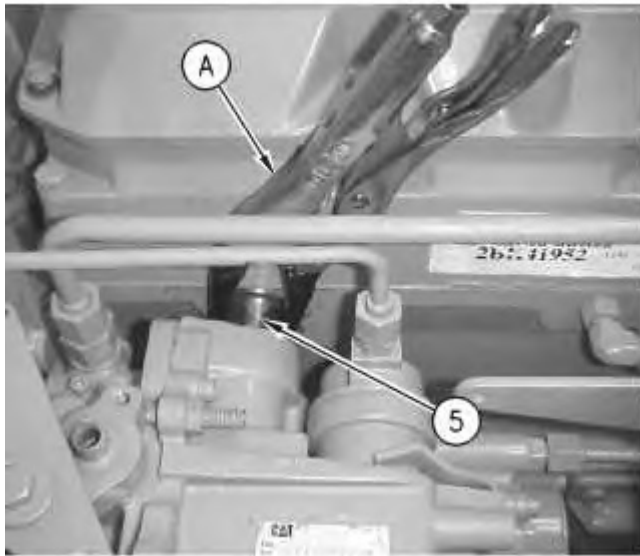


Illustration 3

g00655975

4. Use Tooling (A) to slide tube assembly (5) into the cylinder head.

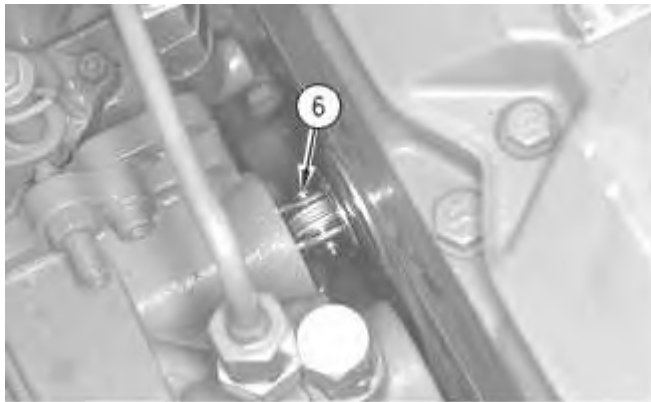


Illustration 4

g00613149

5. Remove the clip and use Tooling (A) to remove the clevis pin (6).

Note: Clevis pin (6) must stay with the governor in order to be adjusted.

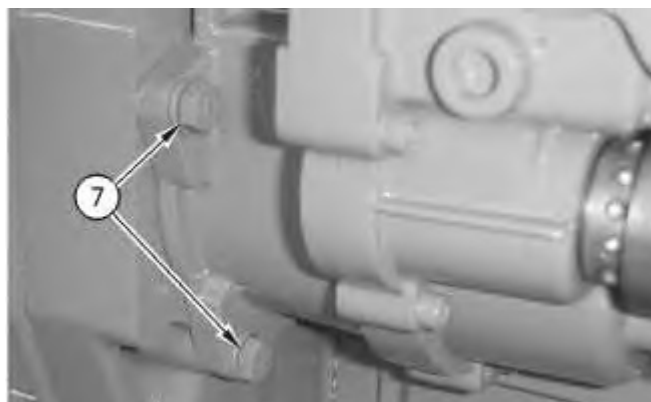


Illustration 5

g00613563

6. Remove bolts (7) and the washers that hold the governor in position.



Illustration 6

g00673182

7. Remove the governor from the engine.

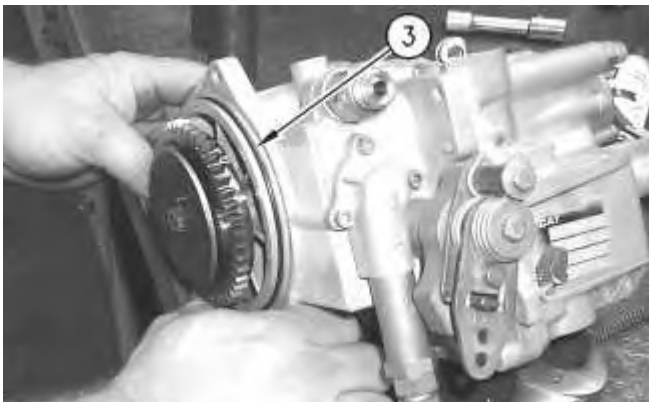


Illustration 7

g00673180

8. Remove O-ring seal (3) on the governor.

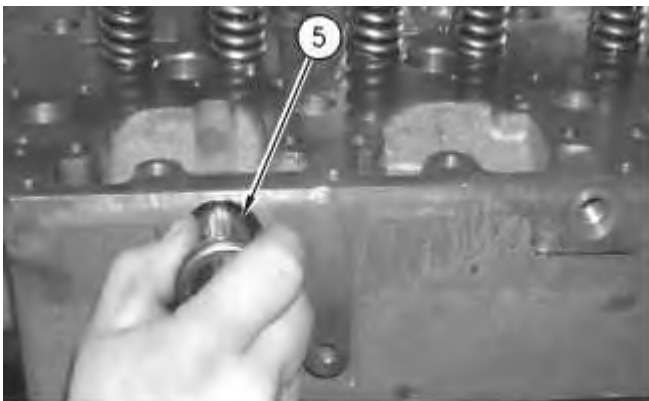


Illustration 8

g00672742

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**