

Section 20 ENGINE

Group 5 GENERAL INFORMATION

KOHLER ENGINE FOR 110 TRACTOR

TABLE OF CONTENTS

	Page		Page
110 TRACTOR			
GROUP 5 - GENERAL INFORMATION - KOHLER ENGINE FOR 110 TRACTOR		Specifications, K161S and K181S Kohl- er Engines	10-11
Description	5-4	Table of Clearances	10-11
Engine Analysis	5-7	Torque for Hardware	10-11
Preliminary Engine Checks	5-7	Tune-Up Data	10-11
Preliminary Engine Tests	5-7	Special Tools	10-12
Diagnosing Malfunctions	5-9	GROUP 15 - PISTON, CRANKSHAFT, MAIN BEARINGS AND FLYWHEEL - KOHLER ENGINE FOR 110 TRACTOR	
GROUP 10 - CYLINDER HEAD, VALVES AND BREATHER - KOHLER ENGINE FOR 110 TRACTOR		General Information	15-1
General Information	10-1	Repair	15-2
Valve Analysis	10-2	Removing Engine from Tractor	15-3
Repair	10-3	Disassembling Engine	15-3
Removing Valves	10-4	Removing Piston Rings	15-4
Inspecting Cylinder Head	10-4	Piston Ring Analysis	15-4
Inspecting Breather	10-5	Inspecting Piston	15-6
Testing Valve Springs	10-5	Piston Analysis	15-7
Inspecting Valves	10-5	Inspecting Crankshaft	15-9
Reconditioning or Replacing Valves	10-6	Connecting Rod and Cap Analysis	15-9
Replacing Valve Guides	10-7	Inspecting and Repairing Block	15-10
Replacing Exhaust Valve Insert	10-8	Deglazing Cylinder Bore	15-11
Installing Intake Valve Insert	10-8	Boring Cylinder Block	15-11
Checking Valve Clearance	10-8	Inspecting Camshaft	15-11
Installation	10-9	Inspecting Main Bearings	15-11
Installing Valve Springs, Retainers and Keepers	10-9	Bearing Analysis	15-11
Assembling Breather	10-9	Installation	15-13
Installing Cylinder Head	10-9	Installing Crankshaft	15-13
Installing Carburetor	10-9	Assembling Bearing, Bearing Plate and Oil Seals	15-13
Installing Hydraulic Lift Assembly	10-10	Assembling Connecting Rod and Piston	15-14
Installing Muffler	10-10	Checking Piston Ring End Gap	15-15
Checking Air Filter	10-10	Installing Rings and Piston	15-15
Adjustments	10-10	Attaching Rod to Crankshaft	15-16
Hydraulic Pump Drive Belt Tension	10-10	Installing Oil Pan on Block	15-16
Hydraulic Lift Lever	10-10	Installing Flywheel	15-16
Spark Plug Gap	10-10	Installing Shrouding	15-17
Breaker Point Gap	10-10	Installing Exterior Components	15-17

TABLE OF CONTENTS—CONTINUED

	Page		Page
Specifications, K161S and K181S Kohler Engines	15-18	Repair	30-3
Table of Clearances	15-18	Removing Valves	30-4
Torques for Hardware	15-18	Inspecting Cylinder Head	30-4
Tune-Up Data	15-18	Inspecting Breather	30-5
Special Tools	15-19	Testing Valve Springs	30-5
GROUP 20 - CAMSHAFT, TAPPETS AND GOVERNOR - KOHLER ENGINE FOR 110 TRACTOR		Inspecting Valves	30-5
General Information	20-1	Reconditioning or Replacing Valves	30-6
Spark Advance Camshaft	20-2	Reaming Valve Guides	30-7
Automatic Compression Release Camshaft	20-2	Removing and Installing Exhaust Valve Seat Insert	30-8
Repair	20-3	Checking Valve Clearance	30-8
Removing Camshaft and Tappets	20-3	Installation	
Removing Governor	20-4	Installing Valve Springs, Retainers and Keeper Pins	30-9
Inspecting Camshaft	20-4	Installing Breather	30-9
Inspecting Governor Gear	20-4	Installing Cylinder Head	30-9
Installation	20-4	Installing Carburetor	30-10
Installing Governor	20-4	Installing Hydraulic Lift Assembly	30-10
Assembling Spark Advance Camshaft	20-5	Installing Muffler	30-10
Installing Camshaft	20-5	Checking Air Filter	30-10
Installing Governor Arm	20-6	Adjustments	
Connecting Governor Arm to Carburetor	20-6	Hydraulic Pump Drive Belt Tension	30-10
Installing Engine in Tractor	20-6	Hydraulic Lift Lever	30-10
Adjustment	20-8	Spark Plug Gap	30-10
Governor Speed Adjustment	20-8	Breaker Point Gap	30-10
Specifications, K161S and K181S Kohler Engines	20-8	Specifications, HH100 Tecumseh Engine	30-11
Table of Engine Clearances	20-8	Table of Clearances	30-11
Torque for Hardware	20-8	Torque for Hardware	30-11
Tune-Up	20-8	Tune-Up Data	30-11
Special Tools	20-8	Special Tools	30-12
112 TRACTOR		GROUP 35 - PISTON, CRANKSHAFT, MAIN BEARINGS AND FLYWHEEL - TECUMSEH ENGINE FOR 112 TRACTOR	
GROUP 25 - GENERAL INFORMATION - TECUMSEH ENGINE FOR 112 TRACTOR		General Information	35-1
Description	25-1	Repair	35-2
Engine Analysis	25-2	Removing Engine from Tractor	35-3
Preliminary Engine Checks	25-2	Disassembling Engine	35-3
Preliminary Engine Tests	25-2	Removing Cylinder Ridge	35-3
Diagnosing Malfunctions	25-4	Pulling Flywheel	35-3
GROUP 30 - CYLINDER HEAD, VALVES AND BREATHER TECUMSEH ENGINE FOR 112 TRACTOR		Removing Cylinder Cover	35-3
General Information	30-1	Removing Crankshaft	35-4
Valve Analysis	30-2	Removing Piston Rings	35-4
		Piston Ring Analysis	35-4
		Inspecting Piston	35-6
		Piston Analysis	35-8
		Inspecting Crankshaft	35-10
		Connecting Rod and Cap Analysis	35-10
		Inspecting and Repairing Block	35-11
		Deglazing Cylinder Bore	35-11
		Boring Cylinder Block	35-11

	Page
Inspecting Camshaft	35-11
Inspecting Main Bearings	35-12
Bearing Analysis	35-12
Installation	
Installing Crankshaft	35-13
Assembling Connecting Rod and Piston	35-13
Checking Piston Ring End Gap	35-13
Installing Rings on Piston	35-14
Installing Connecting Rod and Piston	35-14
Attaching Rod to Crankshaft	35-15
Installing Tappets and Camshaft	35-15
Installing Cylinder Cover	35-15
Checking Crankshaft End Clearance	35-16
Installing Seals	35-17
Installing Flywheel	35-17
Installing Shrouding	35-17
Installing External Components	35-17
Specifications, HH100 Tecumseh En- gine	35-18
Torque for Hardware	35-18
Table of Engine Clearances	35-18
Special Tools	35-19
Special Tools	35-19

GROUP 40 - CAMSHAFT, TAPPETS AND GOVERNOR - TECUMSEH EN- GINE FOR 112 TRACTOR		Page
General Information		40-1
Repair		40-3
Removing Camshaft and Tappets		40-3
Removing Governor Gear		40-3
Removing Governor Rod		40-4
Inspecting Camshaft		40-4
Inspecting Governor Gear		40-4
Inspecting Governor Shaft		40-4
Inspecting Governor Rod		40-5
Installation		40-5
Installing Governor Shaft		40-5
Replacing Governor Rod Bearing		40-5
Installing Governor Gear and Spool		40-5
Installing Breaker Cam on Camshaft		40-6
Installing Tappets and Camshaft		40-6
Installing Governor Rod and Lever		40-6
Connecting Governor Lever		40-6
Adjustment		40-7
Adjusting Governor Speed		40-7
Adjusting Governor Stop Screw		40-7
Adjusting Cable and Conduit		40-7
Specifications		40-7

TNEWCAMP MANUALS

DESCRIPTION

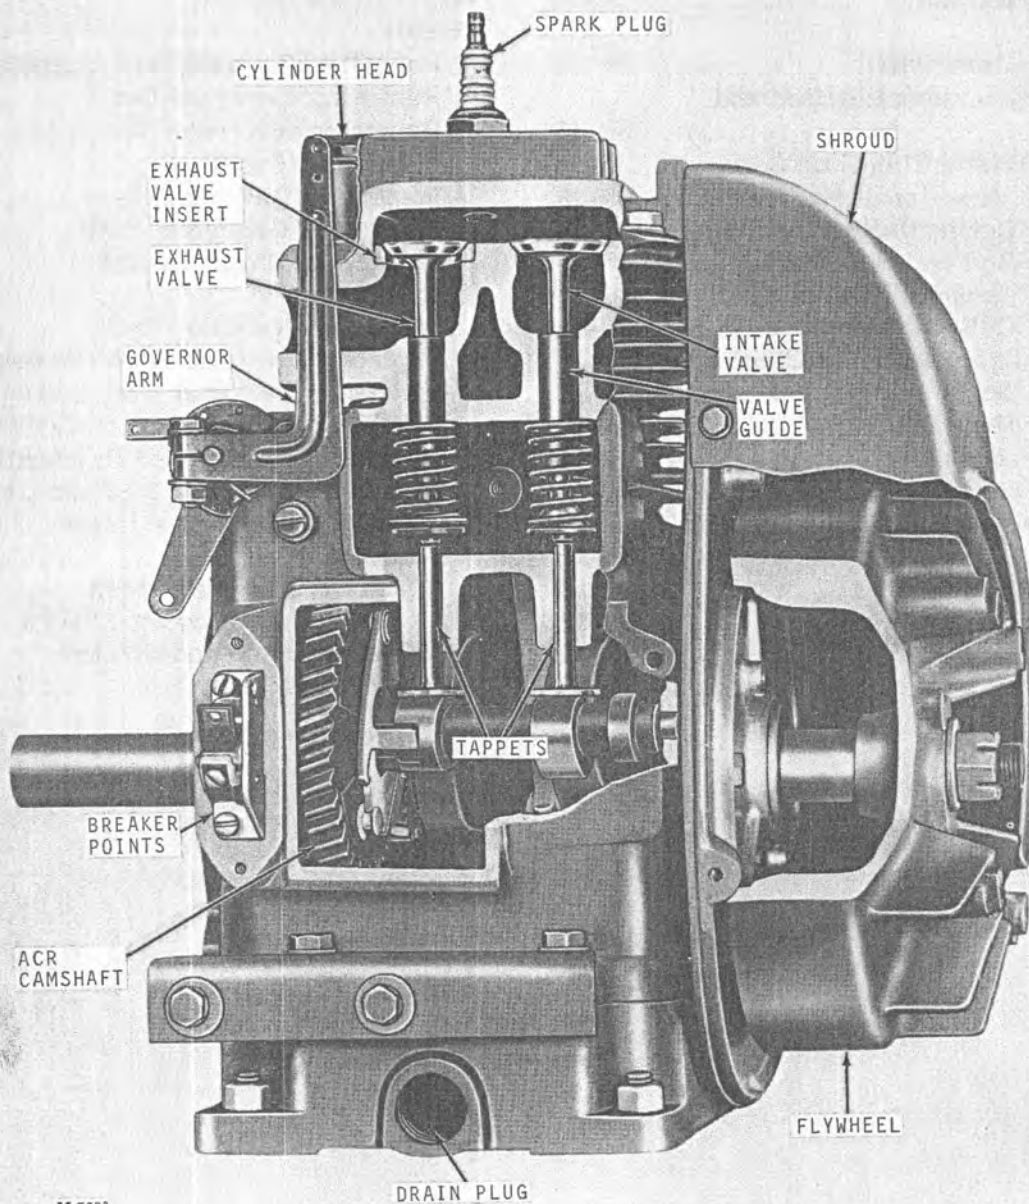


Fig. 1-Cutaway View of Kohler K181S Engine Showing Valves and Tappets

Both K161S and K181S engines used in 110 Tractors are Kohler four cycle, internal combustion engines. They have cast iron blocks, and are L-head, single cylinder with large bore - short stroke design.

Both engines are air cooled with anti-friction ball bearings, oil bath lubrication and have internal flyweight governor.

Detailed specifications for each engine are covered in Section 10, "General", and at the end of each group in this section.

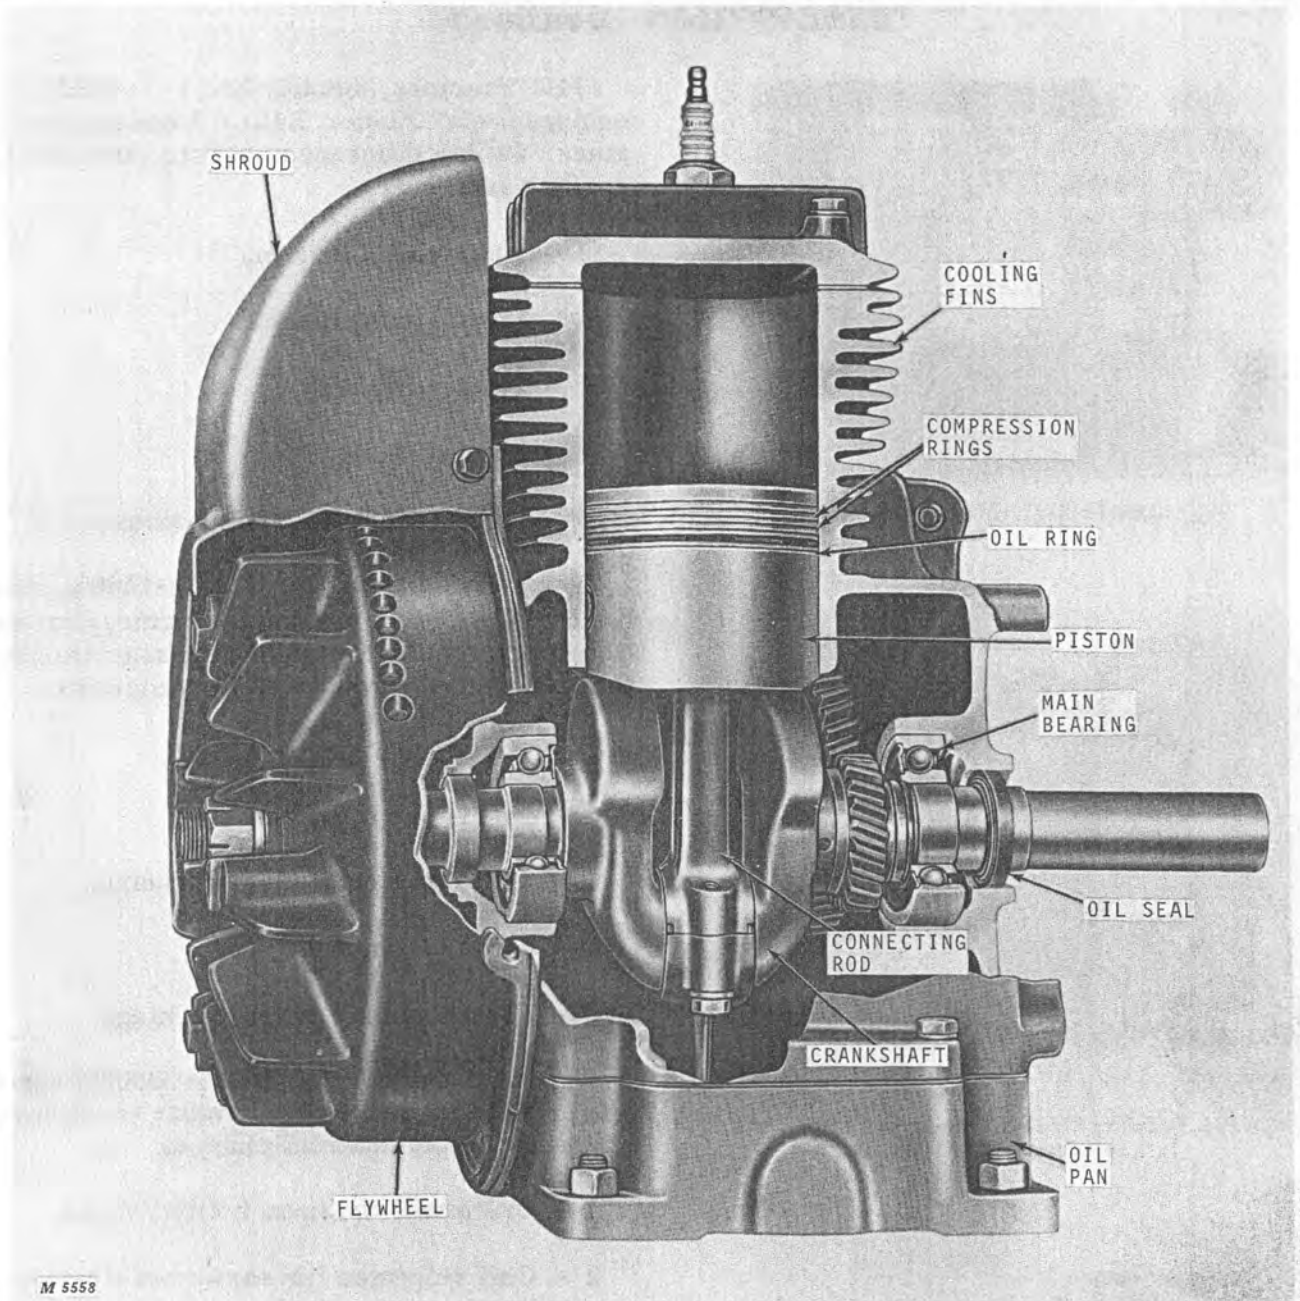


Fig. 2-Cutaway View of Kohler K181S Engine Showing Piston, Crankshaft and Bearings

The maximum brake horsepower curve shows the performance of laboratory engines equipped with standard air cleaner, muffler and flywheel corrected to sea level barometer and with free air temperature of 60° F. Horsepower decreases 3-1/2% for each 1000 feet above sea level, and 1% for each 10° F. above 60° F.

Horsepower ratings are established in accordance with Society of Automotive Engineers - Small Engine Test Code - J 607.

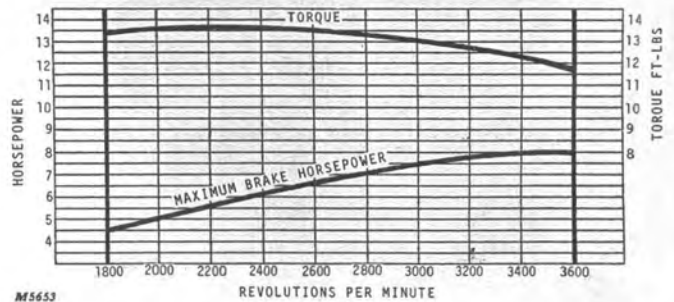


Fig. 3-Torque-Horsepower Chart

DESCRIPTION—Continued

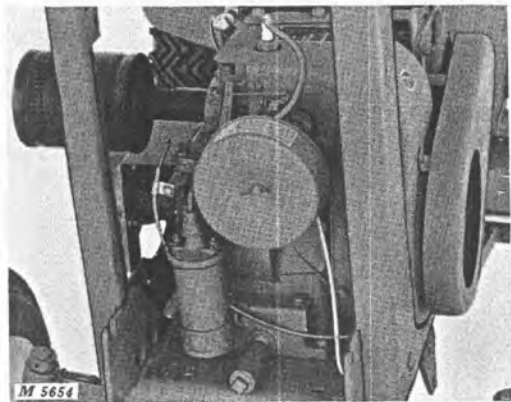


Fig. 4—Kohler K161S 7 Horsepower Engine
Serial No. (-3550)

110 Tractors, Serial No. (- 3550), are equipped with Kohler K161S 7 Horsepower engines. Visible differences between this and later engines are:

- 1 - Air cleaner location.
- 2 - Screw-type dipstick.
- 3 - Blower housing.
- 4 - Muffler design.
- 5 - Engine identification markings.

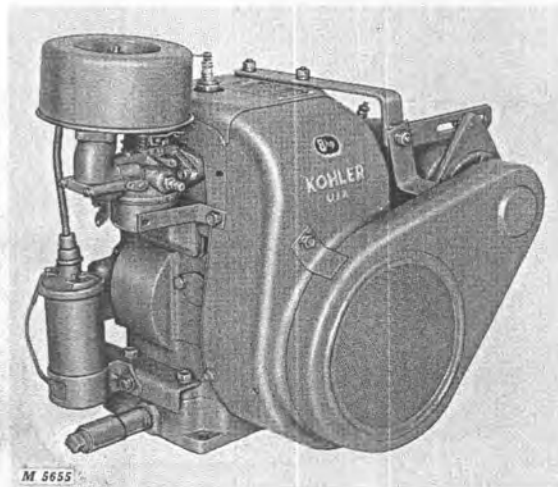


Fig. 5—Kohler K181S 8 Horsepower Engine
Serial No. (3551-15000)

Tractors, Serial No. (3551-15000), used Kohler K181S 8 Horsepower engines. In addition to mechanical changes necessary to obtain the extra horsepower, visible changes are:

- 1 - Air cleaner position.
- 2 - Push-type dipstick.
- 3 - Extra screen in blower housing.
- 4 - Improved muffler.
- 5 - Engine identification markings.

Tractors, Serial No. (15001-100000) use the Kohler K181S 8 Horsepower engine which has the following visible external changes:

- 1 - Crankcase drain on bottom of pan.
- 2 - Coil relocated for easier point access.

Internal changes on engines for tractors, Serial No. (40001-100000), include:

- 1 - Automatic compression release camshaft (ACR).
- 2 - Exhaust valve rotators for tractors equipped with hydraulic lift.
- 3 - Studs are provided in the engine head to carry the hydraulic pump and valve on 110H Tractors.



Fig. 6—Kohler K181S 8 Horsepower Engine
Serial No. (15001-100000)



Suggest:

If the above button click is invalid.

Please download this document

first, and then click the above link

to download the complete manual.

Thank you so much for reading