


### COMBINE IDENTIFICATION NUMBER

Located on left-hand side above rear axle.

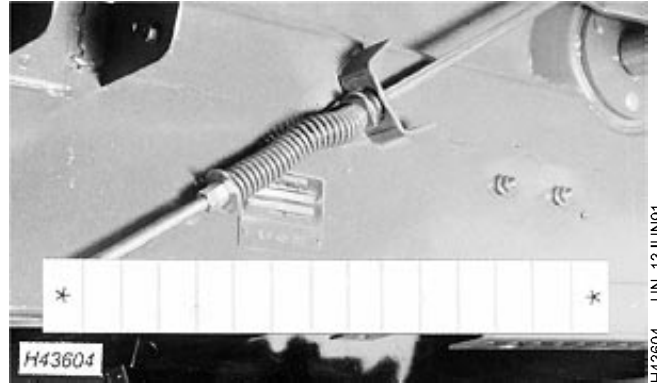


-UN-13JUN91  
H43604

HX,1543,10,A -19-05MAY93-1/1

### ENGINE SERIAL NUMBER

The engine serial number is located on rear side of engine.

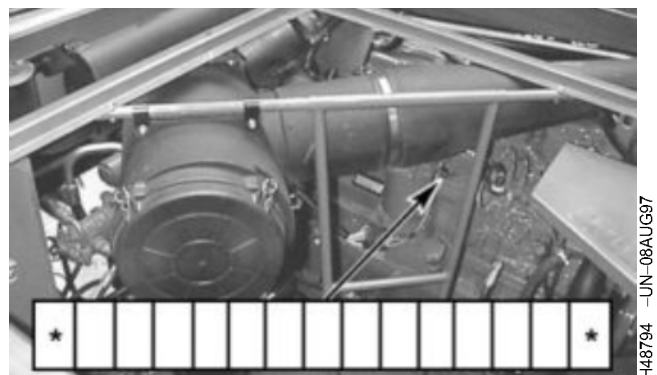


-UN-08AUG97  
H48794

HX,10,SD64 -19-21NOV97-1/1

### ENGINE GEARCASE

Located on the back side of gearcase housing.

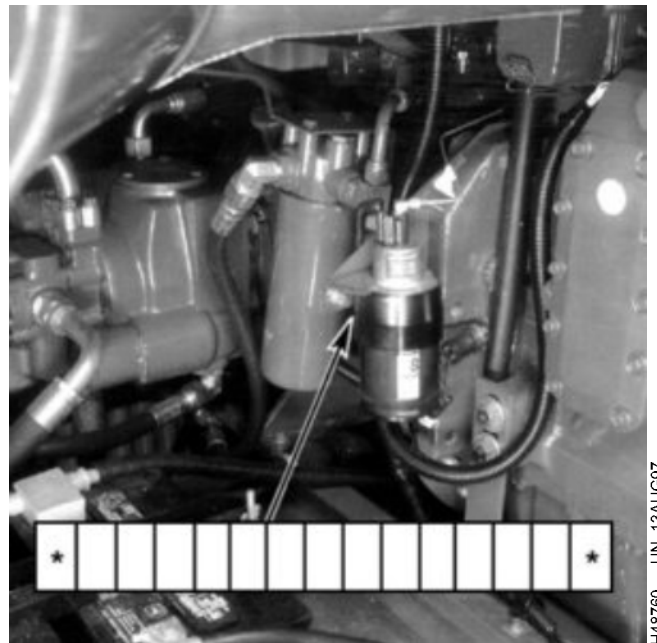


-UN-13AUG97  
H48760

1702,DV1038 -19-10JUL97-1/1

10  
10  
2

### HYDROSTATIC DRIVE UNIT PUMP


Located on the side of the pump section.

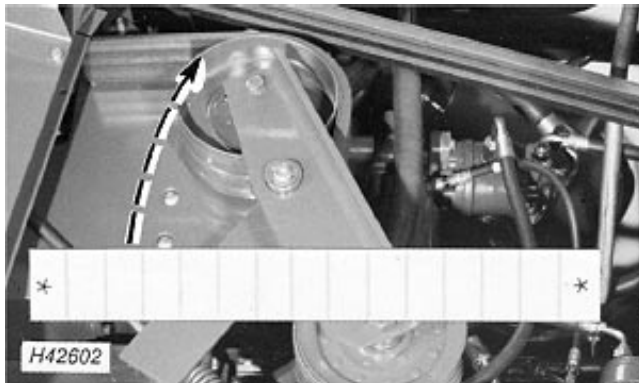

HX.1543.10,C -19-02MAR93-1/1

### HYDROSTATIC DRIVE UNIT MOTOR


Located on top of the motor section.

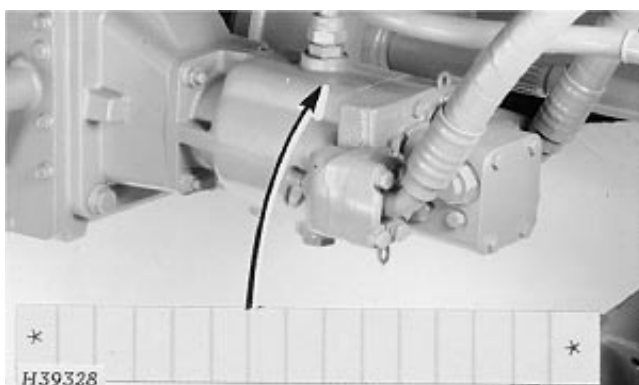

HX.1543.10,D -19-02MAR93-1/1

### LEFT CAM LOBE FOUR-WHEEL DRIVE MOTOR


Located on top of motor.

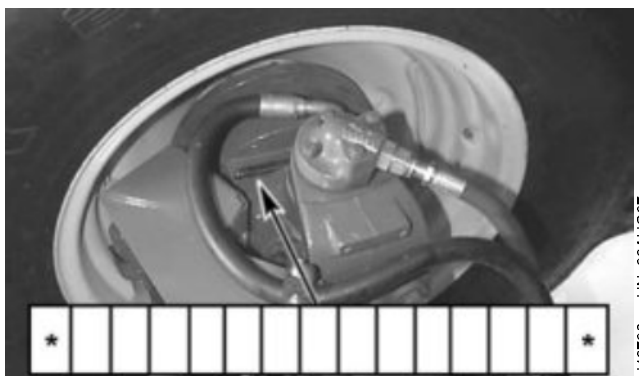

1702.DV1037 -19-10JUL97-1/1

### RIGHT CAM LOBE FOUR-WHEEL DRIVE MOTOR

Located on top of motor.

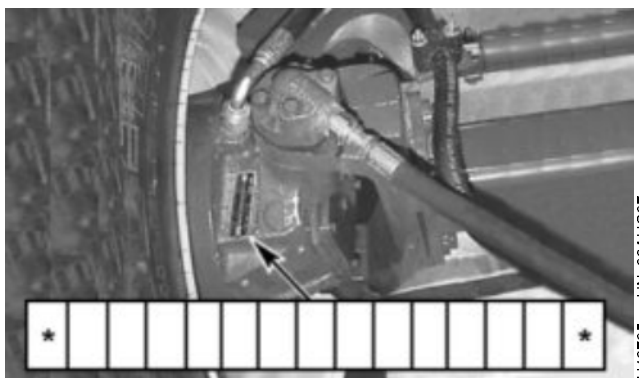

1702.DV1036 -19-10JUL97-1/1

**TRANSMISSION**

Located on right hand-side of transmission housing.



H47492 -UN-14-JUN96

1402,210,DV146 -19-17JUL97-1/1



**Suggest:**

**If the above button click is invalid.**

**Please download this document**

**first, and then click the above link**

**to download the complete manual.**

**Thank you so much for reading**