

Contents

SECTION 05—SAFETY

Group 05—Safety Information

SECTION 10—GENERAL INFORMATION

Group 05—Machine Specifications

Group 10—Predelivery Service

Group 15—Tune-up

Group 20—Lubrication

SECTION 15—SEPARATION

Group 05—Front Axle

Group 10—Front End

Group 15—Front End and Engine

Group 20—Engine

Group 25—SOUND-GARD Body

Group 30—Power Shift Clutch Housing

Group 31—QUAD-RANGE Clutch Housing

Group 35—Transmission

Group 40—Final Drive

SECTION 20—ENGINE

Group 05—Service

Group 10—Cooling System

SECTION 30—FUEL AND AIR

Group 05—Air Intake System

Group 10—Diesel Fuel System

SECTION 40—ELECTRICAL REPAIR

Group 05—Connector Repair

Group 10—Harness Replacement

Group 15—Alternator

Group 20—Starting Circuit

Group 25—Lighting Circuit Repair

Group 30—INTELLITRAK Monitoring System

Group 35—Accessory Components

Group 40—Hitch Electronic Control Components

Group 45—Electronic Governor Control
Components

Group 50—Auxiliary Lighting and Electrical
Components (European)

SECTION 50—POWER TRAIN--QUAD-RANGE TRANSMISSION

Group 05—Clutch Oil Pressure Regulating Valve
Housing

Group 10—Clutch Operating Piston Housing

Group 15—Perma-Clutch

Group 20—Quad-Range Planetary

Group 25—Quad-Range Transmission and
Charge Pump

Group 30—Shift Lever Assembly

Group 35—PTO Gear Train

Group 40—Adjust PTO Clutch Rod

SECTION 55—POWER TRAIN--POWER SHIFT TRANSMISSION

Group 05—Remove and Install Traction Clutch
Valve Housing

Group 10—Traction Clutch Valve Housing

Group 15—Remove and Install Transmission
Control Valve Housing

Group 20—Transmission Control Valves and
Accumulators

Group 25—Remove and Install Traction Clutch

Group 30—Traction Clutch and Drive Shafts

Group 35—Input Planetary

Group 40—Reduction Gear Train

Group 45—Output Planetary

Group 50—Speed Selector Assembly

Group 55—Charge Pump Assembly

Group 60—PTO Gear Train WITH MFWD

Group 65—PTO Gear Train WITHOUT MFWD

Group 70—PTO Clutch Rod

Group 75—MFWD Gear Train

Group 80—MFWD Clutch

SECTION 56—DIFFERENTIAL AND FINAL DRIVE

Group 05—Differential

Group 10—Differential Lock Valve

Group 15—Final Drive

Continued on next page

SECTION 60—STEERING AND BRAKES

- Group 05—Remove and Install Power Steering Components
 - Group 10—Steering Column
 - Group 15—Metering Pump
 - Group 20—Steering Valve
 - Group 25—Steering Motor
- Group 30—Remove and Install Brake Valve and Brake Accumulator
 - Group 35—Brake Valve
 - Group 40—Brake Accumulator
 - Group 45—Bleeding Brakes and Testing Brake Accumulator
- Group 50—Brake Pistons, Plates and Disks
- Group 55—Auxiliary Trailer Brake (European)
- Group 60—Secondary Brake (European)
- Group 65—Auxiliary Steering System (European)

SECTION 70—HYDRAULICS

- Group 05—Hydraulic System Repair
- Group 10—Main Hydraulic Pump
- Group 15—Oil Filter Relief Valve and Return Manifold
- Group 20—Hydraulic Oil Cooler and Bypass Valve
- Group 25—Rockshaft, Draft Control and Lift Assist Cylinders
- Group 30—Hitch Control Valve
- Group 35—Control Valves
- Group 40—Selective Control Valves and Breakaway Couplers
- Group 45—Remote Cylinder
- Group 50—Transmission-Hydraulic Cleanup

SECTION 80—MISCELLANEOUS

- Group 05—Rear Wheels
- Group 10—Front Axle

SECTION 90—OPERATOR STATION REPAIR

- Group 05—Air Conditioning System
- Group 10—Air Conditioning System Service
- Group 15—Heating System
- Group 20—Seat
- Group 25—ROPS and SOUND-GARD Body

SECTION 99—DEALER FABRICATED TOOLS

- Group 05—Fabricated Tools

 
Index

PREVENT MACHINE RUNAWAY

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

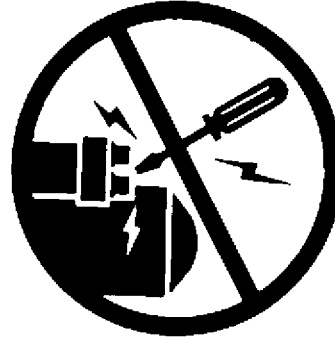

DX,BYPAS1 -19-04JUN90

05
05
1
-UN-11JAN89
TS177

HANDLE FLUIDS SAFELY—AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



DX,FLAME -19-04JUN90

-UN-23AUG88
TS227

PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



DX,SPARKS -19-04JUN90

-UN-23AUG88
TS204

 
05-05-2

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

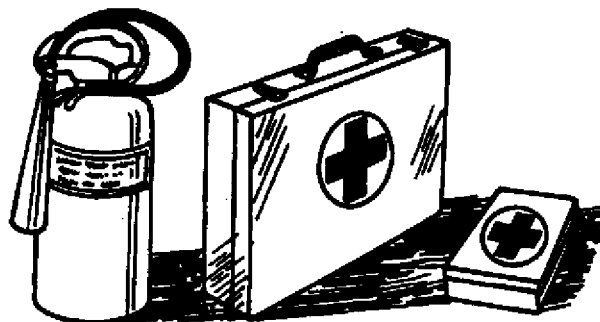

DX,FIRE2 -19-04JUN90

TS291 -UN-23AUG88

PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:

 
1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 10—15 minutes. Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
3. Get medical attention immediately.

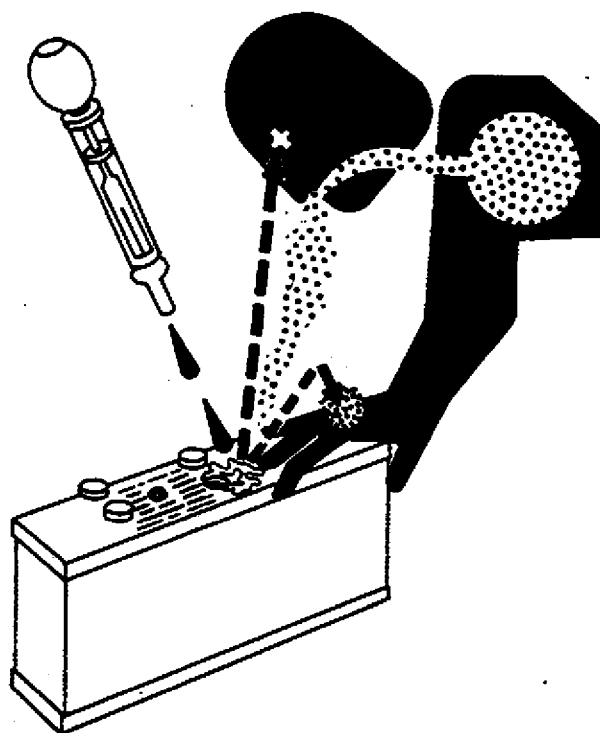

DX,POISON -19-04JUN90

TS203 -UN-23AUG88

HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)



DX,MSDS,NA -19-15MAR91

TS1132 -UN-26NOV90

 
AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

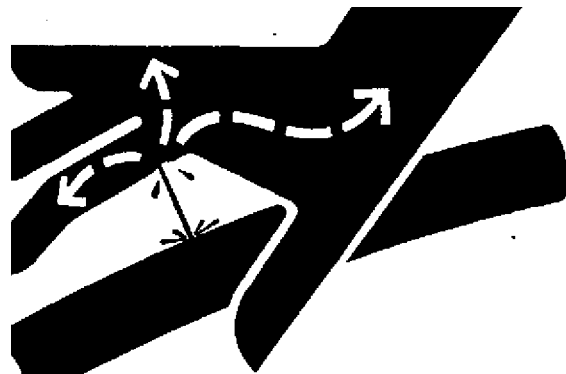


DX,FLUID -19-09AUG91

X9811 -UN-23AUG88

PARK MACHINE SAFELY

Before working on the machine:

 - Lower all equipment to the ground.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

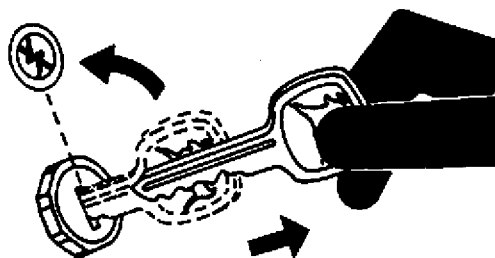

DX,PARK


-19-04JUN90

TS230 -UN-24MAY89

SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

 Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

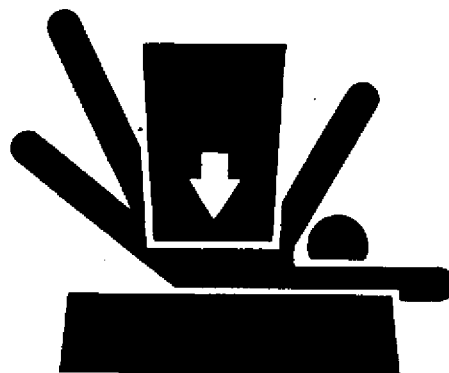

DX,LOWER

-19-04JUN90

TS229 -UN-23AUG88

 
WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

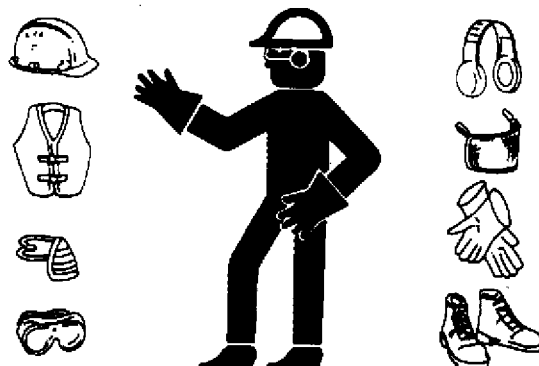

DX,WEAR

-19-10SEP90

TS206 -UN-23AUG88



Suggest:

If the above button click is invalid.

**Please download this document
first, and then click the above link
to download the complete manual.**

Thank you so much for reading