



# Service Repair Manual

## **Models**

385C and 385C L Excavator

---

Product: EXCAVATOR

Model: 385C EXCAVATOR KKK

Configuration: 385C & 385C L Excavator KKK00001-UP (MACHINE) POWERED BY C18 Engine

## Disassembly and Assembly

### 385C Excavator and 385C MHPU Mobile Hydraulic Power Unit Machine Systems

Media Number -REN8620-05

Publication Date -01/02/2012

Date Updated -20/02/2012

i02565371

## Final Drive - Disassemble

SMCS - 4050-015

## Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1P-2420	Transmission Repair Stand	1
B	138-7575	Link Bracket	3
C	138-7576	Link Bracket	2
D	132-8119	Hydraulic Wrench	1
	132-8223	Hydraulic Pump and Motor Gp	1
	9U-7418	Hex Bit Socket	1
E	176-6536	Forcing Bolt	2

### Start By:

- A. Remove the final drive. Refer to Disassembly and Assembly, "Final Drive - Remove".

**Note:** Cleanliness is an important factor. Before you begin the disassembly procedure, the exterior of the components should be thoroughly cleaned. This will help to prevent dirt from entering the internal mechanism. Precision components can be damaged by contaminants or by dirt. Perform disassembly procedures on a clean work surface. Keep components covered and protected at all times.

---

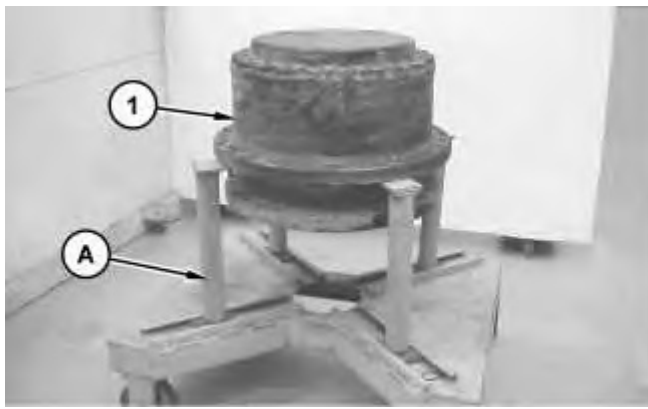


Illustration 1

g01284546

1. Fasten final drive (1) to Tooling (A). Put an alignment mark across the sections of final drive (1) for assembly purposes. All parts must be reinstalled in the original locations. The weight of final drive (1) is approximately 1020 kg (2250 lb).

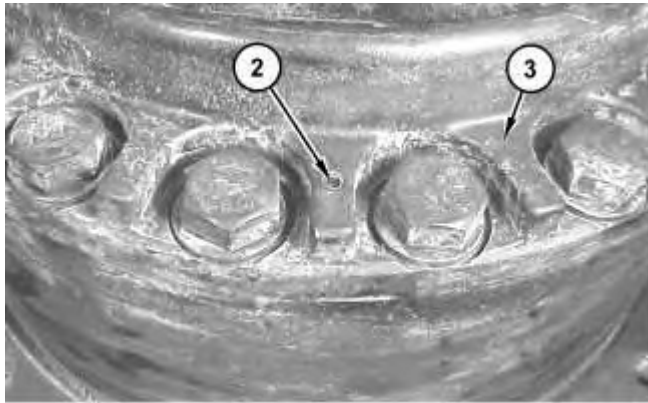


Illustration 2

g01284563

2. Remove socket setscrews (2) from housing cover (3) .



Illustration 3

g01284577

3. Fasten Tooling (B) and a suitable lifting device to housing cover (3) .
4. Remove bolts (4) and the washers. Use a soft faced hammer in order to break the seal between housing cover (3) and the ring gear. Remove housing cover (3). The weight of housing cover (3) is approximately 95 kg (210 lb).

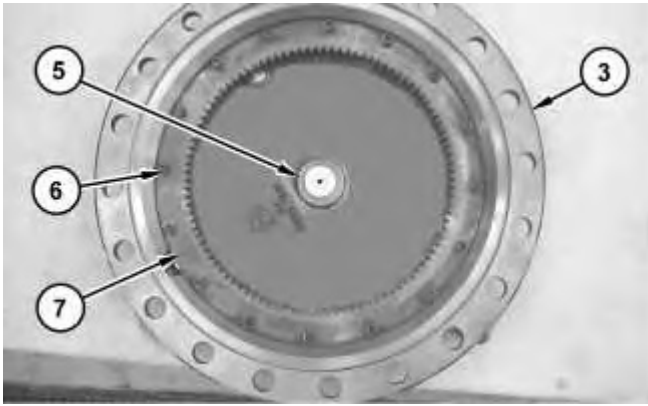


Illustration 4

g01284579

5. Remove spacer (5) and the shims from housing cover (3) .
6. Remove socket head bolts (6) and ring gear (7) from housing cover (3) .



Illustration 5

g01284589

7. Remove sun gear (8) .
-

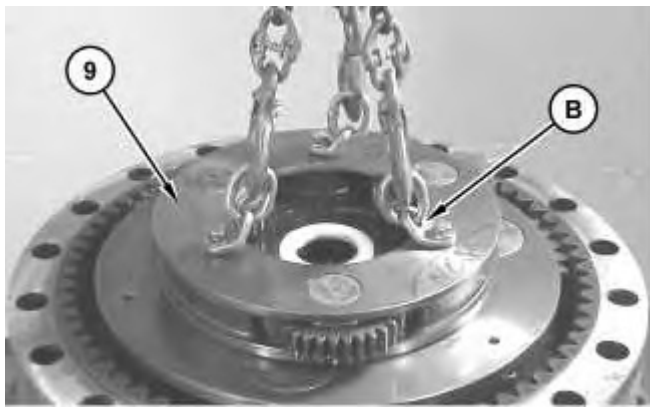


Illustration 6

g01284593

8. Use Tooling (B) and a suitable lifting device in order to remove carrier assembly (9). The weight of carrier assembly (9) is approximately 43 kg (95 lb).



Illustration 7

g01284596

9. Remove retaining ring (10), spacer (11), and sun gear (12) .

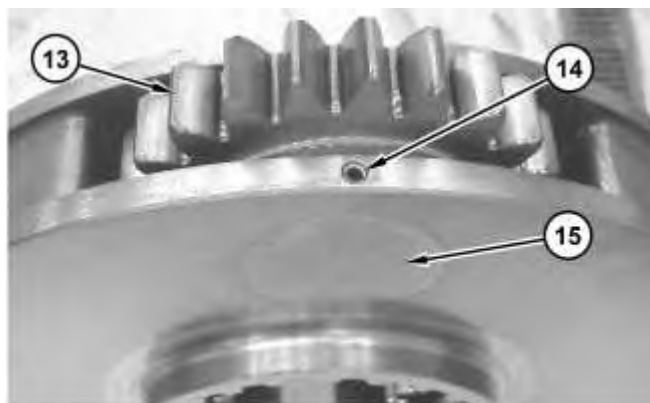


Illustration 8

g01284599

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)