

TJ AND T9000 MASTER TABLE OF CONTENTS

THIS MANUAL, 84257310, COVERS THE FOLLOWING TRACTORS:

TJ 280, 330, 380, 430, 480, and 530 Series

T9010, 9020, 9030, 9040, 9050, and 9060 Series

T9020, 9030, 9040, 9050, and 9060 Series After S/N Z7F204001

NOTE: *Engine repair information is not contained within this tractor Service Manual. For engine repair, refer to appropriate engine service manual as follows:*

87515682 - *For 8.3 & 9.0L 6 Cylinder, 24 Valve CNH Engine with High Pressure Common Rail Fuel System.*

87523643 - *For 12.9L 6 Cylinder, Engine.*

87737594 - *For 12.9L 6 Cylinder, Turbo Compound Engine.*

STANDARD TORQUE SPECIFICATION.....SECTION 00, CHAPTER 1 (Book 1 - 87525642)

SAFETY.....SECTION 00, CHAPTER 2 (Book 1 - 87525642)

LUBRICATION AND MAINTENANCE.....SECTION 00, CHAPTER 3 (Book 1 - 87525642)

ENGINE LUBRICATION	00-3-3
Engine Oil Selection	00-3-3
Synthetic Lubricants	00-3-3
Engine Oil Viscosity/Temperature Usage Recommendation	00-3-3
Engine Coolant Solutions	00-3-4
LUBRICANTS AND CAPACITIES	00-3-5
LUBRICATION AND MAINTENANCE CHART	00-3-6

SPECIFICATIONS.....SECTION 00, CHAPTER 4 (Book 1 - 87525642)

DIESEL ENGINE	00-4-3
ENGINE LUBRICATION SYSTEM	00-4-3
FUEL SYSTEM	00-4-3
AIR INTAKE SYSTEM	00-4-3
TRANSMISSION - POWER SHIFT	00-4-4
TRANSMISSION - MANUAL SHIFT	00-4-4
BRAKES	00-4-4
AXLE DIFFERENTIAL AAND FINAL DRIVES	00-4-4
POWER TAKEOFF (IF EQUIPPED)	00-4-4
HYDRAULIC SYSTEM	00-4-5
MEGAFLOW HYDRAULICS (IF EQUIPPED)	00-4-5
HITCH SYSTEM (IF EQUIPPED)	00-4-5
DRAWBAR	00-4-5
TRACTOR WEIGHTS	00-4-6
Approximate Base Shipping Weights	00-4-6
Approximate Component Weights	00-4-6
MAXIMUM TRACTOR OPERATING WEIGHT	00-4-6

ENGINE REMOVAL AND INSTALLATION -

TJ380/430 TRACTORS.....SECTION 10, CHAPTER 1 (Book 1 - 87525642)

SPECIAL TORQUE VALUES	10-1-3
RECOMMENDED TOOLS	10-1-3
ENGINE REMOVAL	10-1-4
ENGINE INSTALLATION	10-1-13

TJ AND T9000 MASTER TABLE OF CONTENTS

ENGINE REMOVAL AND INSTALLATION -

TJ280/330 TRACTORS.....	SECTION 10, CHAPTER 2 (Book 1 - 87525642)
SPECIAL TORQUE VALUES	10-2-2
SPECIAL TOOLS	10-2-2
ENGINE REMOVAL	10-2-3
ENGINE INSTALLATION	10-2-10

ENGINE REMOVAL AND INSTALLATION -

TJ480/530 TRACTORS.....	SECTION 10, CHAPTER 3 (Book 1 - 87525642)
SPECIAL TORQUE VALUES	10-3-2
RECOMMENDED TOOLS	10-3-2
ENGINE REMOVAL	10-3-3
ENGINE INSTALLATION	10-3-13

AIR INDUCTION SYSTEM - TJ380/430 TRACTORS.....SECTION 10, CHAPTER 4 (Book 1 - 87525642)

SPECIAL TORQUE VALUES	10-4-2
AIR INDUCTION SYSTEM	10-4-3
AIR INDUCTION SYSTEM DESCRIPTION	10-4-4
AIR INDUCTION SYSTEM	10-4-4
AIR FILTER ELEMENTS	10-4-4
PRIMARY AND SECONDARY FILTER ELEMENT REMOVAL	10-4-5
PRIMARY FILTER ELEMENT SERVICE	10-4-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST	10-4-8
AIR CLEANER HOUSING REMOVAL	10-4-9
ASPIRATOR STRATA TUBE CLEANING	10-4-10
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST	10-4-11
ASPIRATOR SAFETY VALVE INSTALLATION	10-4-11
AIR CLEANER HOUSING INSTALLATION	10-4-12
RESTRICTION INDICATOR SWITCH INSTALLATION	10-4-13
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION	10-4-13

AIR INDUCTION SYSTEM - TJ280/330 TRACTORS.....SECTION 10, CHAPTER 5 (Book 1 - 87525642)

SPECIAL TORQUE VALUES	10-5-3
AIR INDUCTION SYSTEM	10-5-4
AIR FILTER ELEMENTS	10-5-4
ENGINE AIR INDUCTION SYSTEM	10-5-5
Primary And Secondary Filter Element Removal	10-5-5
PRIMARY FILTER ELEMENT SERVICE	10-5-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST	10-5-7
AIR CLEANER HOUSING REMOVAL	10-5-8
Aspirator Strata Tube Cleaning	10-5-10
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST	10-5-12
ASPIRATOR SAFETY CHECK VALVE INSTALLATION	10-5-13
AIR CLEANER HOUSING INSTALLATION	10-5-14
RESTRICTION INDICATOR SWITCH INSTALLATION	10-5-15
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION	10-5-16

AIR INDUCTION SYSTEM - TJ480/530 TRACTORS.....SECTION 10, CHAPTER 6 (Book 1 - 87525642)

SPECIAL TORQUE VALUES	10-6-2
AIR INDUCTION SYSTEM	10-6-3
AIR FILTER ELEMENTS	10-6-4
Primary And Secondary Filter Element Removal	10-6-5
PRIMARY FILTER ELEMENT SERVICE	10-6-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST	10-6-8
AIR CLEANER HOUSING REMOVAL	10-6-9
ASPIRATOR STRATA TUBE CLEANING	10-6-10
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST	10-6-11

TJ AND T9000 MASTER TABLE OF CONTENTS

ASPIRATOR SAFETY VALVE INSTALLATION	10-6-11
AIR CLEANER HOUSING INSTALLATION	10-6-12
RESTRICTION INDICATOR SWITCH INSTALLATION	10-6-13
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION	10-6-13
VISCOUS FAN DRIVE - TJ280/330/380/430,	
HYD FAN DRIVE TEST - TJ480/530	SECTION 10, CHAPTER 7 (Book 1 - 87525642)
VISCOUS FAN DRIVE TEST - TJ280, TJ330, TJ380, TJ430	10-7-3
HYDRAULIC FAN DRIVE TEST - TJ480, TJ530	10-7-5
RADIATOR, COOLERS AND CONDENSER	
REMOVE/INSTALL - TJ280/330	SECTION 10, CHAPTER 8 (Book 1 - 87525642)
SPECIAL TORQUE VALUES	10-8-2
GENERAL INFORMATION	10-8-3
FUEL COOLER REMOVAL	10-8-3
FUEL COOLER INSTALLATION	10-8-4
ENGINE AIR TO AIR COOLER REMOVAL	10-8-6
AIR TO AIR COOLER INSTALLATION	10-8-9
A/C CONDENSER REMOVAL	10-8-12
A/C CONDENSER INSTALLATION	10-8-13
HYDRAULIC/TRANSMISSION OIL COOLER REMOVAL	10-8-15
HYDRAULIC/TRANSMISSION OIL COOLER INSTALLATION	10-8-17
RADIATOR AND COOLER ASSEMBLY REMOVAL	10-8-20
RADIATOR AND COOLER ASSEMBLY INSTALLATION	10-8-27
RADIATOR, COOLERS AND CONDENSER	
REMOVE/INSTALL - TJ480/530	SECTION 10, CHAPTER 9 (Book 1 - 87525642)
SPECIAL TORQUE VALUES	10-9-3
GENERAL INFORMATION	10-9-3
FUEL COOLER REMOVAL	10-9-4
FUEL COOLER INSTALLATION	10-9-4
ENGINE AIR TO AIR COOLER REMOVAL	10-9-5
ENGINE AIR TO AIR COOLER INSTALLATION	10-9-7
A/C CONDENSER AND HYDRAULIC FAN COOLER REMOVAL	10-9-9
A/C CONDENSER AND HYDRAULIC FAN COOLER INSTALLATION	10-9-10
RADIATOR AND COOLER ASSEMBLY REMOVAL	10-9-12
RADIATOR/COOLER DISASSEMBLY	10-9-19
RADIATOR, COOLERS AND CONDENSER	
REMOVE/INSTALL - TJ380/430	SECTION 10, CHAPTER 10 (Book 1 - 87525642)
SPECIAL TORQUE VALUES	10-10-2
GENERAL INFORMATION	10-10-3
ENGINE AIR TO AIR COOLER REMOVAL	10-10-4
AIR TO AIR COOLER INSTALLATION	10-10-6
A/C CONDENSER REMOVAL	10-10-7
A/C CONDENSER INSTALLATION	10-10-8
HYDRAULIC/TRANSMISSION OIL COOLER REMOVAL	10-10-10
HYDRAULIC/TRANSMISSION OIL COOLER INSTALLATION	10-10-12
RADIATOR AND COOLER ASSEMBLY REMOVAL	10-10-15

TJ AND T9000 MASTER TABLE OF CONTENTS

AIR INDUCTION SYSTEM, T9030, 9040 and 9050 Tractors, S/N Z7F204001 and After..... SECTION 10, CHAPTER 11 (Book 1A - 87740915)	
SPECIAL TORQUE VALUES	10-11-2
AIR INDUCTION SYSTEM	10-11-3
AIR INDUCTION SYSTEM DESCRIPTION	10-11-4
AIR INDUCTION SYSTEM	10-11-4
AIR FILTER ELEMENTS	10-11-4
PRIMARY AND SECONDARY FILTER ELEMENT REMOVAL	10-11-5
PRIMARY FILTER ELEMENT SERVICE	10-11-7
RESTRICTION INDICATOR SWITCH REMOVAL AND TEST	10-11-8
AIR CLEANER HOUSING REMOVAL	10-11-9
ASPIRATOR STRATA TUBE CLEANING	10-11-11
ASPIRATOR SAFETY CHECK VALVE REMOVAL AND TEST	10-11-12
ASPIRATOR SAFETY VALVE INSTALLATION	10-11-12
AIR CLEANER HOUSING INSTALLATION	10-11-13
RESTRICTION INDICATOR SWITCH INSTALLATION	10-11-14
SECONDARY AND PRIMARY FILTER ELEMENT INSTALLATION	10-11-15
ENGINE REMOVAL AND INSTALLATION, T9050 TRACTOR, S/N Z7F204001 AND AFTER SECTION 10, CHAPTER 12 (Book 1A - 87740915)	
SPECIAL TORQUE VALUES	10-12-3
RECOMMENDED TOOLS	10-12-3
ENGINE REMOVAL	10-12-4
ENGINE INSTALLATION	10-12-15
RADIATOR, COOLERS AND CONDENSER REMOVE AND INSTALL, T9050 TRACTOR SECTION 10, CHAPTER 13 (Book 1A - 87740915)	
SPECIAL TORQUE VALUES	10-13-3
ENGINE AIR TO AIR COOLER REMOVAL	10-13-4
ENGINE AIR TO AIR COOLER INSTALLATION	10-13-6
A/C CONDENSER AND HYDRAULIC FAN COOLER REMOVAL	10-13-8
A/C CONDENSER AND HYDRAULIC FAN COOLER INSTALLATION	10-13-9
RADIATOR AND COOLER ASSEMBLY REMOVAL	10-13-11
RADIATOR/COOLER DISASSEMBLY	10-13-18
POWERSHIFT TRANSMISSION REMOVE/INSTALL - TJ280/330.....SECTION 21, CHAPTER 1 (Book 2 - 87525640)	
SPECIAL TORQUE VALUES	21-1-2
SPECIAL TOOLS	21-1-2
TRANSMISSION REMOVAL	21-1-3
TRANSMISSION INSTALLATION	21-1-9
POWERSHIFT TRANSMISSION REMOVE/INSTALL - TJ380/430/480/530.....SECTION 21, CHAPTER 2 (Book 2 - 87525640)	
SPECIAL TORQUE VALUES	21-2-3
SPECIAL TOOLS	21-2-3
TRANSMISSION REMOVAL	21-2-4
TRANSMISSION INSTALLATION	21-2-10
ENGINE/TRANSMISSION DRIVE COUPLER REMOVE/INSTALL - TJ280/330 SECTION 21, CHAPTER 3 (Book 2 - 87525640)	
SPECIAL TORQUE VALUES	21-3-2
DRIVE COUPLER REMOVAL	21-3-3
DRIVE COUPLER INSTALLATION	21-3-5

TJ AND T9000 MASTER TABLE OF CONTENTS

ENGINE/TRANSMISSION DRIVE COUPLER

REMOVE/INSTALL - TJ480/530	SECTION 21, CHAPTER 4 (Book 2 - 87525640)
SPECIAL TORQUE VALUES	21-4-2
DRIVE COUPLER REMOVAL	21-4-3
DRIVE COUPLER INSTALLATION	21-4-6

16 SPEED POWERSHIFT TRANSMISSION REPAIR.....SECTION 21, CHAPTER 5 (Book 2 - 87525640)

SPECIFICATIONS	21-5-3
SPECIAL TORQUE VALUES	21-5-3
SPECIAL TOOLS	21-5-4
TRANSMISSION DISASSEMBLY	21-5-7
INPUT (FIRST) SHAFT DISASSEMBLY	21-5-18
PUMP (SECOND) SHAFT DISASSEMBLY	21-5-27
MASTER CLUTCH (FOURTH) SHAFT DISASSEMBLY	21-5-33
OUTPUT (FIFTH) SHAFT DISASSEMBLY	21-5-41
COUNTER (THIRD) SHAFT DISASSEMBLY	21-5-48
CLEANING AND INSPECTION	21-5-50
CLUTCH PACK CLEARANCE AND CLUTCH PACK TRAVEL TEST	21-5-52
1F, 1R, 2F AND 2R CLUTCH GEAR BEARING PRELOAD TEST	21-5-55
INPUT (FIRST) SHAFT ASSEMBLY	21-5-58
PUMP (SECOND) SHAFT ASSEMBLY	21-5-72
MASTER CLUTCH (FOURTH) SHAFT ASSEMBLY	21-5-82
OUTPUT (FIFTH) SHAFT ASSEMBLY	21-5-96
COUNTER (THIRD) SHAFT BEARING ASSEMBLY	21-5-107
TRANSMISSION ASSEMBLY	21-5-110

16 SPEED POWERSHIFT TRANSMISSION - HOW IT WORKS ..SECTION 21, CHAPTER 6 (Book 2 - 87525640)

GENERAL DESCRIPTION OF OPERATION	21-6-3
Regulator Valve	21-6-4
Lube Regulator Valve	21-6-5
Master Clutch Lube Valve	21-6-5
Range Selector Valve	21-6-6
MASTER CLUTCH CONTROL VALVE	21-6-7
Transmission Power Flow	21-6-8
Default Settings	21-6-8
Helical-cut Gears	21-6-8
Shifting The Powershift Transmission	21-6-9

REAR DRIVE LINE AND CARRIER BEARING.....SECTION 21, CHAPTER 7 (Book 2 - 87525640)

SPECIAL TORQUE VALUES	21-7-2
REAR DRIVE LINE AND CARRIER BEARING REMOVAL	21-7-3
REAR DRIVE LINE AND CARRIER BEARING INSTALLATION	21-7-5

CHARGE PUMP REPAIR FOR 16-SPEED

POWERSHIFT TRANSMISSION

SECTION 21, CHAPTER 8 (Book 2 - 87525640)

SPECIFICATIONS	21-8-3
SPECIAL TORQUE VALUES	21-8-3
PUMP DISASSEMBLY	21-8-4
PUMP ASSEMBLY	21-8-7

TJ AND T9000 MASTER TABLE OF CONTENTS

24 SPEED MANUAL TRANSMISSION REMOVAL

AND INSTALLATION	SECTION 21, CHAPTER 9 (Book 2 - 87525640)
SPECIAL TOOLS	21-9-3
SPECIAL TORQUE VALUES	21-9-3
24 SPEED TRANSMISSION REMOVAL	21-9-4
24 SPEED TRANSMISSION INSTALLATION	21-9-13
MASTER CLUTCH ADJUSTMENT	21-9-23
SHIFT LEVER LINKAGE ADJUSTMENT	21-9-24

ENGINE/TRANSMISSION DRIVE COUPLER

REMOVE/INSTALL - TJ380/430	SECTION 21, CHAPTER 10 (Book 2 - 87525640)
SPECIAL TORQUE VALUES	21-10-2
DRIVE COUPLER REMOVAL	21-10-3
DRIVE COUPLER INSTALLATION	21-10-6

24 SPEED MANUAL TRANS HOW IT WORKS/

PRESSURE TESTING/REPAIR.....	SECTION 21, CHAPTER 11 (Book 2 - 87525640)
SPECIFICATIONS	21-11-4
SPECIAL TORQUE VALUES	21-11-5
SPECIAL TOOLS	21-11-6
PRESSURE TESTING SPECIFICATIONS	21-11-8
GENERAL SETUP PROCEDURE	21-11-9
TRANSMISSION PRESSURE TEST PORT LOCATIONS	21-11-11
TESTING THE LUBRICATION PRESSURE	21-11-13
TRANSMISSION SERIAL NUMBER IDENTIFICATION	21-11-14
TRANSMISSION LUBRICATION CIRCUIT	21-11-15
TRANSMISSION OIL FLOW CHART	21-11-16
DESCRIPTION OF OPERATION	21-11-20
TRANSMISSION POWER FLOW	21-11-24
STARTING IN A FORWARD SPEED	21-11-26
STARTING IN A REVERSE SPEED	21-11-27
TROUBLESHOOTING GUIDE	21-11-35
NEUTRAL SAFETY SWITCH ADJUSTMENT	21-11-40
TRANSMISSION SPEED SENSOR ADJUSTMENT	21-11-40
TRANSMISSION DISASSEMBLY	21-11-41
SHIFT LEVER SEAL REPLACEMENT	21-11-53
INPUT SHAFT DISASSEMBLY	21-11-54
INPUT SHAFT ASSEMBLY	21-11-59
PUMP SHAFT DISASSEMBLY	21-11-72
PUMP SHAFT ASSEMBLY	21-11-75
SPEED SHAFT DISASSEMBLY	21-11-81
SPEED SHAFT ASSEMBLY	21-11-84
CENTER SHAFT DISASSEMBLY	21-11-88
CENTER SHAFT ASSEMBLY	21-11-90
RANGE SHAFT DISASSEMBLY	21-11-94
RANGE SHAFT ASSEMBLY	21-11-967
TRANSMISSION ASSEMBLY	21-11-100
HIGH-LOW CLUTCH CONTROL ASSEMBLY	21-11-118
HIGH-LOW CONTROL VALVE DISASSEMBLY	21-11-119
REGULATOR VALVE ASSEMBLY	21-11-121
REGULATOR VALVE DISASSEMBLY AND ASSEMBLY	21-11-122
MASTER CLUTCH CONTROL VALVE ASSEMBLY	21-11-123
MASTER CLUTCH CONTROL VALVE DISASSEMBLY AND ASSEMBLY	21-11-124
LOCKOUT VALVE ASSEMBLY	21-11-126
LOCKOUT VALVE DISASSEMBLY AND ASSEMBLY	21-11-127
MASTER CLUTCH CABLE ADJUSTMENT	21-11-128

TJ AND T9000 MASTER TABLE OF CONTENTS

16-SPEED POWERSHIFT TRANSMISSION -

PRESSURE TESTING AND TROUBLESHOOTING	SECTION 21, CHAPTER 12 (Book 2A - 87740916)
RECOMMENDED TOOLS	21-12-3
SPECIAL TORQUE VALUES	21-12-4
TRANSMISSION TROUBLESHOOTING	21-12-5
Important General Information	21-12-5
Fault Code Retrieval	21-12-5
Fault Codes Recorded	21-12-6
No Fault Codes Recorded	21-12-7
Solenoid Swap Test	21-12-8
CLUTCH TEST PORT IDENTIFICATION	21-12-9
Transmission Clutch Pressure Test	21-12-10
TEST PORT IDENTIFICATION	21-12-15
PRESSURE TEST SPECIFICATIONS AND WORKSHEETS	21-12-16
LUBE TEST PORT IDENTIFICATION	21-12-19
LUBRICATION CIRCUIT PRESSURE TEST	21-12-20
MASTER CLUTCH LUBE TEST	21-12-22
PTO CLUTCH PRESSURE TEST	21-12-23
PTO AND TRANSMISSION PRESSURE TEST REASSEMBLY	21-12-25

16 SPEED POWERSHIFT TRANSMISSION, RANGE SELECTOR, PRESSURE REGULATOR AND

MASTER CLUTCH VALVE REPAIR	SECTION 21, CHAPTER 13 (Book 2A - 87740916)
SPECIAL TORQUE VALUES	21-13-3
REGULATOR VALVE DISASSEMBLY	21-13-4
CLEANING, INSPECTION AND SOLENOID VALVE TEST	21-13-12
REGULATOR VALVE ASSEMBLY	21-13-15
RANGE SELECTOR VALVE DYNAMIC TEST	21-13-23
RANGE SELECTOR PWM VALVE TEST	21-13-26
RANGE SELECTOR VALVE DISASSEMBLY	21-13-29
RANGE SELECTOR VALVE ASSEMBLY	21-13-32

PTO SYSTEM HOW IT WORKS AND TROUBLESHOOTINGSECTION 31, CHAPTER 1 (Book 3 - 87525644)

POWER TAKE OFF, General Information	31-1-3
PTO LUBRICATION, General Information	31-1-4
PTO CONTROL	
PTO Control Switch	31-1-5
To Operate the PTO	31-1-5
To Stop the PTO	31-1-5
PTO Electrical Circuit	31-1-6
PTO Switch in the OFF Position	31-1-7
PTO Switch in the ON Position	31-1-8
Diode Suppressed PTO Coil	31-1-9
Neutral Start Feature	31-1-9
PTO VALVE	
Operational Modes	31-1-10
PTO Control Valve Operation	31-1-12
PTO Clutch Disengaged	31-1-13
PTO Modulated Engagement	31-1-14
PTO Fully Engaged	31-1-15
PTO Clutch Drive	31-1-16
PTO Clutch	31-1-17
PTO Brake	31-1-18
PTO Drop Box and Clutch	31-1-19
Engine RPM Speed Circuit	31-1-19

TJ AND T9000 MASTER TABLE OF CONTENTS

PTO SYSTEM TROUBLESHOOTING	
PTO Will Not Engage	31-1-20
PTO Will Not Disengage	31-1-21
PTO CLUTCH REMOVAL AND INSTALLATION -	
TJ380/430/480/530.....	SECTION 31, CHAPTER 2 (Book 3 - 87525644)
SPECIAL TORQUE VALUES	31-2-2
PTO CLUTCH ASSEMBLY REMOVAL	31-2-3
PTO CLUTCH ASSEMBLY INSTALLATION	31-2-9
PTO DRIVE UNIT (CLUTCH) REPAIR	
SPECIAL TORQUE VALUES	31-3-3
SPECIFICATIONS	31-3-3
PTO DRIVE UNIT DISASSEMBLY	31-3-4
PTO DRIVE UNIT ASSEMBLY (EXPLODED VIEW)	31-3-13
PTO CLUTCH AND BRAKE ASSEMBLY (EXPLODED VIEW)	31-3-14
PTO DRIVE UNIT ASSEMBLY	31-3-15
PTO CLUTCH REMOVAL AND INSTALLATION - TJ280/330.....	
SPECIAL TORQUE VALUES	31-4-2
PTO CLUTCH REMOVAL	31-4-3
PTO CLUTCH INSTALLATION	31-4-5
PTO TRANSFER CASE REMOVAL AND INSTALLATION	
SPECIAL TORQUE VALUES	31-5-2
SPECIAL TOOLS	31-5-2
TRANSFER CASE REMOVAL	31-5-3
TRANSFER CASE INSTALLATION	31-5-10
PTO DROPBOX REPAIR.....	
SPECIFICATIONS	31-6-2
SPECIAL TORQUE VALUES	31-6-2
PTO DROPBOX DISASSEMBLY	31-6-3
EXPLODED VIEW PTO DROPBOX ASSEMBLY	31-6-9
PTO DROPBOX ASSEMBLY	31-6-10
PTO DRIVELINE HANGER BEARING.....	
SPECIAL TORQUE VALUES	31-7-2
PTO DRIVELINE HANGER BEARING REMOVAL	31-7-3
HANGER BEARING ASSEMBLY REPAIR (Exploded View)	31-7-5
HANGER BEARING DISASSEMBLY	31-7-6
HANGER BEARING ASSEMBLY	31-7-7
PTO DRIVELINE HANGER BEARING INSTALLATION	31-7-10
PTO CLUTCH VALVE.....	
SPECIAL TORQUE VALUES	31-8-2
PTO VALVE REMOVAL	31-8-3
PTO VALVE DISASSEMBLY	31-8-4
CLEANING AND INSPECTION	31-8-7
PTO VALVE SOLENOID TESTS	31-8-8
PTO VALVE SECTIONAL VIEW	31-8-9
PTO VALVE ASSEMBLY	31-8-10
PTO VALVE INSTALLATION	31-8-13

TJ AND T9000 MASTER TABLE OF CONTENTS

POWER BRAKES SYSTEM -	
HOW IT WORKS AND TROUBLESHOOTING	SECTION 33, CHAPTER 1 (Book 3 - 87525644)
BRAKE SYSTEM	33-1-3
General Information	33-1-3
General Description	33-1-4
Axle Pump	33-1-4
Axle Cooling Filter	33-1-5
Axle Lube Solenoid Valve	33-1-5
Pressure/Lube Control Valve	33-1-6
Brake Lubrication and Jet Pump	33-1-6
Pressure/Lube Control Valve	33-1-7
Regulated Pressure Spool	33-1-8
Park Brake/Tow Valve	33-1-10
Park Brake Applied	33-1-11
Park Brake Released	33-1-11
Tow Valve	33-1-11
BRAKE CIRCUIT COMPONENTS	33-1-12
Brake Pedal	33-1-12
Brake Control Valve	33-1-13
Brake Clutch Pack	33-1-13
Axle Brake Cylinders	33-1-13
HYDRAULIC BRAKE CONTROL	33-1-14
General Description	33-1-14
Brake Valve	33-1-14
Service Brake Circuit	33-1-15
Emergency Braking	33-1-18
BRAKE SYSTEM TROUBLESHOOTING	33-1-19
 SERVICE BRAKE VALVE	
SECTION 33, CHAPTER 2 (Book 3 - 87525644)	
SPECIAL TORQUE VALUES	33-2-2
RECOMMENDED TOOLS	33-2-2
SERVICE BRAKE VALVE REMOVAL	33-2-3
SERVICE BRAKE VALVE DISASSEMBLY	33-2-6
INSPECTION AND CLEANING	33-2-8
BRAKE MAL-FUNCTION SWITCH TEST	33-2-8
SERVICE BRAKE VALVE EXPLODED VIEW	33-2-9
SERVICE BRAKE VALVE SECTIONAL VIEW	33-2-10
SERVICE BRAKE VALVE ASSEMBLY	33-2-11
SERVICE BRAKE VALVE INSTALLATION	33-2-13
 2006 AND 2007 MODEL YEAR HYDRAULIC SCHEMATIC	
POSTER 87522497	
 2008 MODEL YEAR HYDRAULIC SCHEMATIC	
POSTER 87722947	
 HOW TO READ SYMBOLS IN A HYDRAULIC SCHEMATIC	
SECTION 35, CHAPTER 1 (Book 4 - 87618159)	
Introduction	35-1-3
Circuit Diagrams	35-1-3
Symbol Systems	35-1-3
Using Schematic Symbols	35-1-3
Reservoirs	35-1-3
Lines, Tubes and Hoses	35-1-4
Crossing or Joining Lines	35-1-5
Pump Symbols	35-1-5
Hydraulic Motor Symbols	35-1-6
Cylinder Symbols	35-1-6

TJ AND T9000 MASTER TABLE OF CONTENTS

Pressure Control Symbols	35-1-7
Normally Closed	35-1-7
Normally Open	35-1-7
Relief Valve	35-1-7
Pressure Reducing Valve	35-1-7
Sequence Valve	35-1-8
Directional Control Symbols	35-1-8
Simplified Symbols	35-1-8
One Way Valve	35-1-8
By Pass Valve	35-1-8
Composite Symbols	35-1-8
One Way Valves	35-1-8
Two Position Valves	35-1-8
Three Position Valves	35-1-9
Actuating Controls	35-1-9
Flow Control Symbols	35-1-9
Restrictors	35-1-9
Accessories	35-1-10
SIMPLE SCHEMATIC	35-1-12
COMMON SYMBOLS	35-1-14
Lines and Line Functions	35-1-14
Mechanical Devices	35-1-14
Pumps and Motors	35-1-14
Reservoirs	35-1-15
Cylinders	35-1-15
Valves	35-1-15
Valve Actuators	35-1-17
Accessories.....	35-1-17

HYDRAULIC SYSTEM HOW IT WORKS

WITH TROUBLESHOOTING	SECTION 35, CHAPTER 2 (Book 4 - 87618159)
GENERAL INTRODUCTION	35-2-3
SPECIFICATIONS	35-2-5
MODEL NUMBER LOCATION	35-2-7
STANDARD AND HIGH FLOW PFC PISTON PUMPS	35-2-8
Principle of Control	35-2-8
Engine Start Up	35-2-8
Operating Modes	35-2-8
Low Pressure Standby	35-2-8
Pressure and Flow Delivery and Compensation Principle	35-2-8
Increased Flow Demand	35-2-9
Decreased Flow Demand	35-2-9
High Pressure Standby	35-2-9
Return to Low Pressure Standby	35-2-9
Destroke Valve	35-2-9
Model 480 and 530 Tractor Hydraulic Fan Pump And Motor	35-2-10
PRESSURE/FLOW COMPENSATED PUMP	35-2-12
PFC CHARGE PRESSURE TEST	35-2-14
LOW PRESSURE AND HIGH PRESSURE STANDBY TESTS	35-2-16
PFC PISTON PUMP FLOW TEST AT REMOTE COUPLERS	35-2-17
MEGAFLOW PUMP LOW PRESSURE AND HIGH PRESSURE STANDBY TESTS	35-2-18
MEGAFLOW PFC PISTON PUMP FLOW TEST AT REMOTE COUPLERS	35-2-20
REGULATED PRESSURE TEST	35-2-21
REGULATED PRESSURE ADJUSTMENT PROCEDURE	35-2-22
REGULATED/LUBE PUMP TESTS	35-2-23

TJ AND T9000 MASTER TABLE OF CONTENTS

480 and 530 HYDRAULIC FAN PUMP LOW PRESSURE STANDBY, HIGH PRESSURE AND FLOW TESTS	35-2-25
480 and 530 HYDRAULIC FAN MOTOR TEST	35-2-27
REGULATED PRESSURE / LUBE CONTROL SYSTEM	35-2-28
REGULATOR VALVE	35-2-29
480 and 530 HYDRAULIC FAN CIRCUIT	35-2-30
480 and 530 HYDRAULIC FAN SYSTEM	35-2-31
STEERING PRIORITY VALVE	35-2-32
HYDRAULIC FAN/MOTOR REMOVAL AND FAN MOTOR/PUMP REPAIR - TJ480/530 SECTION 35, CHAPTER 3 (Book 4 - 87618159)	
SPECIAL TORQUE VALUES	35-3-3
HYDRAULIC FAN AND FAN MOTOR REMOVAL	35-3-4
HYDRAULIC FAN AND FAN MOTOR INSTALLATION	35-3-15
HYDRAULIC FAN PUMP REMOVAL	35-3-28
HYDRAULIC FAN PUMP INSTALLATION	35-3-31
HYDRAULIC FAN MOTOR DISASSEMBLY	35-3-35
HYDRAULIC FAN MOTOR ASSEMBLY	35-3-39
COMPENSATOR CONTROL VALVE REMOVAL AND DISASSEMBLY	35-3-42
COMPENSATOR CONTROL VALVE ASSEMBLY AND INSTALLATION	35-3-43
HYDRAULIC FAN PUMP DISASSEMBLY	35-3-44
PUMP CLEANING AND INSPECTION	35-3-51
PFC PISTON PUMP REMOVAL AND INSTALLATION - TJ380/430/480/530 SECTION 35, CHAPTER 4 (Book 4 - 87618159)	
SPECIAL TORQUE VALUES	35-4-2
SPECIAL TOOLS	35-4-2
PISTON PUMP REMOVAL	35-4-3
PISTON PUMP INSTALLATION	35-4-8
START-UP PROCEDURE	35-4-13
GEAR PUMP REMOVAL AND INSTALLATION - TJ380/430/480/530 SECTION 35, CHAPTER 5 (Book 4 - 87618159)	
SPECIAL TORQUE VALUES	35-5-2
SPECIAL TOOLS	35-5-2
GEAR PUMP REMOVAL	35-5-3
GEAR PUMP INSTALLATION	35-5-5
PFC AXIAL PISTON PUMP REPAIR SECTION 35, CHAPTER 6 (Book 4 - 87618159)	
SPECIFICATIONS	35-6-3
SPECIAL TORQUE VALUES	35-6-4
PISTON PUMP DISASSEMBLY	35-6-5
PRESSURE/FLOW COMPENSATOR DISASSEMBLY	35-6-12
PISTON PUMP CLEANING AND INSPECTION	35-6-16
PRESSURE/FLOW COMPENSATOR ASSEMBLY EXPLODED VIEW	35-6-20
PRESSURE/FLOW COMPENSATOR ASSEMBLY	35-6-21
PISTON PUMP ASSEMBLY EXPLODED VIEW	35-6-24
PISTON PUMP ASSEMBLY	35-6-25

TJ AND T9000 MASTER TABLE OF CONTENTS

HITCH SYSTEM - HOW IT WORKS	SECTION 35, CHAPTER 7 (Book 4 - 87618159)
THREE POINT HITCH	35-7-3
ELECTRONIC HITCH CONTROL	35-7-4
Operator Controls and Settings	35-7-5
ELECTRONIC HITCH CONTROL SYSTEM FEATURES	35-7-7
HITCH CONTROL VALVE	35-7-14
General	35-7-14
Raise and Lower Solenoids	35-7-14
Raise and Lower Pilot Spools	35-7-14
Raise Spool	35-7-14
Lower Poppet	35-7-14
Load Check Ball	35-7-14
Manual Raise or Lower Control Pins	35-7-14
Overload Relief Valve	35-7-14
Neutral Function and Troubleshooting	35-7-16
Raise Function and Troubleshooting	35-7-18
Raise Function and Troubleshooting	35-7-19
Lower Function and Troubleshooting	35-7-20
Lower Function and Troubleshooting	35-7-21
THREE POINT HITCH VALVE	SECTION 35, CHAPTER 8 (Book 4 - 87618159)
SPECIAL TORQUE VALUES	35-8-2
TPH VALVE REMOVAL	35-8-3
TPH VALVE DISASSEMBLY	35-8-5
CLEANING AND INSPECTION	35-8-9
HITCH VALVE SOLENOID TEST	35-8-11
THREE POINT HITCH VALVE	35-8-13
TPH VALVE ASSEMBLY	35-8-14
TPH VALVE INSTALLATION	35-8-18
REMOTE ELECTRONIC HYD SYSTEMS -	
HOW IT WORKS/TROUBLESHOOTING	SECTION 35, CHAPTER 9 (Book 4 - 87618159)
REMOTE HYDRAULIC SYSTEM INTRODUCTION	35-9-3
REMOTE SYSTEM CONTROLS (ELECTRONIC)	35-9-5
Remote Function Control	35-9-6
Full Function Position	35-9-6
Neutral Lock Position	35-9-6
Float Lock-Out Position	35-9-7
Non-Detent Raise Position	35-9-7
Hydraulic Motor Position	35-9-7
Hydraulic Valve Timer Control	35-9-9
Variable Flow Control	35-9-9
Remote Valve Load Check Valves	35-9-10
REMOTE VALVE PROPORTIONAL CURRENT CONTROL (PCC) SOLENOID OPERATION	35-9-11
REMOTE VALVE OPERATION (ELECTRONIC)	35-9-12
REMOTE VALVE PROBLEMS AND WHERE TO LOOK	35-9-20
ELECTRONIC REMOTE VALVE SYSTEM TESTING	35-9-21
FAULT CODE RETRIEVAL	35-9-21
REGULATED PRESSURE CHECK	35-9-24
REMOTE VALVE HIGH PRESSURE TEST	35-9-24
REMOTE VALVE PROPORTIONAL SOLENOID CHECK	35-9-26
LOW PRESSURE AND HIGH PRESSURE STANDBY TESTS	35-9-27
REMOTE VALVE FLOW TEST	35-9-29
REMOTE VALVE SIGNAL CHECK AND HITCH SIGNAL CHECK TEST	35-9-31
REMOTE VALVE COUPLER TEST	35-9-32
LOAD CHECK INSPECTION	35-9-33

TJ AND T9000 MASTER TABLE OF CONTENTS

HYDRAULIC GEAR (CHARGE) PUMP REPAIR	SECTION 35, CHAPTER 10 (Book 4 - 87618159)
SPECIAL TORQUE VALUES	35-10-2
PUMP DISASSEMBLY	35-10-3
CLEANING AND INSPECTION	35-10-7
PUMP ASSEMBLY	35-10-8
HYDRAULIC FILTERS	SECTION 35, CHAPTER 11 (Book 4 - 87618159)
SPECIFICATIONS	35-11-2
SERVICING THE HYDRAULIC AND TRANSMISSION OIL FILTERS	35-11-3
REMOTE AUXILIARY VALVE AND COUPLER, REMOVAL/INSTALLATION/REPAIR	SECTION 35, CHAPTER 12 (Book 4 - 87618159)
SPECIAL TORQUE VALUES	35-12-3
REMOTE AUXILIARY VALVE MANIFOLD SEAL REPLACEMENT	35-12-4
REMOTE AUXILIARY VALVE SOLENOID TEST	35-12-9
REMOTE AUXILIARY VALVE SOLENOID REMOVAL AND DISASSEMBLY	35-12-9
REMOTE AUXILIARY VALVE SOLENOID ASSEMBLY AND INSTALLATION	35-12-12
REMOTE AUXILIARY VALVE CONTROL SPOOL REMOVAL	35-12-15
REMOTE AUXILIARY VALVE CONTROL SPOOL INSTALLATION	35-12-17
REMOTE AUXILIARY VALVE REMOVAL	35-12-19
REMOTE AUXILIARY VALVE SECTION DISASSEMBLY	35-12-20
LOAD CHECK VALVE DISASSEMBLY	35-12-25
REMOTE AUXILIARY VALVE SECTION ASSEMBLY	35-12-27
LOAD CHECK VALVE ASSEMBLY	35-12-29
REMOTE AUXILIARY VALVE SECTION ASSEMBLY	35-12-31
REMOTE AUXILIARY VALVE SECTION INSTALLATION	35-12-36
HYDRAULIC GEAR PUMP AND PISTON PUMP REMOVE/INSTALL - TJ280/330	SECTION 35, CHAPTER 13 (Book 4 - 87618159)
SPECIAL TORQUE VALUES	35-13-3
RECOMMENDED TOOLS	35-13-3
GEAR PUMP REMOVAL	35-13-4
GEAR PUMP INSTALLATION	35-13-7
PFC PISTON PUMP REMOVAL	35-13-9
PFC PISTON PUMP INSTALLATION	35-13-14
START-UP PROCEDURE	35-13-19
DRAWBAR REMOVAL AND INSTALLATION	SECTION 37, CHAPTER 1 (Book 4 - 87618159)
SPECIAL TORQUE VALUES	37-1-2
SPECIAL TOOLS	37-1-2
DRAWBAR REMOVAL	37-1-3
DRAWBAR INSTALLATION	37-1-7
CENTER HINGE BEARINGS AND CONNECTING LINK - TJ380/430/480/530	SECTION 39, CHAPTER 1 (Book 4 - 87618159)
SPECIAL TORQUE VALUES	39-1-3
SPECIAL TOOL	39-1-3
RECOMMENDED TOOLS	39-1-3
GENERAL INFORMATION	39-1-5
SEPARATING THE FRONT AND REAR FRAMES	39-1-5
BOTTOM HINGE BEARING REPLACEMENT	39-1-11
CONNECTING LINK FRONT BUSHING REPLACEMENT	39-1-19
CONNECTING LINK REMOVAL	39-1-21
CONNECTING LINK REAR BEARING REPLACEMENT	39-1-22
CONNECTING LINK INSTALLATION	39-1-23
CONNECTING THE FRONT AND REAR FRAMES	39-1-25

TJ AND T9000 MASTER TABLE OF CONTENTS

CENTER HINGE BEARINGS AND CONNECTING LINK -

TJ280/330.....	SECTION 39, CHAPTER 2 (Book 4 - 87618159)
SPECIAL TORQUE VALUES	39-2-3
SPECIAL TOOL	39-2-3
RECOMMENDED TOOLS	39-2-3
GENERAL INFORMATION	39-2-5
SEPARATING THE FRONT AND REAR FRAMES	39-2-5
BOTTOM HINGE BEARING REPLACEMENT	39-2-11
CONNECTING LINK FRONT BUSHING REPLACEMENT	39-2-19
CONNECTING LINK REMOVAL	39-2-21
CONNECTING LINK REAR BEARING REPLACEMENT	39-2-22
CONNECTING LINK INSTALLATION	39-2-23
CONNECTING THE FRONT AND REAR FRAMES	39-2-25

CENTER HINGE BEARINGS AND CONNECTING LINK,

T9030, 9040, 9050, AND 9060 S/N Z7F204001 AND AFTER....	SECTION 39, CHAPTER 3 (Book 4A - 87740917)
SPECIAL TORQUE VALUES	39-3-3
SPECIAL TOOL	39-3-3
RECOMMENDED TOOLS	39-3-3
GENERAL INFORMATION	39-3-5
SEPARATING THE FRONT AND REAR FRAMES	39-3-5
BOTTOM HINGE BEARING REPLACEMENT	39-3-12
CONNECTING LINK FRONT BUSHING REPLACEMENT	39-3-20
CONNECTING LINK REMOVAL	39-3-22
CONNECTING LINK REAR BEARING REPLACEMENT	39-3-23
CONNECTING LINK INSTALLATION	39-3-24
CONNECTING THE FRONT AND REAR FRAMES	39-3-26

STEERING COLUMN REPAIR	SECTION 41, CHAPTER 1 (Book 5 - 87525646)
TILT STEERING COLUMN DISASSEMBLY	41-1-3
TILT STEERING COLUMN ASSEMBLY	41-1-5

CENTER CONSOLE, STEERING COLUMN,

PEDALS AND SWITCHES.....	SECTION 41, CHAPTER 2 (Book 5 - 87525646)
SPECIAL TOOLS	41-2-3
SPECIAL TORQUE VALUES	41-2-3
STEERING WHEEL REMOVAL	41-2-4
TRANSMISSION SHIFT LEVER REMOVAL	41-2-4
CENTER CONSOLE COVER REMOVAL	41-2-7
CENTER CONSOLE COVER INSTALLATION	41-2-9
TRANSMISSION SHIFT INSTALLATION	41-2-11
STEERING WHEEL INSTALLATION	41-2-14
STEERING COLUMN REMOVAL	41-2-15
STEERING COLUMN INSTALLATION	41-2-16
TILT STEERING COLUMN RELEASE CABLE REMOVAL	41-2-17
TILT STEERING COLUMN RELEASE CABLE INSTALLATION	41-2-18
CLUTCH AND BRAKE PEDAL ASSEMBLY REMOVAL	41-2-20
CLUTCH AND BRAKE PEDAL ASSEMBLY INSTALLATION	41-2-22
DECELERATION SWITCH REMOVAL	41-2-25
DECELERATION SWITCH INSTALLATION	41-2-26
CLUTCH POTENTIOMETER REMOVAL	41-2-27
CLUTCH POTENTIOMETER INSTALLATION	41-2-28
CLUTCH POTENTIOMETER CALIBRATION	41-2-29
CLUTCH POTENTIOMETER CALIBRATION	41-2-31
DIFFERENTIAL LOCK BRAKE SWITCH REMOVAL	41-2-34
DIFFERENTIAL LOCK BRAKE SWITCH INSTALLATION	41-2-34

TJ AND T9000 MASTER TABLE OF CONTENTS

HVAC PLENUM ACTUATOR MOTOR AND LOUVER REMOVAL	41-2-36
HVAC PLENUM ACTUATOR MOTOR AND LOUVER INSTALLATION	41-2-39
TRANSMISSION SHIFT LEVER DISASSEMBLY	41-2-42
TRANSMISSION SHIFT LEVER ASSEMBLY	41-2-49
STEERING HAND PUMP & PRIORITY/CONTROL VALVE REMOVE/INSTALL - TJ380/430/480/530 AND T9030/40/50/60 TRACTORS.....SECTION 41, CHAPTER 3 (Book 5 - 87525646)	
SPECIAL TOOLS	41-3-2
SPECIAL TORQUE VALUES	41-3-2
STEERING HAND PUMP REMOVAL	41-3-3
STEERING TUBE LINES REMOVAL	41-3-5
STEERING PRIORITY/CONTROL VALVE REMOVAL	41-3-7
STEERING PRIORITY/CONTROL VALVE INSTALLATION	41-3-8
STEERING TUBE LINES INSTALLATION	41-3-9
STEERING HAND PUMP INSTALLATION	41-3-11
STEERING HAND PUMP & PRIORITY/CONTROL VALVE REMOVE/INSTALL - TJ280/330 AND T9010/20 TRACTORS.....SECTION 41, CHAPTER 4 (Book 5 - 87525646)	
SPECIAL TOOLS	41-4-2
SPECIAL TORQUE VALUES	41-4-2
STEERING HAND PUMP REMOVAL	41-4-3
STEERING TUBE LINES REMOVAL	41-4-5
STEERING PRIORITY/CONTROL VALVE REMOVAL	41-4-7
STEERING PRIORITY/CONTROL VALVE INSTALLATION	41-4-10
STEERING TUBE LINES INSTALLATION	41-4-13
STEERING HAND PUMP INSTALLATION	41-4-15
STEERING SYSTEM HOW IT WORKS.....SECTION 41, CHAPTER 5 (Book 5 - 87525646)	
ELECTROHYDRAULIC STEERING SYSTEM (EHPS)	41-5-3
PRIORITY / STEERING CONTROL VALVE (EHPS)	41-5-4
EHPS STEERING SYSTEM	41-5-6
Engine Running Steering in Neutral Position	41-5-7
Engine Running, Turning Left	41-5-9
EHPS Steering System	41-5-11
280 AND 330 MODELS STEERING LAYOUT	41-5-12
380, 430, 480 AND 530 MODELS STEERING LAYOUT	41-5-13
FRONT AXLE REMOVAL AND INSTALLATION - TJ380/430/480/530.....SECTION 44, CHAPTER 1 (Book 5 - 87525646)	
SPECIAL TORQUE VALUES	44-1-3
SPECIAL TOOLS	44-1-3
RECOMMENDED TOOLS	44-1-3
FRONT AXLE REMOVAL	44-1-4
FRONT AXLE INSTALLATION	44-1-10
FRONT AXLE REMOVAL AND INSTALLATION - TJ280/330SECTION 44, CHAPTER 2 (Book 5 - 87525646)	
SPECIAL TORQUE VALUES	44-2-3
SPECIAL TOOLS	44-2-3
RECOMMENDED TOOLS	44-2-3
FRONT AXLE REMOVAL	44-2-4
FRONT AXLE INSTALLATION	44-2-10

TJ AND T9000 MASTER TABLE OF CONTENTS

REAR AXLE REMOVAL AND INSTALLATION -

TJ380/430/480/530.....	SECTION 44, CHAPTER 3 (Book 5 - 87525646)
SPECIAL TORQUE VALUES	44-3-3
SPECIAL TOOLS	44-3-3
RECOMMENDED TOOLS	44-3-3
REAR AXLE REMOVAL	44-3-4
REAR AXLE INSTALLATION	44-3-13

REAR AXLE REMOVAL AND INSTALLATION - TJ280/330 SECTION 44, CHAPTER 4 (Book 5 - 87525646)

SPECIAL TORQUE VALUES	44-4-3
SPECIAL TOOLS	44-4-3
RECOMMENDED TOOLS	44-4-3
REAR AXLE REMOVAL	44-4-4
REAR AXLE INSTALLATION	44-4-12

FRONT AND REAR AXLE REPAIR - 300 SERIES AXLES SECTION 44, CHAPTER 5 (Book 5 - 87525646)

AXLE SPECIFICATIONS	44-5-4
SPECIAL TORQUE VALUES	44-5-4
SPECIAL TOOLS	44-5-5
RECOMMENDED TOOLS	44-5-6
GENERAL INFORMATION	44-5-12
AXLE FINAL DRIVE REMOVAL	44-5-12
FINAL DRIVE DISASSEMBLY	44-5-14
PLANETARY CARRIER DISASSEMBLY	44-5-18
PLANETARY CARRIER ASSEMBLY	44-5-19
FINAL DRIVE HOUSING ASSEMBLY	44-5-21
FRONT COVER REMOVAL	44-5-26
FRONT COVER DISASSEMBLY	44-5-28
FRONT COVER ASSEMBLY	44-5-31
RH SIDE BRAKE CARRIER REMOVAL	44-5-37
BRAKE CARRIER/BEARING SUPPORT DISASSEMBLY	44-5-38
RH BRAKE CARRIER ASSEMBLY PROCEDURES	44-5-42
DIFFERENTIAL REMOVAL	44-5-47
DIFFERENTIAL CASE DISASSEMBLY PROCEDURES	44-5-48
DIFFERENTIAL CASE ASSEMBLY PROCEDURES	44-5-51
LH DIFFERENTIAL BEARING CARRIER DISASSEMBLY	44-5-57
LH DIFFERENTIAL BEARING CARRIER ASSEMBLY	44-5-58
ADJUSTING BEVEL PINION GEAR DEPTH	44-5-59
SETTING DIFFERENTIAL CARRIER BEARING PRELOAD	44-5-62
SETTING RING/PINION GEAR BACKLASH	44-5-65
RH BEARING CARRIER/BRAKE SUPPORT INSTALLATION	44-5-69
FRONT COVER INSTALLATION	44-5-70
LEAK TESTING THE SERVICE BRAKE	44-5-73
LEAK TESTING THE PARK BRAKE	44-5-74
LEAK TESTING THE DIFFERENTIAL LOCK	44-5-75
FINAL DRIVE INSTALLATION	44-5-77

FRONT AND REAR AXLE REPAIR - 500 SERIES AXLES SECTION 44, CHAPTER 6 (Book 5 - 87525646)

AXLE IDENTIFICATION	44-6-4
AXLE SPECIFICATIONS	44-6-5
SPECIAL TORQUE VALUES	44-6-5
SPECIAL TOOLS	44-6-6
RECOMMENDED TOOLS	44-6-8
GENERAL INFORMATION	44-6-13
AXLE FINAL DRIVE REMOVAL	44-6-13
FINAL DRIVE DISASSEMBLY	44-6-15

Download this document.

Click the link below.

**You can download the most perfect
and complete manual in the world
immediately.**



Click Link Below



Download Now!

[Click Here To Get Instant Access](#)

Thank you so much for reading.

TJ AND T9000 MASTER TABLE OF CONTENTS

PLANETARY CARRIER DISASSEMBLY	44-6-19
PLANETARY CARRIER ASSEMBLY	44-6-20
FINAL DRIVE HOUSING ASSEMBLY	44-6-22
PINION CARRIER REMOVAL	44-6-28
PINION CARRIER DISASSEMBLY	44-6-32
PINION CARRIER ASSEMBLY	44-6-34
BRAKE CARRIER/BEARING SUPPORT REMOVAL	44-6-39
BRAKE CARRIER/BEARING SUPPORT DISASSEMBLY	44-6-40
RH BRAKE CARRIER ASSEMBLY PROCEDURES	44-6-44
DIFFERENTIAL REMOVAL AND DISASSEMBLY	44-6-49
DIFFERENTIAL CASE ASSEMBLY PROCEDURES	44-6-53
LH DIFFERENTIAL BEARING SUPPORT DISASSEMBLY	44-6-59
LH DIFFERENTIAL BEARING SUPPORT ASSEMBLY	44-6-60
ADJUSTING BEVEL PINION GEAR DEPTH	44-6-61
SETTING DIFFERENTIAL CARRIER BEARING PRELOAD	44-6-64
SETTING RING/PINION GEAR BACKLASH	44-6-67
CHECKING FOR CORRECT BEVEL PINION/GEAR TOOTH CONTACT	44-6-68
BRAKE CARRIER/BEARING SUPPORT INSTALLATION	44-6-70
PERFORMING THE BRAKE LEAK DOWN TEST	44-6-73
DIFFERENTIAL LOCK LEAK TEST	44-6-74
FINAL DRIVE INSTALLATION	44-6-77
 FRONT AND REAR AXLE REPAIR - 400 SERIES AXLES	 SECTION 44, CHAPTER 7 (Book 5 - 87525646)
AXLE IDENTIFICATION	44-7-4
AXLE SPECIFICATIONS	44-7-5
SPECIAL TORQUE VALUES	44-7-5
SPECIAL TOOLS	44-7-6
RECOMMENDED TOOLS	44-7-7
GENERAL INFORMATION	44-7-13
AXLE FINAL DRIVE REMOVAL	44-7-13
FINAL DRIVE DISASSEMBLY	44-7-15
PLANETARY CARRIER DISASSEMBLY	44-7-19
PLANETARY CARRIER ASSEMBLY	44-7-20
FINAL DRIVE HOUSING ASSEMBLY	44-7-22
FRONT COVER REMOVAL	44-7-28
FRONT COVER DISASSEMBLY	44-7-31
FRONT COVER ASSEMBLY	44-7-33
RH SIDE BRAKE CARRIER REMOVAL	44-7-39
BRAKE CARRIER/BEARING SUPPORT DISASSEMBLY	44-7-40
RH BRAKE CARRIER ASSEMBLY PROCEDURES	44-7-44
DIFFERENTIAL REMOVAL	44-7-49
DIFFERENTIAL CASE DISASSEMBLY PROCEDURES	44-7-50
DIFFERENTIAL CASE ASSEMBLY PROCEDURES	44-7-53
LH DIFFERENTIAL BEARING CARRIER DISASSEMBLY	44-7-59
LH DIFFERENTIAL BEARING CARRIER ASSEMBLY	44-7-60
ADJUSTING BEVEL PINION GEAR DEPTH	44-7-61
SETTING DIFFERENTIAL CARRIER BEARING PRELOAD	44-7-64
SETTING RING/PINION GEAR BACKLASH	44-7-67
RH BEARING CARRIER/BRAKE SUPPORT INSTALLATION	44-7-71
FRONT COVER INSTALLATION	44-7-72
LEAK TESTING THE SERVICE BRAKE	44-7-75
LEAK TESTING THE PARK BRAKE	44-7-76
LEAK TESTING THE DIFFERENTIAL LOCK	44-7-77
FINAL DRIVE INSTALLATION	44-7-79