

Document Title: Engine, description	Function Group: 200	Information Type: Service Information	Date: 2014/3/8 0
Profile: CWL, L25B [GB]			

Engine, description

Machines with **SN 1750001 – / – 1753000** are fitted with the VOLVO D3D engine.


The engine is a four-cylinder, four-stroke, in-line diesel engine with direct injection and oil/air cooling.

Machines **from SN 1753001 –** are fitted with the VOLVO D3.6D engine.

he engine is a four-cylinder, four-stroke, in-line diesel engine with direct injection, oil/air cooling and externally controlled exhaust gas recirculation (EGR).


The engine data plate specifies model, engine number and power data. The engine number is also stamped into the crankcase. Model and engine number must be specified when ordering spare parts. The direction of rotation is found on the flywheel, anticlockwise. Firing order: 1-3-4-2 (cylinder no. 1 on the flywheel side).

IMPORTANT! Adjustments to the regulator may only be performed by trained staff in an authorized central repair workshop.

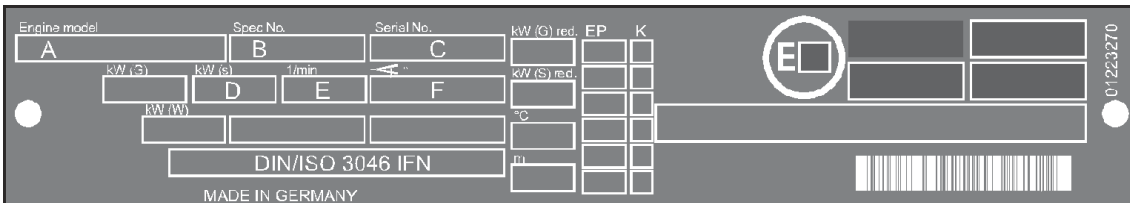

V1044195

Figure 1
Engine data plate up to SN 1753000

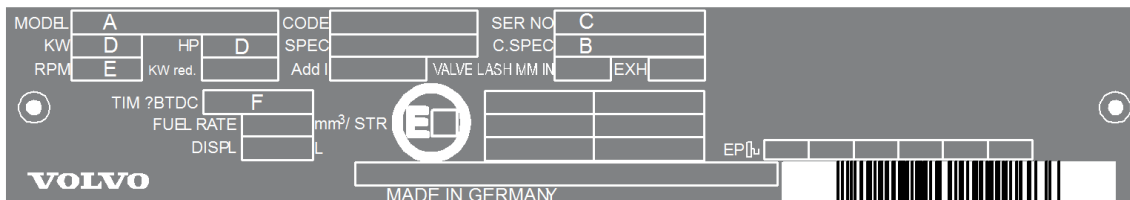


V1044234

Figure 2
Engine data plate from SN 1753001

- A. Engine type
- B. Spare part number
- C. Engine number
- D. Capacity
- E. Rated speed
- F. Timing setting

Components, servicing view

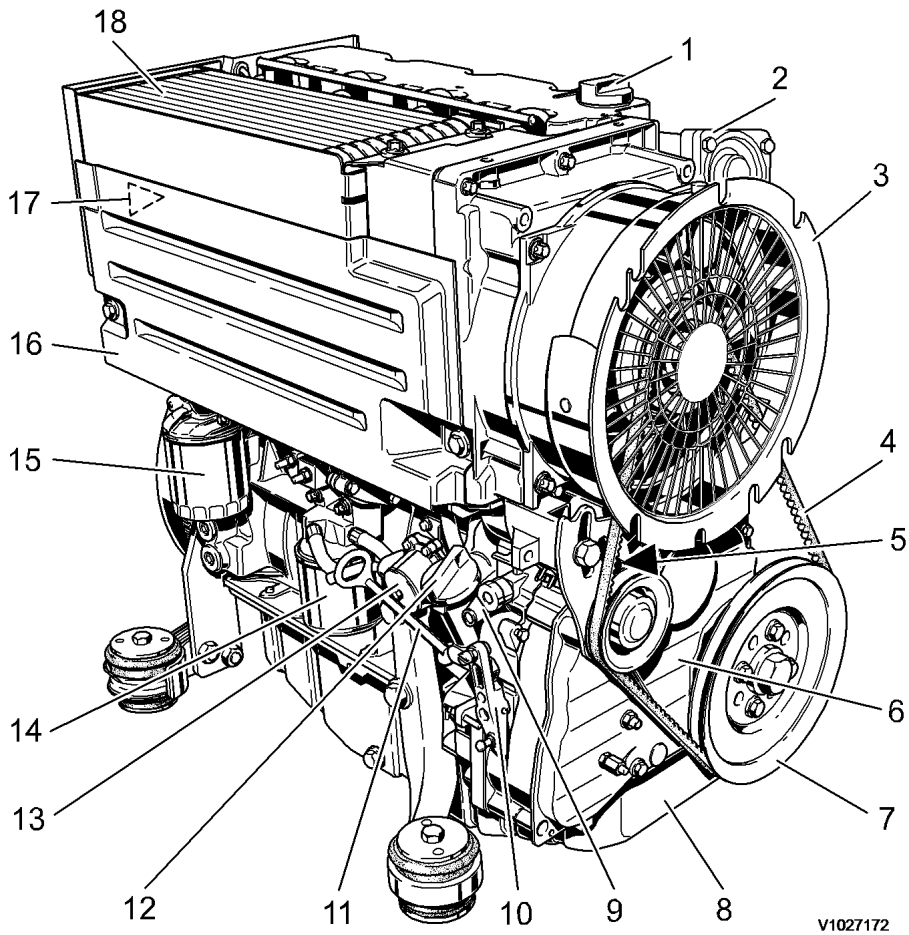


V1027172

Figure 3
Components, servicing view

1. Oil filler port (valve cover)
2. Air inlet pipe
3. Fan with integrated alternator
4. V-rib belt
5. Engine stop solenoid
6. Gear housing cover, timing belt cover
7. V-belt roller, crankshaft
8. Oil sump
9. Start/stop lever
10. Engine speed adjustment
11. Oil dipstick
12. Oil filler pipe
13. Fuel pump
14. Fuel filter
15. Oil filter
16. Cooling air baffle
17. Injection pumps
18. Oil cooler

Components, exhaust view

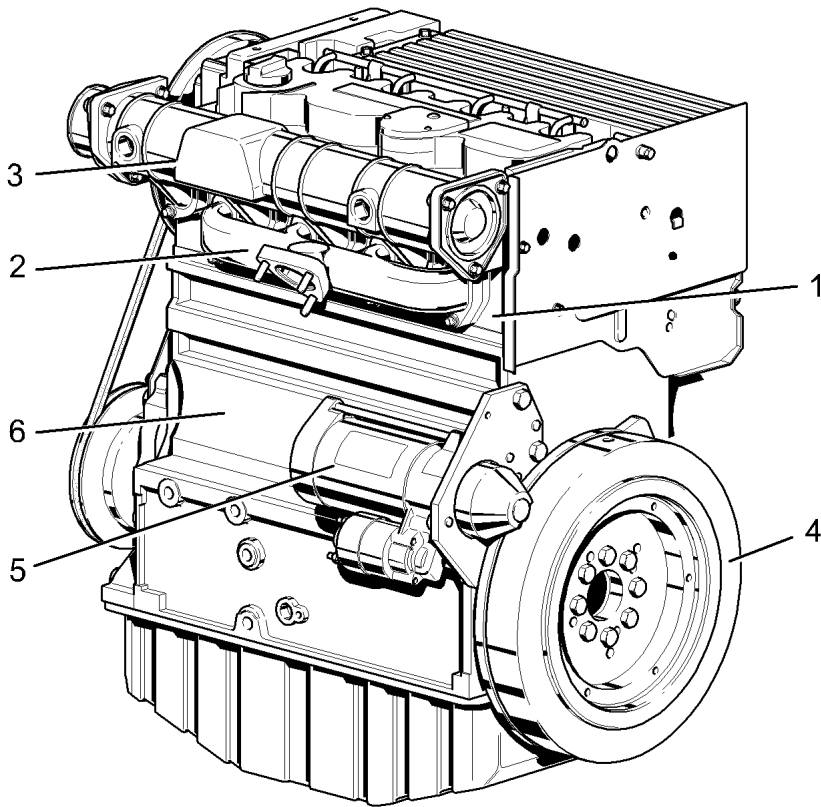

V1027173

Figure 4
Components, exhaust view

1. Cylinder head
2. Exhaust manifold
3. Air inlet pipe
4. Flywheel
5. Starter
6. Crankcase

Exhaust gas recirculation (EGR)

In order to comply with emission limits, the engine is equipped with an externally controlled exhaust gas recirculation system, which directs some of the exhaust gas back into the combustion air. The oxygen content of this exhaust gas is low, which serves to lower the peak combustion temperature, thereby reducing generation of nitrogen oxides (NO_x).

The exhaust gas required for recirculation is directed from the cylinders via a line system and travels through the EGR valve via the exhaust induction port directly into the inlet ports of the cylinder head, where it is re-aspirated by the engine.

The EGR valve is active when the load is between 0 and 75%. If the load is greater than 75%, the EGR valve remains closed to prevent oxygen deficiency through high smoke formation.

The EGR valve is controlled via a control rod displacement sensor. An LED on the control rod displacement sensor indicates the status of the exhaust gas recirculation system. The LED is lit when the system is active.

The control rod displacement sensor and EGR valve are supplied power via connector x40 (stop solenoid Y6).

Oil from rocker arm lubrication is used to cool the EGR valve. This oil travels back to the oil sump via the oil return system.

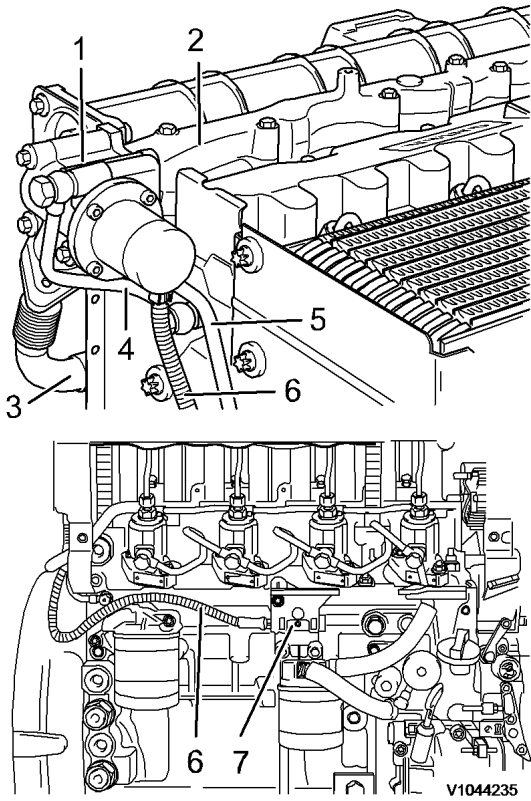


Figure 5
Externally controlled exhaust gas recirculation

1. EGR valve
2. Exhaust induction port
3. Exhaust supply
4. Lubrication oil from cooling taken from rocker arm lubrication
5. Lubrication oil return to oil sump
6. Electrical cable for control rod displacement sensor
7. Control rod displacement sensor

Document Title: Engine, removing	Function Group: 210	Information Type: Service Information	Date: 2014/3/8 0
Profile: CWL, L25B [GB]			

Engine, removing

Op nbr 210-070

1. Place the machine in service position.
2. Switch off the battery disconnect switch and disconnect the positive battery terminal.

WARNING

The work involves handling heavy components - failure to stay alert may result in severe crushing injuries.

3. Open the engine hood and unscrew the fixing bolts.
4. Lift off the engine hood and place it on a suitable surface.
5. Remove the air flow guide plate (1).

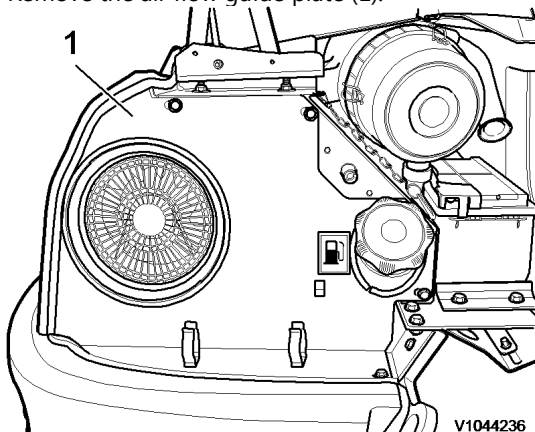


Figure 1

6. Disconnect the pin plug connection of the tail lights.
7. Detach the engine hood catch (1) at the counterweight.


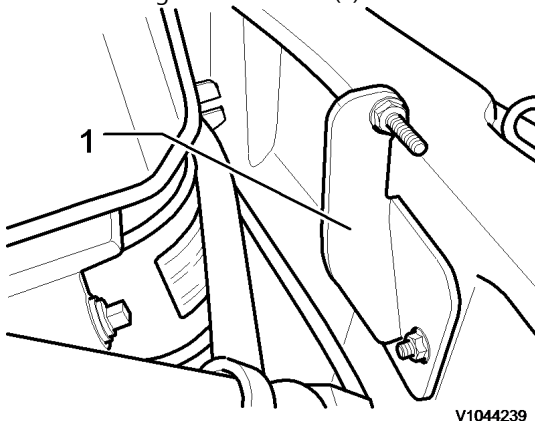


Figure 2


8. Attach a lifting device (E-tool) to the counterweight and suspend it from the crane using suitable hoisting equipment.

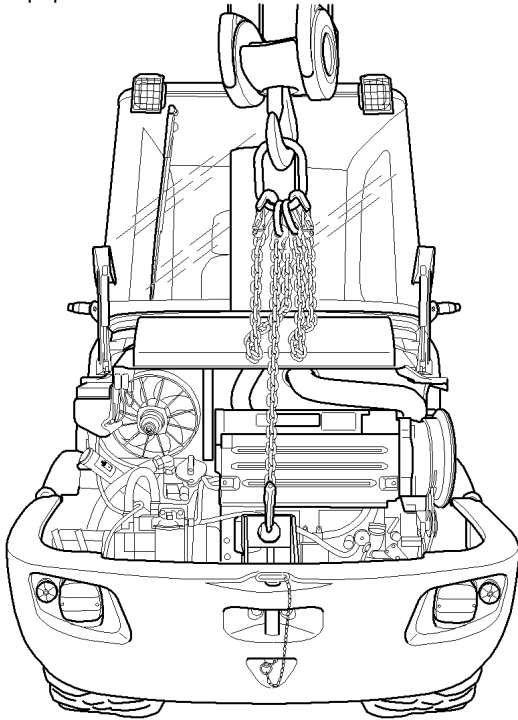

V1044240

Figure 3

9. Remove the counterweight retaining bracket (arrows).

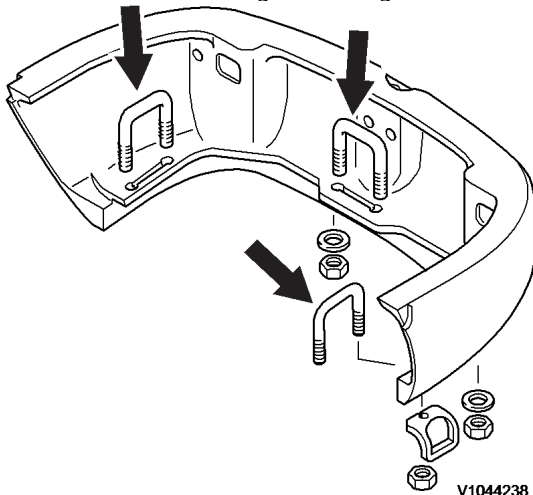

V1044238

Figure 4

10. Slowly raise the counterweight and remove towards the rear.

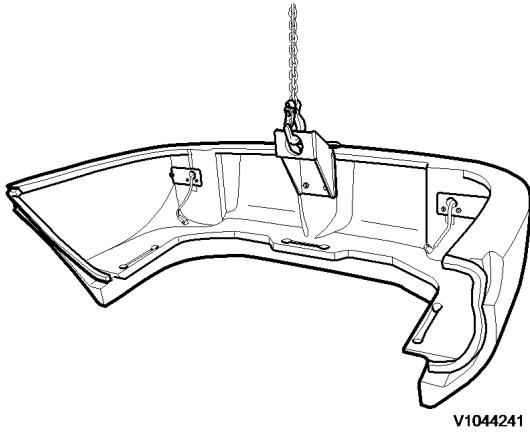


Figure 5

NOTE!

Lower the counterweight onto a suitable surface.

11. Detach the throttle cable from the engine. Unscrew the bracket (1) and slacken the jam nuts (2).

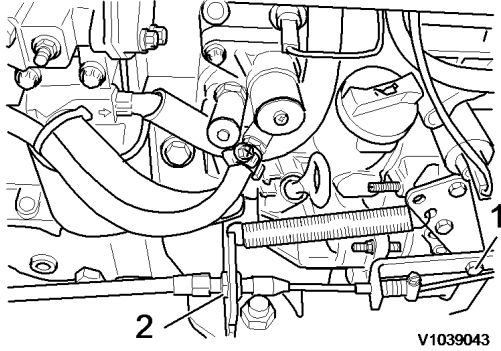


Figure 6

12. Remove heater connections (1) and (2) and seal with plugs.

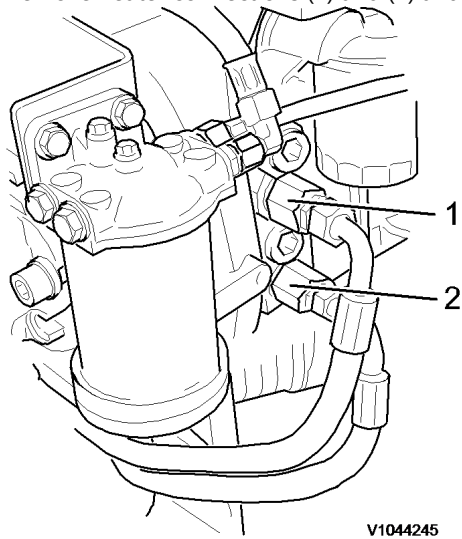


Figure 7

NOTE!

Mark supply and return.

13. Remove air duct cover

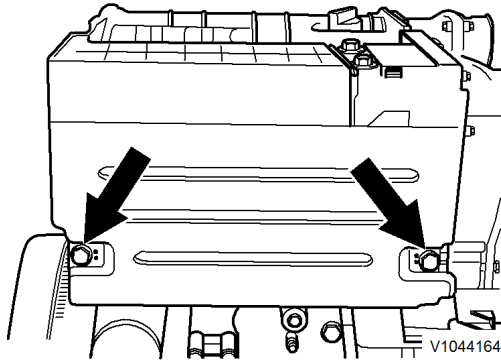


Figure 8

14. Undo the hose clamp with clamping tongs and detach the fuel return hose (1).

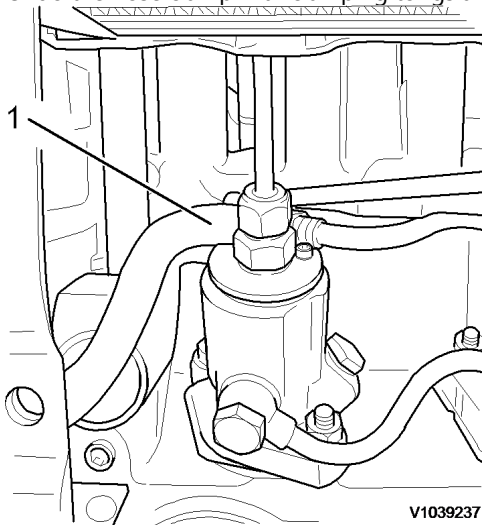


Figure 9

NOTICE

When a hose has been disconnected, plug both the hose and the connection immediately. The hoses should be marked for correct connection.

15. Undo the hose clamp (1) and detach the fuel hose (2) from the fuel pump.

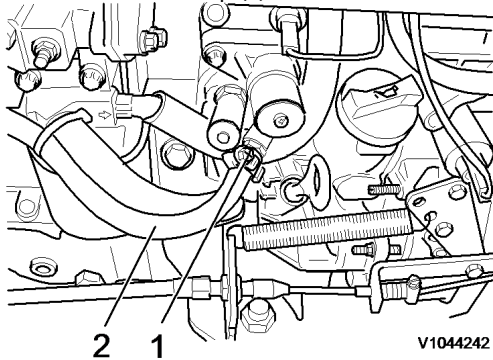


Figure 10

16. Unscrew the bolt (1) at the connection flange and remove the bracket (2) with the fuel filter/water separator assembly.

Thank you very much for reading.

This is part of the demo page.

GET MORE:

Hydraulic

System, Setting

Instructions, Functional

Description, Electrical

System And more.....

Click Here BUY NOW

Then Instant Download

the Complete Manual.