



Illustration 1

g00673178

1. Apply lubricant to the new O-ring seal (1). Install new O-ring seal (1) in the cylinder head.

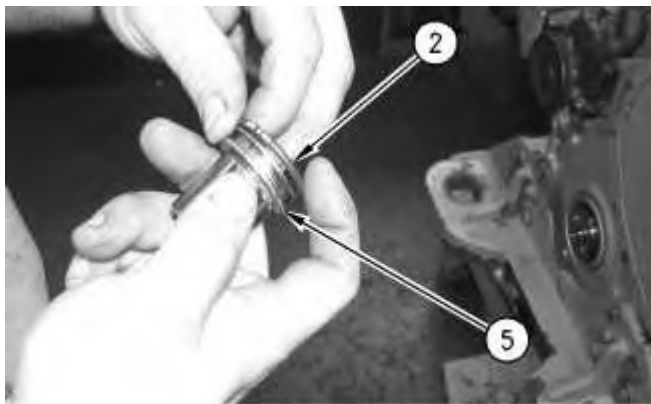


Illustration 2

g00672733

2. Apply lubricant to the new O-ring seal (2). Install new O-ring seal (2) on the tube assembly (5).


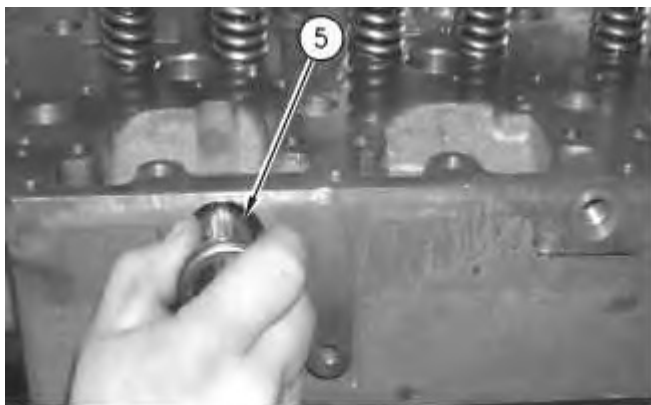


Illustration 3

g00672742

3. Install the O-ring seal and tube assembly (5) in the cylinder head.
-

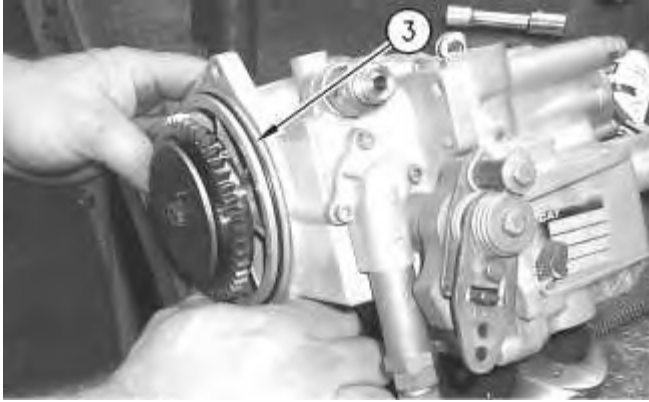

---

Illustration 4

g00673180

4. Apply lubricant to the new O-ring seal (3). Install new O-ring seal (3) on the governor.




---

Illustration 5

g00673182

5. Place the governor in position on the engine.

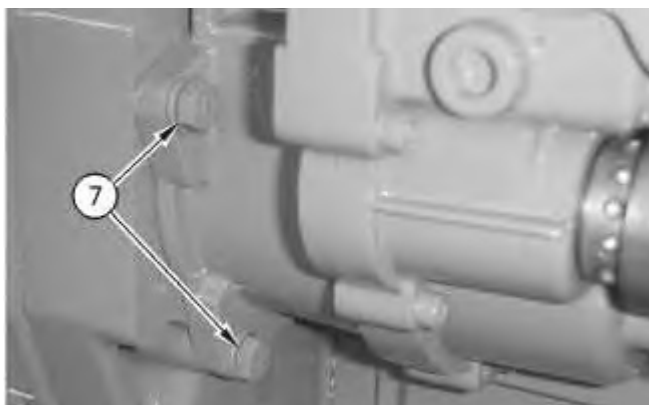

---

Illustration 6

g00613563

6. Install the washers and bolts (7) that hold the governor in place.
-

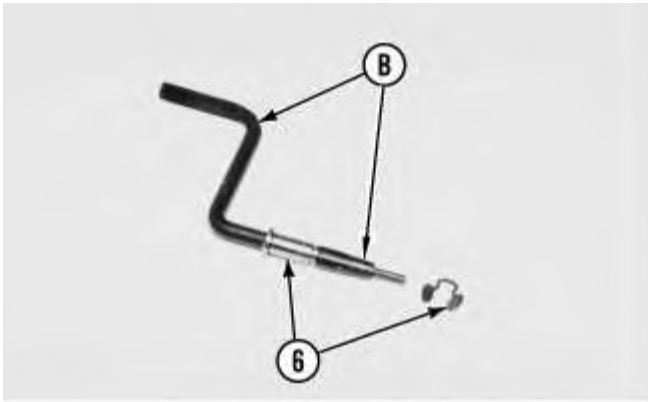


Illustration 7

g00672755

7. Install clevis pin (6) in Tooling (B).


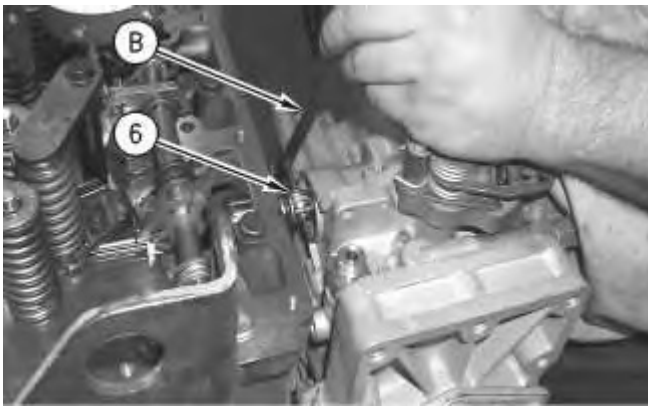


Illustration 8

g00672752

8. Use Tooling (B) to install clevis pin (6) and the clip.
9. Check the fuel setting adjustment. Refer to Testing and Adjusting, SENR5118.

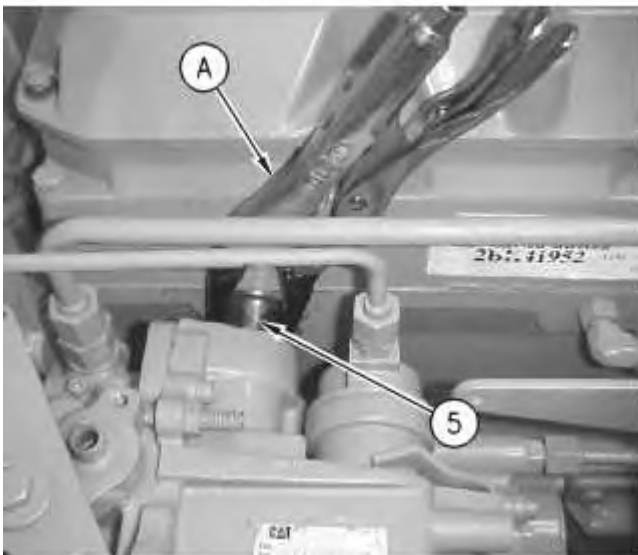

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**