

## ALTERNATIVE LUBRICANTS

Conditions in certain geographical areas outside the United States and Canada may require different lubricant recommendations than the ones printed in this technical manual or the operator's manual. Consult with your John Deere Dealer, or Sales Branch, to obtain the alternative lubricant recommendations.

**IMPORTANT: Use of alternative lubricants could cause reduced life of the component.**

If alternative lubricants are to be used, it is recommended that the factory fill be thoroughly removed before switching to any alternative lubricant.

## SYNTHETIC LUBRICANTS

Synthetic lubricants may be used in John Deere equipment if they meet the applicable performance requirements (industry classification and/or military specification) as shown in this manual.

The recommended air temperature limits and service or lubricant change intervals should be maintained as shown in the operator's manual.

Avoid mixing different brands, grades, or types of oil. Oil manufacturers blend additives in their oils to meet certain specifications and performance requirements. Mixing different oils can interfere with the proper functioning of these additives and degrade lubricant performance.

## LUBRICANT STORAGE

All machines operate at top efficiency only when clean lubricants are used. Use clean storage containers to handle all lubricants. Store them in an area protected from dust, moisture, and other contamination. Store drums on their sides. Make sure all containers are properly marked as to their contents. Dispose of all old, used containers and their contents properly.

## MIXING OF LUBRICANTS

In general, avoid mixing different brands or types of lubricants. Manufacturers blend additives in their lubricants to meet certain specifications and performance requirements. Mixing different lubricants can interfere with the proper functioning of these additives and lubricant properties which will downgrade their intended specified performance.

## CHASSIS GREASE

Use the following grease based on the air temperature range. Operating outside of the recommended grease air temperature range may cause premature failures.


**IMPORTANT: ONLY use a quality grease in this application. DO NOT mix any other greases in this application. DO NOT use any BIO-GREASE in this application.**

The following John Deere grease is **PREFERRED**:

- **NON-CLAY HIGH-TEMPERATURE EP GREASE®—JDM J13E4, NLGI Grade 2.**
- **GREASE-GARD™—JDM J13E4, NLGI Grade 2.**

Other greases may be used if above preferred John Deere grease is not available, provided they meet the following specification:

- John Deere Standard JDM J13E4, NLGI Grade 2.

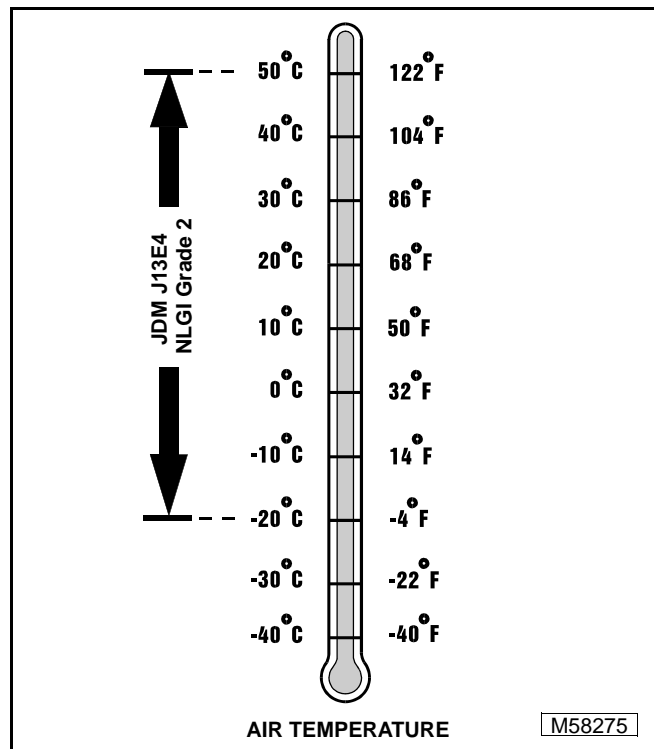

**John Deere Dealers:** You may want to cross-reference the following publications to recommend the proper grease for your customers:

- Module DX, GRE A1 in JDS-G135;
- Section 530, Lubricants & Hydraulics, of the John Deere Merchandise Sales Guide;
- Lubrication Sales Manual P17032.

## COOLANT SPECIFICATIONS

### GASOLINE ENGINE COOLANT

The engine cooling system when filled with a proper dilution mixture of anti-freeze and deionized or distilled water provides year-round protection against corrosion, cylinder or liner pitting, and winter freeze protection down to  $-37^{\circ}\text{C}$  ( $-34^{\circ}\text{F}$ ).

**ONLY** use a quality Automobile and Light Duty Engine Service **ethylene glycol base coolant**, meeting the following specification:

The following John Deere coolant is **PREFERRED**:

- **PRE-DILUTED DIESEL ENGINE ANTI-FREEZE/ SUMMER COOLANT™ (TY16036).**
- **ASTM D3306 (JDM H24C1).**

This coolant satisfies specifications for “Automobile and Light Duty Engine Service” and is safe for use in John Deere Lawn and Grounds Care/Golf and Turf Division equipment, including aluminum block gasoline engines and cooling systems.

The above preferred pre-diluted anti-freeze provides:

- adequate heat transfer
- corrosion-resistant chemicals for the cooling system
- compatibility with cooling system hose and seal material
- protection during extreme cold and extreme hot weather operations
- chemically pure water for better service life
- compliance with ASTM D4656 (JDM H24C2) specifications

If above preferred pre-diluted coolant is not available, the following John Deere concentrate is **recommended**:

- **DIESEL ENGINE ANTI-FREEZE/SUMMER COOLANT CONCENTRATE™ (TY16034).**

If either of above recommended engine coolants are available use any Automobile and Light Duty Engine Service **ethylene glycol base coolant**, meeting the following specification:

- ASTM D3306 (JDM H24C1).

Read container label completely before using and follow instructions as stated.

**IMPORTANT:** To prevent engine damage, **DO NOT** use pure anti-freeze or less than a 50% anti-freeze mixture in the cooling system. **DO NOT** mix or add any additives/conditioners to the cooling system in Lawn and Grounds Care/Golf and Turf Division equipment. Water used to dilute engine coolant concentrate must be of

high quality—clean, clear, potable water (low in chloride and hardness—Table 1) is generally acceptable. **DO NOT** use salt water. Deionized or distilled water is ideal to use. Coolant that is not mixed to these specified levels and water purity can cause excessive scale, sludge deposits, and increased corrosion potential.

#### Water Quality

Property	Requirements
Total Solids, Maximum	340 ppm (20 grns/gal)
Total Hardness, Max.	170 ppm (10 grns/gal)
Chloride (as Cl), Max.	40 ppm (2.5 grns/gal)
Sulfate (as $\text{SO}_4$ ), Max.	100 ppm (5.8 grns/gal)

Mix 50 percent anti-freeze concentrate with 50 percent distilled or deionized water. This mixture and the pre-diluted mixture (TY16036) will protect the cooling system down to  $-37^{\circ}\text{C}$  ( $-34^{\circ}\text{F}$ ) and up to  $108^{\circ}\text{C}$  ( $226^{\circ}\text{F}$ ).

Certain geographical areas may require lower air temperature protection. See the label on your anti-freeze container or consult your John Deere dealer to obtain the latest information and recommendations.

### GASOLINE ENGINE COOLANT DRAIN INTERVAL

When using **John Deere Pre-Diluted (TY16036)** Automobile and Light Duty Engine Service coolants, drain and flush the cooling system and refill with fresh coolant mixture every **36 months or 3,000 hours** of operation, whichever comes first.

When using **John Deere Concentrate (TY16034)** Automobile and Light Duty Engine Service coolants, drain and flush the cooling system and refill with fresh coolant mixture every **24 months or 2,000 hours** of operation, whichever comes first.


If above John Deere Automobile and Light Duty Engine Service coolants **are not** being used; drain, flush, and refill the cooling system according to instructions found on product container or in equipment operator’s manual or technical manual.

### SERIAL NUMBER LOCATION


When ordering parts or submitting a warranty claim, it is IMPORTANT that the machine product identification number and component serial numbers are included.

The location of the machine identification number and component serial numbers are shown.




### MACHINE IDENTIFICATION NUMBER

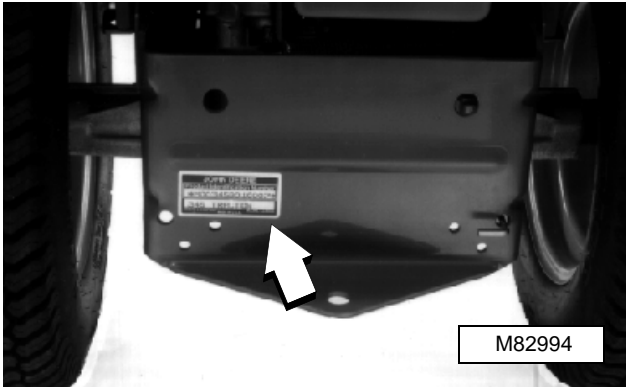


### ENGINE SERIAL NUMBER

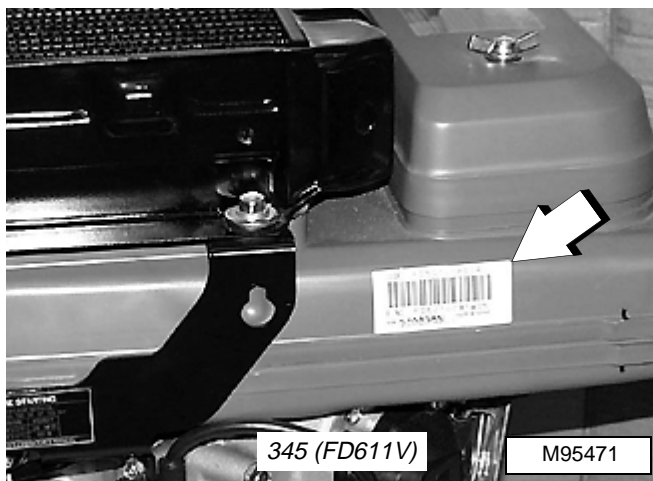

### CARBURETOR SERIAL NUMBER

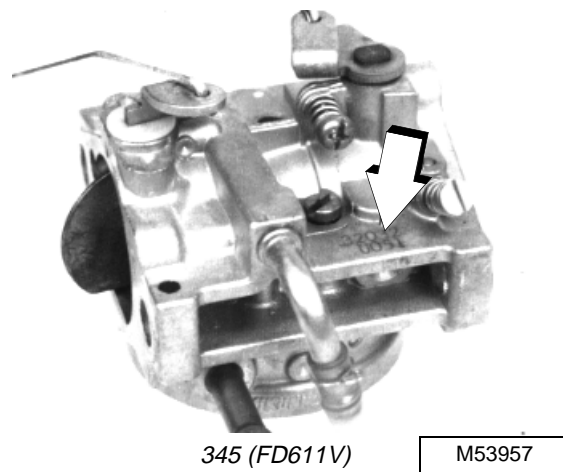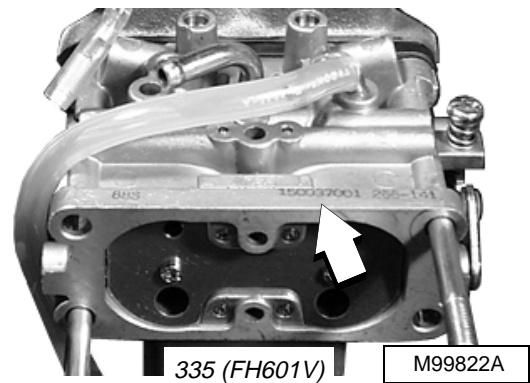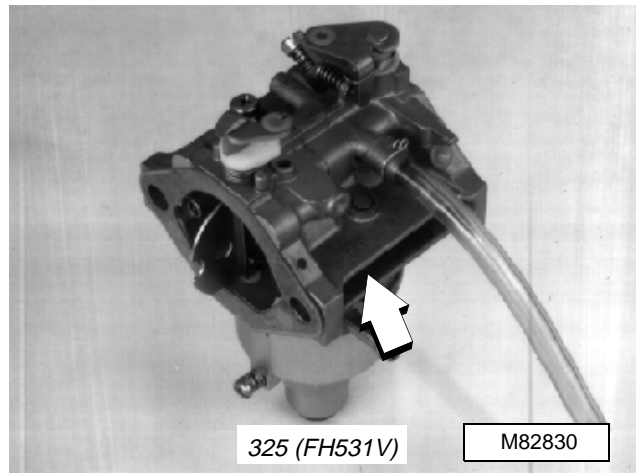

## HYDROSTATIC TRANSMISSION SERIAL NUMBER

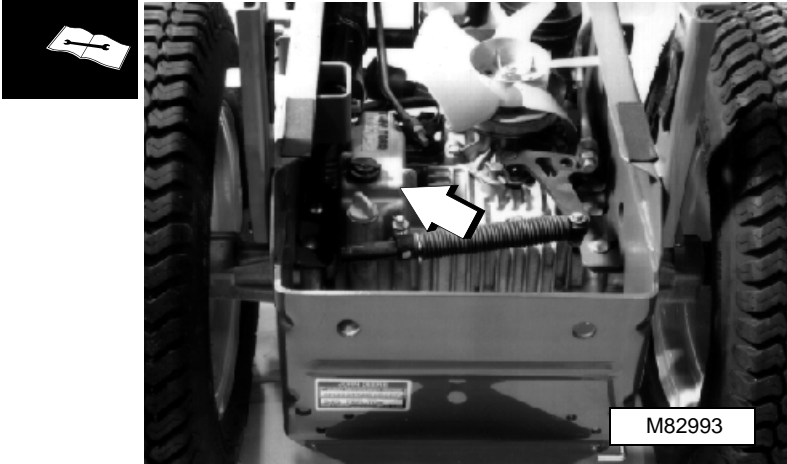

# CONTENTS

	Page
<b>SPECIFICATIONS</b> .....	<b>3</b>
TEST AND ADJUSTMENT SPECIFICATIONS .....	3
REPAIR SPECIFICATIONS .....	3
SERVICE PARTS KITS .....	5
SPECIAL OR ESSENTIAL TOOLS .....	6
OTHER MATERIALS .....	6
<b>COMPONENT LOCATION</b> .....	<b>7</b>
ENGINE COMPONENTS .....	7
<b>TROUBLESHOOTING</b> .....	<b>8</b>
ENGINE AND FUEL SYSTEM TROUBLESHOOTING CHART .....	8
ENGINE AND FUEL SYSTEM TROUBLESHOOTING CHART .....	9
ENGINE TROUBLESHOOTING GUIDE .....	10
STARTING MOTOR TROUBLESHOOTING GUIDE .....	14
<b>TESTS AND ADJUSTMENTS</b> .....	<b>15</b>
THROTTLE CABLE CHECK AND ADJUSTMENT .....	15
CHOKE PLATE CHECK AND ADJUSTMENT .....	15
GOVERNOR STATIC ADJUSTMENT .....	17
SLOW IDLE SPEED ADJUSTMENT .....	17
FAST IDLE SPEED ADJUSTMENT .....	18
VALVE CLEARANCE, CHECK AND ADJUSTMENT .....	18
CYLINDER COMPRESSION PRESSURE TEST .....	19
CRANKCASE VACUUM TEST .....	20
ENGINE OIL PRESSURE TEST .....	21
FUEL PUMP TEST .....	22
SPARK TEST .....	23
SPARK PLUG GAP ADJUSTMENT .....	23
<b>REPAIR</b> .....	<b>24</b>
THROTTLE CONTROL LEVER AND CABLE .....	24
ENGINE REMOVAL AND INSTALLATION .....	24
MUFFLER REMOVAL AND INSTALLATION .....	26
AIR CLEANER ASSEMBLY .....	26
CARBURETOR REMOVAL AND INSTALLATION .....	27
CARBURETOR COMPONENT LOCATION .....	28
CARBURETOR DISASSEMBLY AND ASSEMBLY .....	29
FUEL PUMP REPLACEMENT .....	30
BLOWER HOUSING REMOVAL AND INSTALLATION .....	30
FLYWHEEL REMOVAL AND INSTALLATION .....	31
BREATHER INSPECTION .....	31
ROCKER ARM REMOVAL AND INSTALLATION .....	32
CYLINDER HEAD REMOVAL AND INSTALLATION .....	33
CYLINDER HEAD INSPECTION .....	34
ANALYZE VALVES .....	35
RECONDITION VALVE SEATS .....	36
LAP VALVES .....	37





**Suggest:**

**If the above button click is invalid.**

**Please download this document**

**first, and then click the above link**

**to download the complete manual.**

**Thank you so much for reading**