

SERVICE MANUAL

T7.230 / T7.245 / T7.260

T7.230 AutoCommand™ / T7.245 AutoCommand™

T7.260 AutoCommand™ / T7.270 AutoCommand™

Tier 4B (final)

Tractor

Part number 47936455

1st edition English

February 2016





SERVICE MANUAL

**T7.230 AutoCommand™, T7.230, T7.245 AutoCommand™, T7.245, T7.260
AutoCommand™, T7.260, T7.270 AutoCommand™**

Link Product / Engine

Product	Market Product	Engine
T7.230 AutoCommand™	North America	F4DFE613K*B006
T7.245 AutoCommand™	North America	F4DFE613J*B006
T7.260 AutoCommand™	North America	F4DFE613H*B003
T7.270 AutoCommand™	North America	F4DFE613B*B006
T7.230	North America	F4DFE613K*B006
T7.245	North America	F4DFE613J*B006
T7.260	North America	F4DFE613H*B003

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.218] Fuel injection system.....	10.3
[10.254] Intake and exhaust manifolds and muffler	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.5
[10.400] Engine cooling system	10.6
[10.414] Fan and drive	10.7
[10.408] Oil cooler and lines.....	10.8
[10.101] Cylinder heads	10.9
Clutch	18
[18.112] Slip clutch or flywheel damper	18.1
Transmission.....	21
[21.113] Powershift transmission	21.1
[21.155] Powershift transmission internal components.....	21.2
[21.160] Creeper	21.3
[21.166] Overdrive.....	21.4
[21.504] Continuously Variable Transmission (CVT)	21.5
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.6
[21.507] Continuously Variable Transmission (CVT) internal components.....	21.7
[21.506] Continuously Variable Transmission (CVT) lubrication system	21.8
[21.109] Transmission cooler and lines.....	21.9
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2

Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.122] Axle suspension control	25.4
Rear axle system	27
[27.100] Powered rear axle	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
[27.126] Spur gear and final drives	27.4
Power Take-Off (PTO)	31
[31.101] Rear mechanical control	31.1
[31.104] Rear electro-hydraulic control	31.2
[31.114] Two-speed rear Power Take-Off (PTO)	31.3
[31.116] Three-speed rear Power Take-Off (PTO)	31.4
[31.119] Four-speed rear Power Take-Off (PTO)	31.5
[31.146] Front Power Take-Off (PTO)	31.6
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.220] Trailer brake hydraulic control	33.3
[33.224] Trailer brake pneumatic control	33.4
[33.350] Anti-lock Brake System (ABS)	33.5
Hydraulic systems	35
[35.000] Hydraulic systems	35.1
[35.300] Reservoir, cooler, and filters	35.2
[35.106] Variable displacement pump	35.3
[35.102] Pump control valves	35.4

[35.105] Charge pump.....	35.5
[35.230] Priority valves	35.6
[35.322] Regulated/Low pressure system	35.7
[35.204] Remote control valves	35.8
[35.220] Auxiliary hydraulic pump	35.9
[35.114] Three-point hitch control valve	35.10
[35.160] Front hitch controls and lines	35.11
[35.162] Front hitch cylinders and lines	35.12
Pneumatic system	36
[36.100] Pneumatic system.....	36.1
Hitches, drawbars, and implement couplings.....	37
[37.120] Rear three-point hitch linkage.....	37.1
[37.110] Rear three-point hitch	37.2
[37.162] Front hitch.....	37.3
[37.106] Automatic pickup hitch	37.4
Frames and ballasting	39
[39.100] Frame	39.1
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders	41.4
[41.432] Autoguidance steering	41.5
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50

[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors	55.2
[55.640] Electronic modules	55.3
[55.015] Engine control system	55.4
[55.301] Alternator	55.5
[55.302] Battery	55.6
[55.011] Fuel tank system	55.7
[55.010] Fuel injection system	55.8
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.9
[55.513] Cab transmission controls	55.10
[55.020] Transmission speed sensors	55.11
[55.021] Transmission pressure sensors	55.12
[55.022] Transmission temperature sensors	55.13
[55.023] Transmission position sensors	55.14
[55.610] Ground speed control	55.15
[55.045] Front axle control system	55.16
[55.048] Rear Power Take-Off (PTO) control system	55.17
[55.049] Front Power Take-Off (PTO) control system	55.18
[55.031] Parking brake electrical system	55.19
[55.035] Remote control valve electric control	55.20
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.21
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.22
[55.047] Steering control system	55.23
[55.523] Cab hitch controls	55.24
[55.130] Rear three-point hitch electronic control system	55.25

[55.911] Global Positioning System (GPS)	55.26
[55.408] Warning indicators, alarms, and instruments	55.27
[55.350] Anti-lock Brake System (ABS) electrical system	55.28
[55.512] Cab controls	55.29
[55.030] Service brake electrical system	55.30
[55.510] Cab or platform harnesses and connectors	55.31
[55.DTC] FAULT CODES	55.32
Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.150] Cab	90.2



INTRODUCTION

Safety rules

Personal safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual you will find the signal words DANGER, WARNING, and CAUTION followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.

 DANGER indicates a hazardous situation that, if not avoided, will result in death or serious injury.

 WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.

 CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.

Machine safety

NOTICE: Notice indicates a situation that, if not avoided, could result in machine or property damage.

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine or property damage. The word Notice is used to address practices not related to personal safety.

Information

NOTE: Note indicates additional information that clarifies steps, procedures, or other information in this manual.

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.

Safety rules - Ecology and the environment

Soil, air, and water quality is important for all industries and life in general. When legislation does not yet rule the treatment of some of the substances that advanced technology requires, sound judgment should govern the use and disposal of products of a chemical and petrochemical nature.

Familiarize yourself with the relative legislation applicable to your country, and make sure that you understand this legislation. Where no legislation exists, obtain information from suppliers of oils, filters, batteries, fuels, anti-freeze, cleaning agents, etc., with regard to the effect of these substances on man and nature and how to safely store, use, and dispose of these substances.

Helpful hints

- Avoid the use of cans or other inappropriate pressurized fuel delivery systems to fill tanks. Such delivery systems may cause considerable spillage.
- In general, avoid skin contact with all fuels, oils, acids, solvents, etc. Most of these products contain substances that may be harmful to your health.
- Modern oils contain additives. Do not burn contaminated fuels and or waste oils in ordinary heating systems.
- Avoid spillage when you drain fluids such as used engine coolant mixtures, engine oil, hydraulic fluid, brake fluid, etc. Do not mix drained brake fluids or fuels with lubricants. Store all drained fluids safely until you can dispose of the fluids in a proper way that complies with all local legislation and available resources.
- Do not allow coolant mixtures to get into the soil. Collect and dispose of coolant mixtures properly.
- The air-conditioning system contains gases that should not be released into the atmosphere. Consult an air-conditioning specialist or use a special extractor to recharge the system properly.
- Repair any leaks or defects in the engine cooling system or hydraulic system immediately.
- Do not increase the pressure in a pressurized circuit as this may lead to a component failure.
- Protect hoses during welding. Penetrating weld splatter may burn a hole or weaken hoses, allowing the loss of oils, coolant, etc.

Battery recycling

Batteries and electric accumulators contain several substances that can have a harmful effect on the environment if the batteries are not properly recycled after use. Improper disposal of batteries can contaminate the soil, groundwater, and waterways. NEW HOLLAND strongly recommends that you return all used batteries to a NEW HOLLAND dealer, who will dispose of the used batteries or recycle the used batteries properly. In some countries, this is a legal requirement.



Mandatory battery recycling

NOTE: The following requirements are mandatory in Brazil.

Batteries are made of lead plates and a sulfuric acid solution. Because batteries contain heavy metals such as lead, CONAMA Resolution 401/2008 requires you to return all used batteries to the battery dealer when you replace any batteries. Do not dispose of batteries in your household garbage.

Points of sale are obliged to:

- Accept the return of your used batteries
- Store the returned batteries in a suitable location
- Send the returned batteries to the battery manufacturer for recycling



SERVICE MANUAL

Engine

**T7.230 AutoCommand™, T7.230, T7.245 AutoCommand™, T7.245, T7.260
AutoCommand™, T7.260, T7.270 AutoCommand™**

Engine - Remove

Prior operation:

Separate the front axle and front frame from the engine, for further information refer to **Front frame - Remove (39.100)**

Prior operation:

Remove the left-hand fuel tank, for further information refer to **Fuel tank - Remove (10.216)**

Prior operation:

Remove the selective catalytic reduction (SRC) muffler, for further information refer to **Selective Catalytic Reduction (SCR) muffler and catalyst - Remove (10.500)**

Prior operation:

Remove the engine hood, for further information refer to **Hood - Remove (90.100)**

⚠ WARNING

Heavy objects!

Lift and handle all heavy components using lifting equipment with adequate capacity. Always support units or parts with suitable slings or hooks. Make sure the work area is clear of all bystanders.

Failure to comply could result in death or serious injury.

W0398A

⚠ WARNING

Avoid injury!


Handle all parts carefully. Do not place your hands or fingers between parts. Use Personal Protective Equipment (PPE) as indicated in this manual, including protective goggles, gloves, and safety footwear.

Failure to comply could result in death or serious injury.

W0208A

NOTICE: Avoid DEF/AdBLUE® contamination of the electrical connector by disconnecting the DEF/AdBLUE® connectors first.


1. Disconnect the radar electrical connector (if fitted).
2. Remove the radar (if fitted).

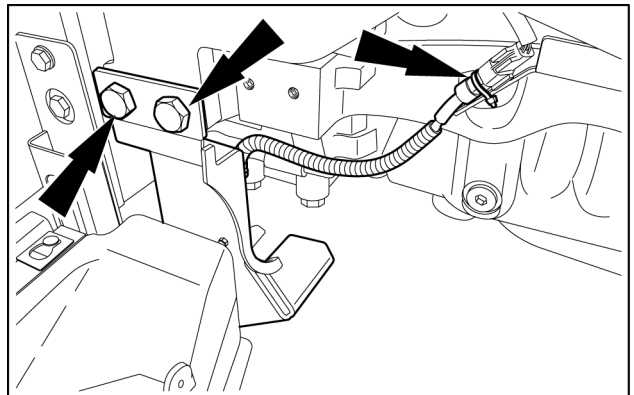

BAIL13TR01648AB 1


Vehicles with front hitch

2. Disconnect the mid-mount pipes from the mid-mount valve.

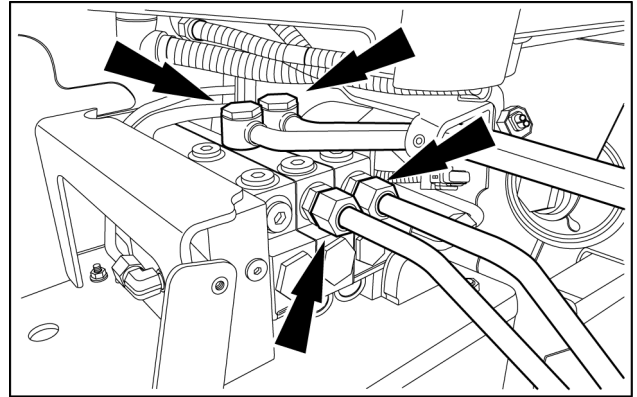


BAIL13TR01645AB 2

3. Remove the front hitch pipes.

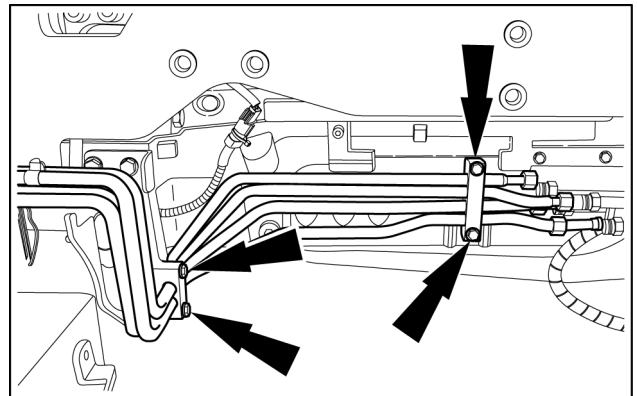


BAIL13TR01647AB 3

4. Remove the starter motor cover.

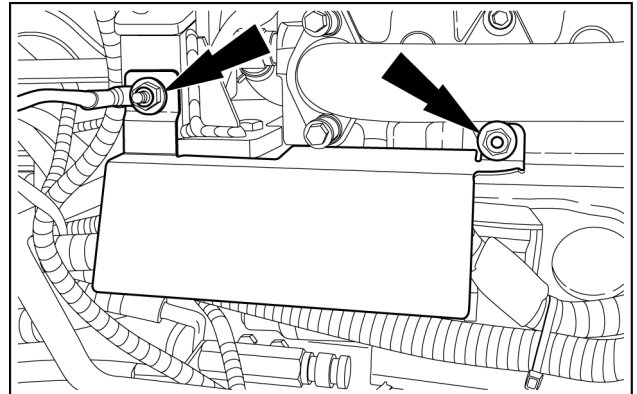


BAIL14TR00276AB 4

5. Remove the oil cooler pipe bracket.

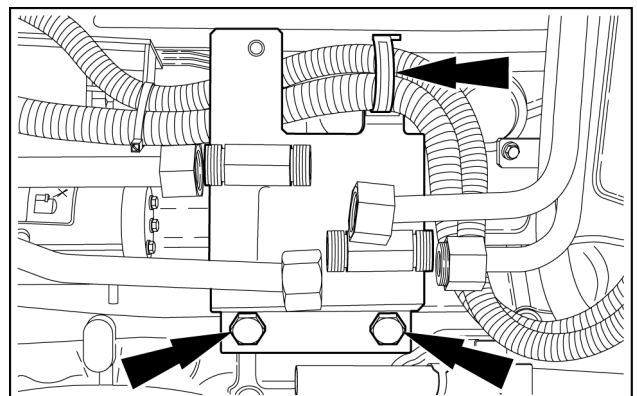


BAIL14TR00277AB 5

6. Detach the fuse box and position it to one side.

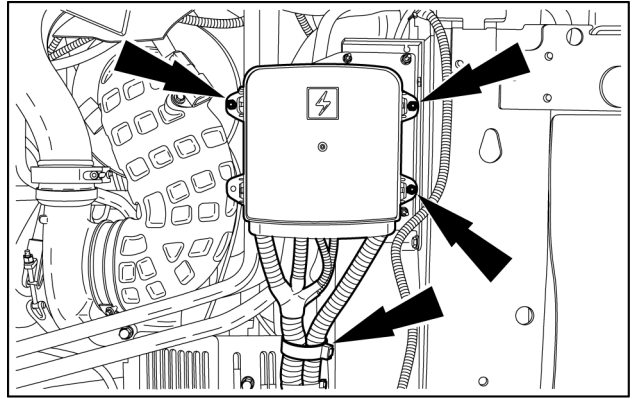


BAIL13TR01663AB 6

7. Disconnect the starter motor positive cables.

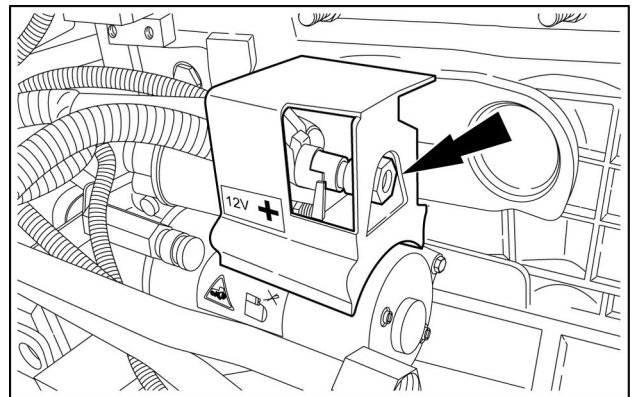


BAIL14TR00278AA 7

8. Disconnect the starter motor electrical connector.

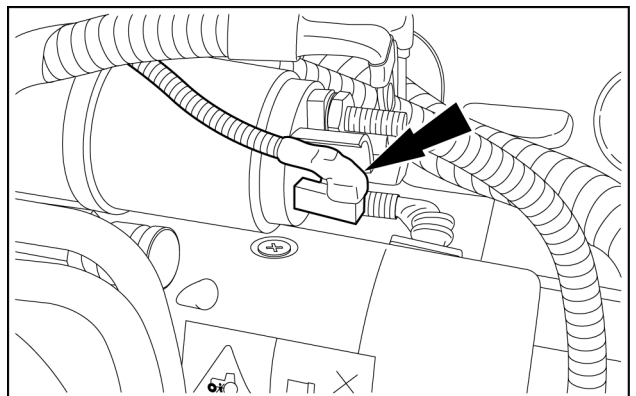


BAIL13TR01660AB 8

9. Disconnect the starter motor negative terminal.

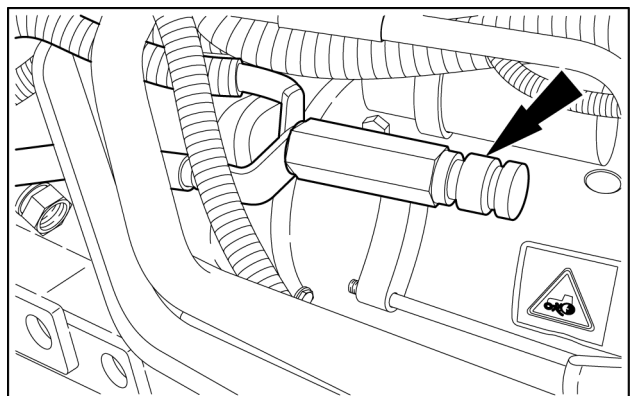


BAIL13TR01661AB 9

10. Disconnect the front axle electrical connectors.

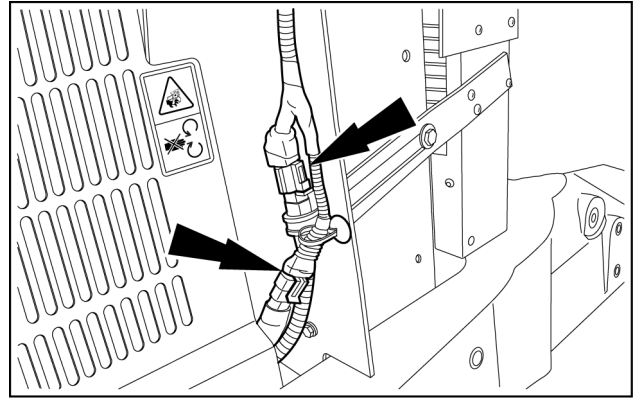


BAIL13TR01683AB 10

11. Disconnect the brake master cylinder oil supply pipes.

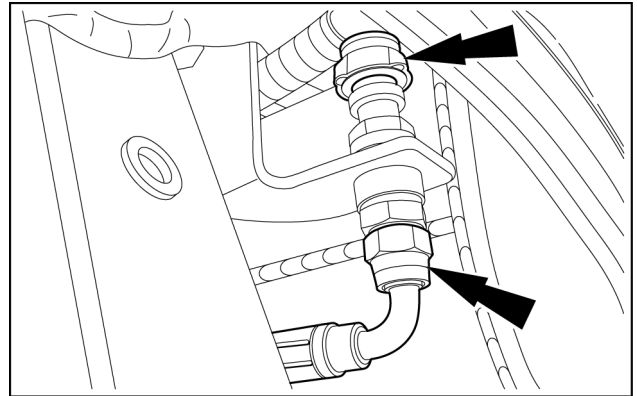

BAIL14TR00279AB 11


12. Disconnect the cab hand rail light electrical connectors (on both sides).

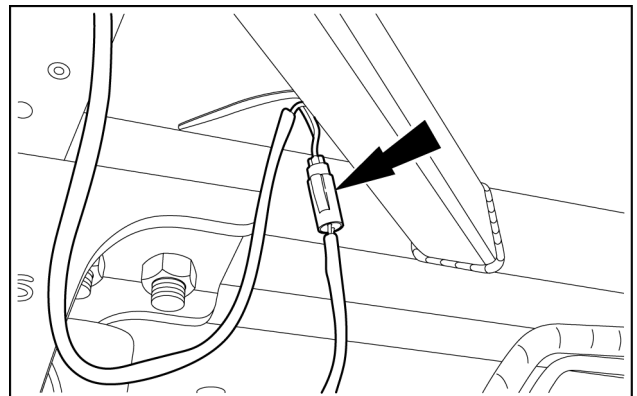

BAIL14TR00280AB 12

13. 1. Disconnect the steering pipes.
2. Disconnect the brake pipe.

NOTE: Mark the hoses to aid installation.

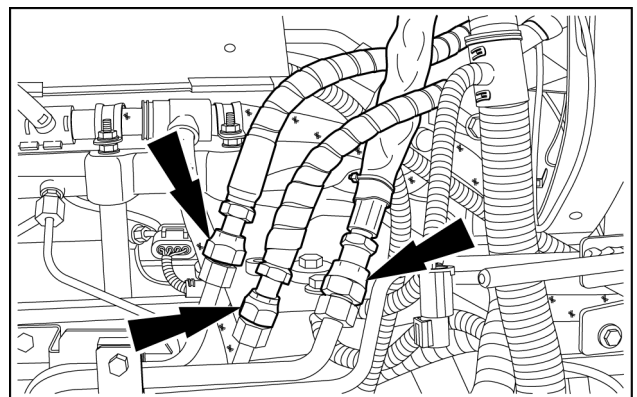

BAIL14TR00281AB 13

Download this document.

Click the link below.

**You can download the most perfect
and complete manual in the world
immediately.**



Click Link Below




Download Now!

[Click Here To Get Instant Access](#)


Thank you so much for reading.

14. Disconnect the ground cables.

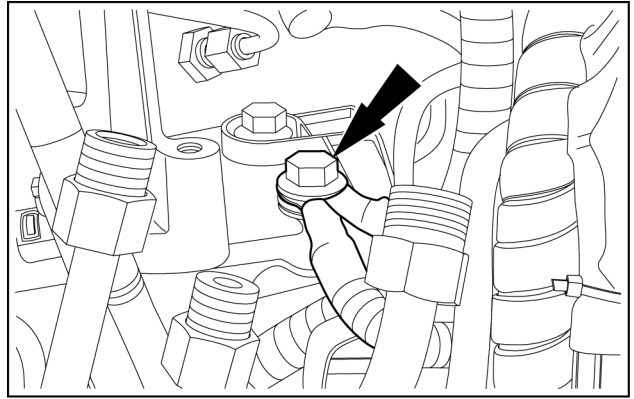


BAIL14TR00282AB 14

15. Disconnect the generator electrical connectors.

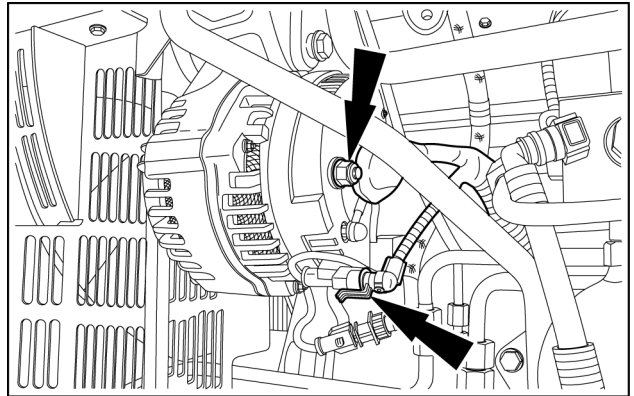


BAIL14TR00283AB 15

16. 1. Disconnect the brake accumulator electrical connector.
2. Disconnect the water-in-fuel sensor electrical connector.

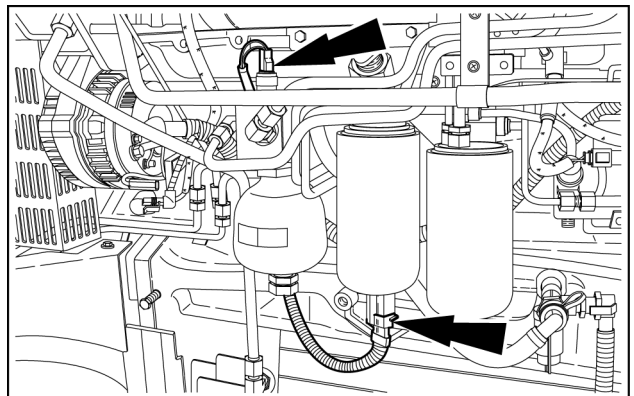

BAIL14TR00284AB 16

17. 1. Disconnect the flywheel speed sensor electrical connector.
2. Disconnect the engine wiring harness.

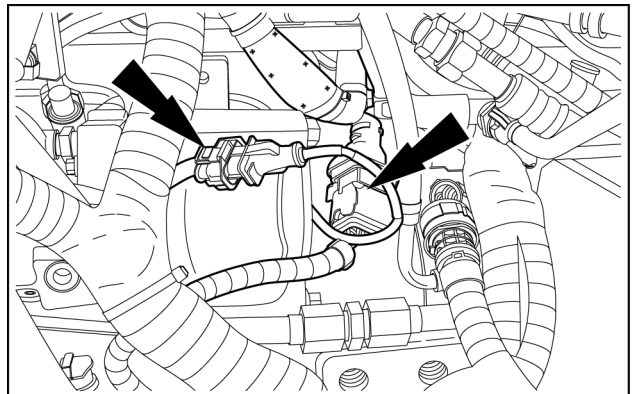

BAIL14TR00285AB 17