Model: D30D ARTICULATED TRUCK 3AJ

Configuration: D25D, D30D ARTICULATED TRUCK 3AJ00415-UP (MACHINE) POWERED BY 3306 ENGINE

Disassembly and Assembly3304B and 3306B Engines for Caterpillar Built Machines

Media Number -SENR5598-09

Publication Date -01/01/2013

Date Updated -25/01/2013

i01003269

Fuel Transfer Pump - Assemble

SMCS - 1256-016

Assembly Procedure

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting and repair of the machine. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, NENG2500, "Caterpillar Tools and Shop Products Guide", for tools and supplies suitable to collect and contain fluids in Caterpillar machines.

Dispose of all fluids according to local regulations and mandates.

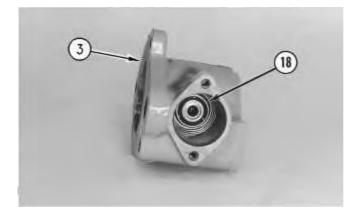


Illustration 1 g00498470

1. Install valve assembly (18) in housing (3).

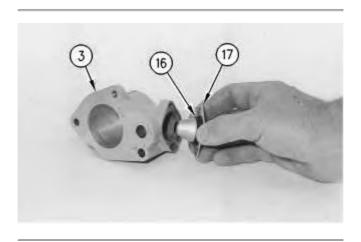


Illustration 2 g00498687

2. Put clean diesel fuel on seal (16). Install seal (16) on cover (17), as shown. Install the two bolts that hold cover (17) to housing (3).

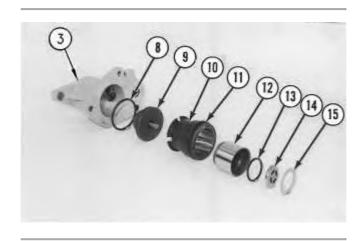


Illustration 3 g00498334

NOTICE

The tappet and guide assembly must be serviced as a unit.

- 3. Put clean diesel fuel on seal (8). Install seal (8) on guide and tappet assembly (9). Install guide and tappet assembly (9) in housing (3).
- 4. Put clean diesel fuel on O-ring seal (11). Put O-ring seal (11) in position on sleeve (10). Install sleeve (10) in housing (3).
- 5. Install piston (12) in sleeve (10).
- 6. Put clean diesel fuel on seal (13). Put seal (13), valve assembly (14) and washer (15) in position in piston (12).


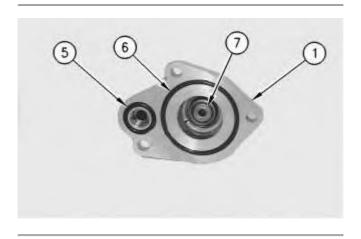


Illustration 4 g00498980

7. Put clean diesel fuel on O-ring seals (5) and (6). Install O-ring seals (5) and (6) in cover (1). Install valve assembly (7) in cover (1).

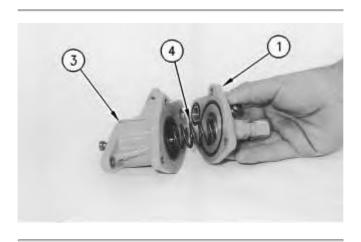

Thank you very much for your reading.

Please click here to buy After you pay.

Then, you can download the complete manual instantly.

No waiting.