

Product: BACKHOE LOADER

Model: 430F BACKHOE LOADER RGS

Configuration: 430F Backhoe Loaders RGS00001-UP (MACHINE) POWERED BY C4.4 Engine

## Disassembly and Assembly 416F, 420F and 430F Backhoe Loaders Machine Systems

Media Number -UENR2321-04

Publication Date -01/01/2014

Date Updated -03/11/2016

i06851396

# Piston Pump - Disassemble - Main Hydraulic

SMCS - 5070-015; 5455


## Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	437-3776	Fixture As.	1
	1U-9128	Adapter Plate	1
	1U-5750	Engine Stand	1
B	9S-9152	Bearing Puller	1

### Start By:

- a. Remove the piston pump (main hydraulic).

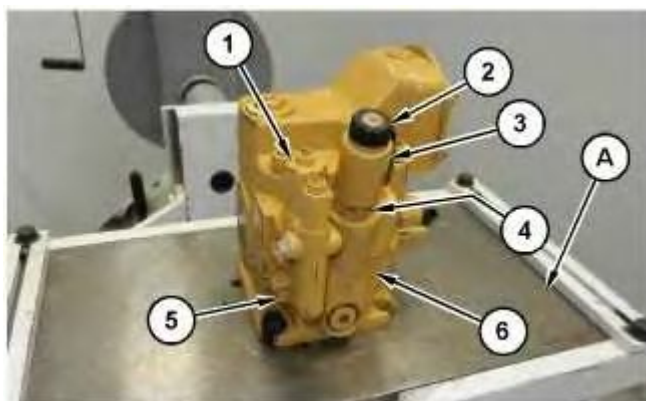



**Sudden release of spring force can cause injury.**

**To prevent the possibility of injury, follow the procedure to relieve the spring pressure.**

1. Secure the piston pump to Tooling (A) or a suitable fixture.
2. Remove nut (2) and the O-ring seal, solenoid (3), and valve (4) from main pump housing (6).
3. Remove bolts (5) and compensator valve (1) from main pump housing (6).

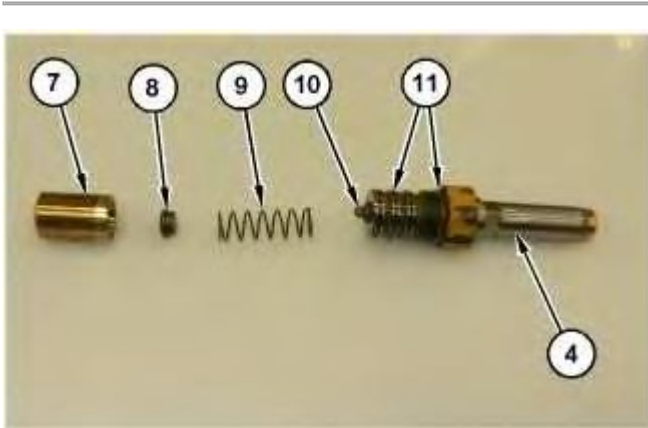


Illustration 2

4. Remove actuator piston (7), spring guide (8), spring (9), spool (10), and O-ring seals (11) from valve (4).

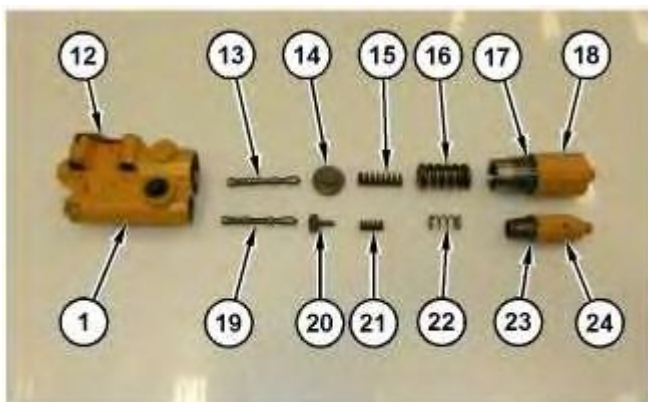


Illustration 3

## **WARNING**

**Sudden release of spring force can cause injury.**

**To prevent the possibility of injury, follow the procedure to relieve the spring pressure.**

---

5. Remove gasket (12) from compensator valve (1).
6. Remove plug (18), O-ring seal (17), spring (16), spring (15), guide (14), and spool (13) from compensator valve (1).
7. Remove plug (24), O-ring seal (23), spring (22), spring (21), guide (20), and spool (19) from compensator valve (1).

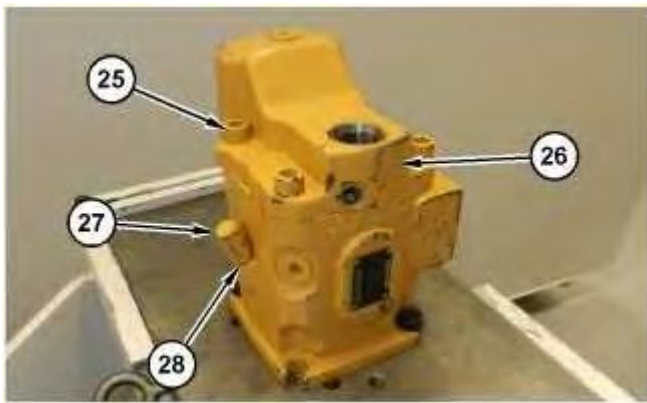


Illustration 4

g06141800

## **WARNING**

**Sudden release of spring force can cause injury.**

**To prevent the possibility of injury, follow the procedure to relieve the spring pressure.**

---

8. Remove cover (27) and the O-ring seal. Remove adjustment screw (28) and the O-ring seal. Remove bolts (25) and head assembly (26).
-

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**