


Onan

**Service
Manual
AT
Switch**

800 through 1750 Amperes

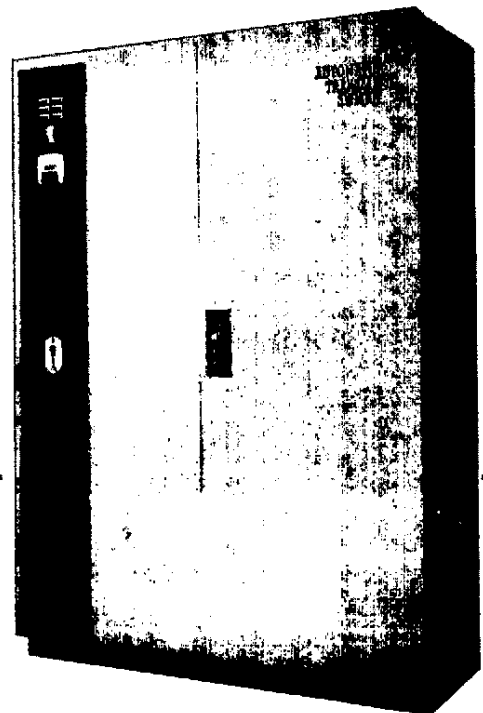

962-0502
9-79
Printed in U.S.A.

SAFETY PRECAUTIONS

This manual includes the following symbols to indicate potentially dangerous conditions to the operator or equipment. Read the manual carefully and know when these conditions exist. Then take the necessary steps to protect personal and the equipment.

WARNING Onan uses this symbol throughout this manual to warn of possible serious personal injury.

CAUTION This symbol refers to possible equipment damage.

The automatic transfer switch has components with high voltages which present serious shock hazards. For this reason, read the following suggestions:

Keep the automatic transfer switch cabinet(s) closed and locked. Make sure authorized personnel only have the cabinet keys.

Always move the operation selector switch on the generator set or automatic transfer switch to STOP,

disconnect the starting batteries of the generator set, and remove AC line power to the automatic transfer switch before performing maintenance or adjustments (unless specified otherwise in the instructions—then only using extreme caution due to danger of shock hazard).

Before using the disconnect plug, if equipped, for de-energizing the control panel, be sure to place the operation selector switch on the generator set or automatic transfer to the STOP position. Neglect of this procedure results in set starting and energization of the transfer switch generator side.

Use rubber insulative mats placed on dry wood platforms over floors which are metal or concrete when working on any electrical equipment. Do not wear damp clothing (particularly wet shoes) or allow skin surfaces to be damp when handling any electrical equipment.

Jewelry is a good conductor of electricity and should be removed when working on the electrical equipment.

Do not work on this equipment when mentally or physically fatigued.

WARNING

TO AVOID POSSIBLE PERSONAL INJURY OR EQUIPMENT DAMAGE, AN AUTHORIZED SERVICE REPRESENTATIVE MUST PERFORM ALL SERVICE.

TABLE OF CONTENTS

GENERAL INFORMATION	2
Onan Service Manual	2
Model Number System	2
OPERATION DESCRIPTION	4
AT's with Control Accessory Groups 10-15 and 20-25	5
AT's with Control Accessory Groups 51-55	10
MODIFICATIONS.....	19
Changing Three-Phase to Single-Phase	19
Changing Meter-Lamp Panel	20
Changing Control Accessory Panel	20
Changing Control Accessory Panel AC System Voltage	22
Changing Control Accessory Panel DC System Voltage	24
Two to Three Wire Start Conversion (12 Volts)	26
Three to Two Wire Start Conversion (12 Volts)	26
Adding Module to Control Accessory Panel.....	26
ADJUSTMENTS	28
Latch and Latch Pin Adjustment	28
Exerciser Clock	29
AC Voltage Sensor	30
Undervoltage Sensor Calibration.....	30
Overvoltage Sensor Calibration	32
Undervoltage Sensor Settings	33
Overvoltage Sensor Settings.....	33
Battery Float Charge	33
Battery Voltage Sensor Alarm Settings	34
High Battery Voltage Alarm Settings	34
Low Battery Voltage Alarm Settings	34
Overcrank Time (AT-E Only)	35
Programmed Transition	35
Time Delays	36
Time Delays of Control Accessory Groups 10-15 and 20-25	36
Time Delays of Control Accessory Groups 51-55	39
TRANSFER SWITCH.....	40
TROUBLESHOOTING	42
Index for AT's with Control Panel Groups 10-15 and 20-25	42
Index for AT's with Control Panel Groups 51-55	69

GENERAL INFORMATION

ONAN SERVICE MANUAL

This manual contains operation descriptions of typical AT transfer switches, modifications, adjustments, and troubleshooting procedures. Whenever troubleshooting or planning a repair for an AT automatic transfer switch, remember the generator set, automatic transfer switch and commercial power source are all interdependent. Decide which is the source of the problem and then repair

using necessary and normal safety precautions. Note **WARNING** on inside the front cover of this service manual which states that "... a qualified electrician or an authorized service representative must perform all service."

Throughout the text, front of the automatic transfer switch is the door side. Determine left and right when facing the cabinet doors. Metric equivalents of U.S. customary units will appear in parentheses where applicable.

MODEL NUMBER SYSTEM

Following is a typical model number with explanations of the different parts.

<u>A</u> T	<u>U</u>	<u>C</u>	<u>D</u>	<u>800</u>	-	<u>4X</u>	/	<u>1110</u>	<u>C</u>
1	2	3	4	5		6		7	8 9

1. Series Identification

2. Transfer Switch Type

U—3-pole transfer switch, UL listed
S—3-pole transfer switch, special or CSA approved

3. Starting Circuit

C—2-wire, 24-volt
D—2-wire, 12-volt
E—3-wire, 12-volt

4. Transfer Switch and Cabinet Combinations

5. Current Rating (amperes)

6. Voltage Code

3 —120/240, 1-phase, 3-wire
4 —120/208, 3-phase, 4-wire
4X—277/480, 3-phase, 4-wire
5D—120/240, 3-phase, 4-wire delta
7 —220/380, 3-phase, 4-wire
9X—347/600, 3-phase, 4-wire

Voltage code with prefix "5" indicates 50 hertz; e.g. 53 indicates 50 hertz, 120/240 volts, 1-phase, 3-wire.

(continued on next page)

BUY NOW

**Then Instant Download
the Complete Manual
Thank you very much!**