- 5. Carefully remove final drive (1). The weight of final drive (1) and the sprocket is approximately 312 kg (688 lb).
- 6. Remove Tooling (C) from the frame.

Disassembly Procedure

Table 4

| Required Tools | | | |
|----------------|-------------|---------------------------|-----|
| Tool | Part Number | Part Description | Qty |
| A | 1P-2420 | Transmission Repair Stand | 1 |
| В | 439-3938 | Link Bracket | 2 |
| С | 1P-1863 | Retaining Ring Pliers | 1 |
| D | 439-3940 | Bracket As | 3 |
| Е | 4C-8359 | Eyebolt | 2 |
| F | 439-3939 | Link Bracket As | 2 |
| G | 439-3941 | Link Bracket As | 2 |

Start By:

a. Remove the final drive.

Note: Cleanliness is an important factor. Before the disassembly procedure, the exterior of the component should be thoroughly cleaned. This will prevent dirt from entering the internal mechanism.

1. Put an alignment mark across the sections of the final drive for assembly purposes. The parts must be reinstalled to the original locations.

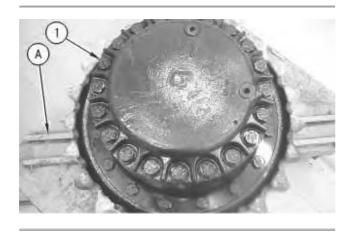


Illustration 7 g00892878

- 2. Use Tooling (G) and a suitable lifting device to position the final drive assembly onto Tooling (A). The weight of the final drive assembly is approximately 550 kg (1200 lb).
- 3. Remove bolts (1).

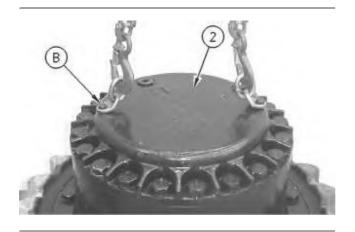


Illustration 8 g00892883

4. Use Tooling (B) and a suitable lifting device to remove cover (2). The weight of cover (2) is approximately 32 kg (70 lb).

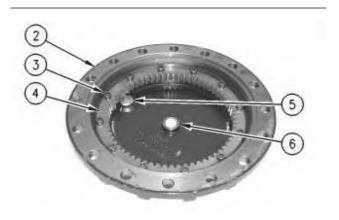


Illustration 9 g00892888

5. Remove bolts (3) and gear (4). Check plate (6). Replace plate (6) if plate (6) is worn. Remove plugs (5) from cover (2).

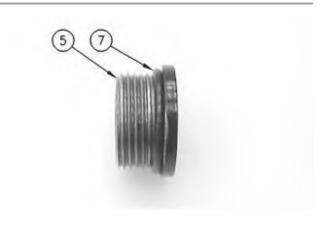


Illustration 10 g00892906

6. Remove O-ring seals (7) from plugs (5).

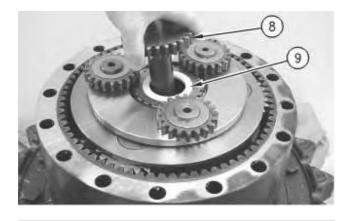


Illustration 11 g00892930

7. Remove gear (8) and spacer (9).



Illustration 12 g00892965

- 8. Use Tooling (C) to remove retaining ring (10). Remove washer (11) and gear (12). Remove bearing assembly (13) and washer (14).
- 9. Repeat Step 8 for the other two gear assemblies.



Illustration 13 g00892968

10. Remove retaining ring (15).

Thank you very much for your reading. Please click here to buy After you pay. Then, you can download the complete manual instantly.

No waiting.