

Product: BACKHOE LOADER

Model: 420F2 BACKHOE LOADER LBS

Configuration: 420F2 Center Pivot Backhoe Loader LBS00001-UP (MACHINE) POWERED BY 3054C, C4.4 Engine

## Disassembly and Assembly 3054C Engines for Caterpillar Built Machines

Media Number -SEN5069-18

Publication Date -01/05/2015

Date Updated -19/09/2018

i02293555

## Flywheel - Remove

SMCS - 1156-011

## Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	-	Guide Bolt (1/2 inch - 20 NF by 4 inch)	2
B	138-7575	Link Bracket	1

---

### NOTICE

**Keep all parts clean from contaminants.**

**Contaminants may cause rapid wear and shortened component life.**

---

---

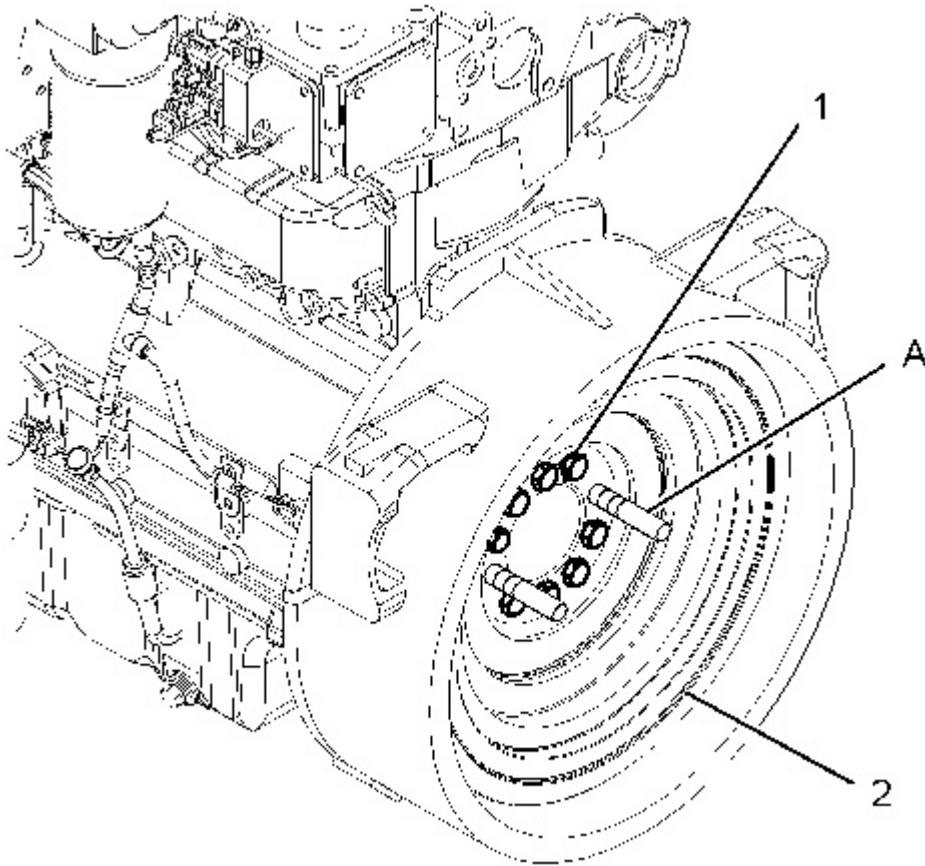


Illustration 1


g01148312

Typical example

1. Remove the two setscrews and install the Tooling (A) as guides.

**Note:** The weight of the flywheel (2) is approximately 54 kg (119 lb). Install the Tooling (B) in order to support the flywheel (2) before the remainder of the setscrews (1) are removed.

2. Remove the remaining setscrews (1) that secure flywheel (2) to the crankshaft.
3. Remove the flywheel (2) from the engine.

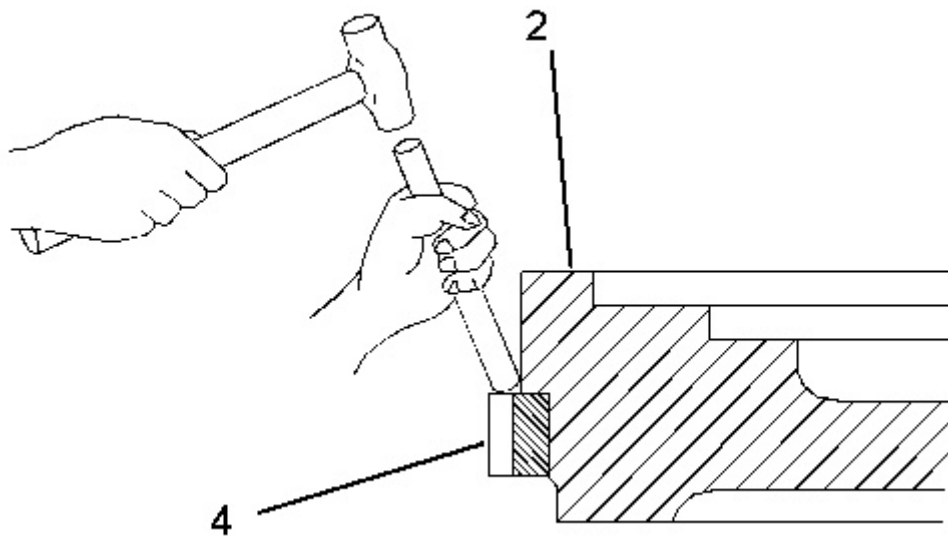

---

Illustration 2

g01148313

4. Check the condition of the ring gear (4). Remove the ring gear (4) if the ring gear is worn or damaged.

**Note:** Identify the orientation of the ring gear (4) on the flywheel (2) and the position of the chamfer on the teeth for the correct positioning when the new ring gear is installed.

5. Place the flywheel (2) and the ring gear (4) on a suitable support. Use a hammer and a chisel in order to remove the ring gear (4) from the flywheel (2).
-

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then,           you           can  
download the complete  
manual instantly.  
No waiting.**